



1 TOYOTA TACOMA

TOYOTA TACOMA (EM03N0U)

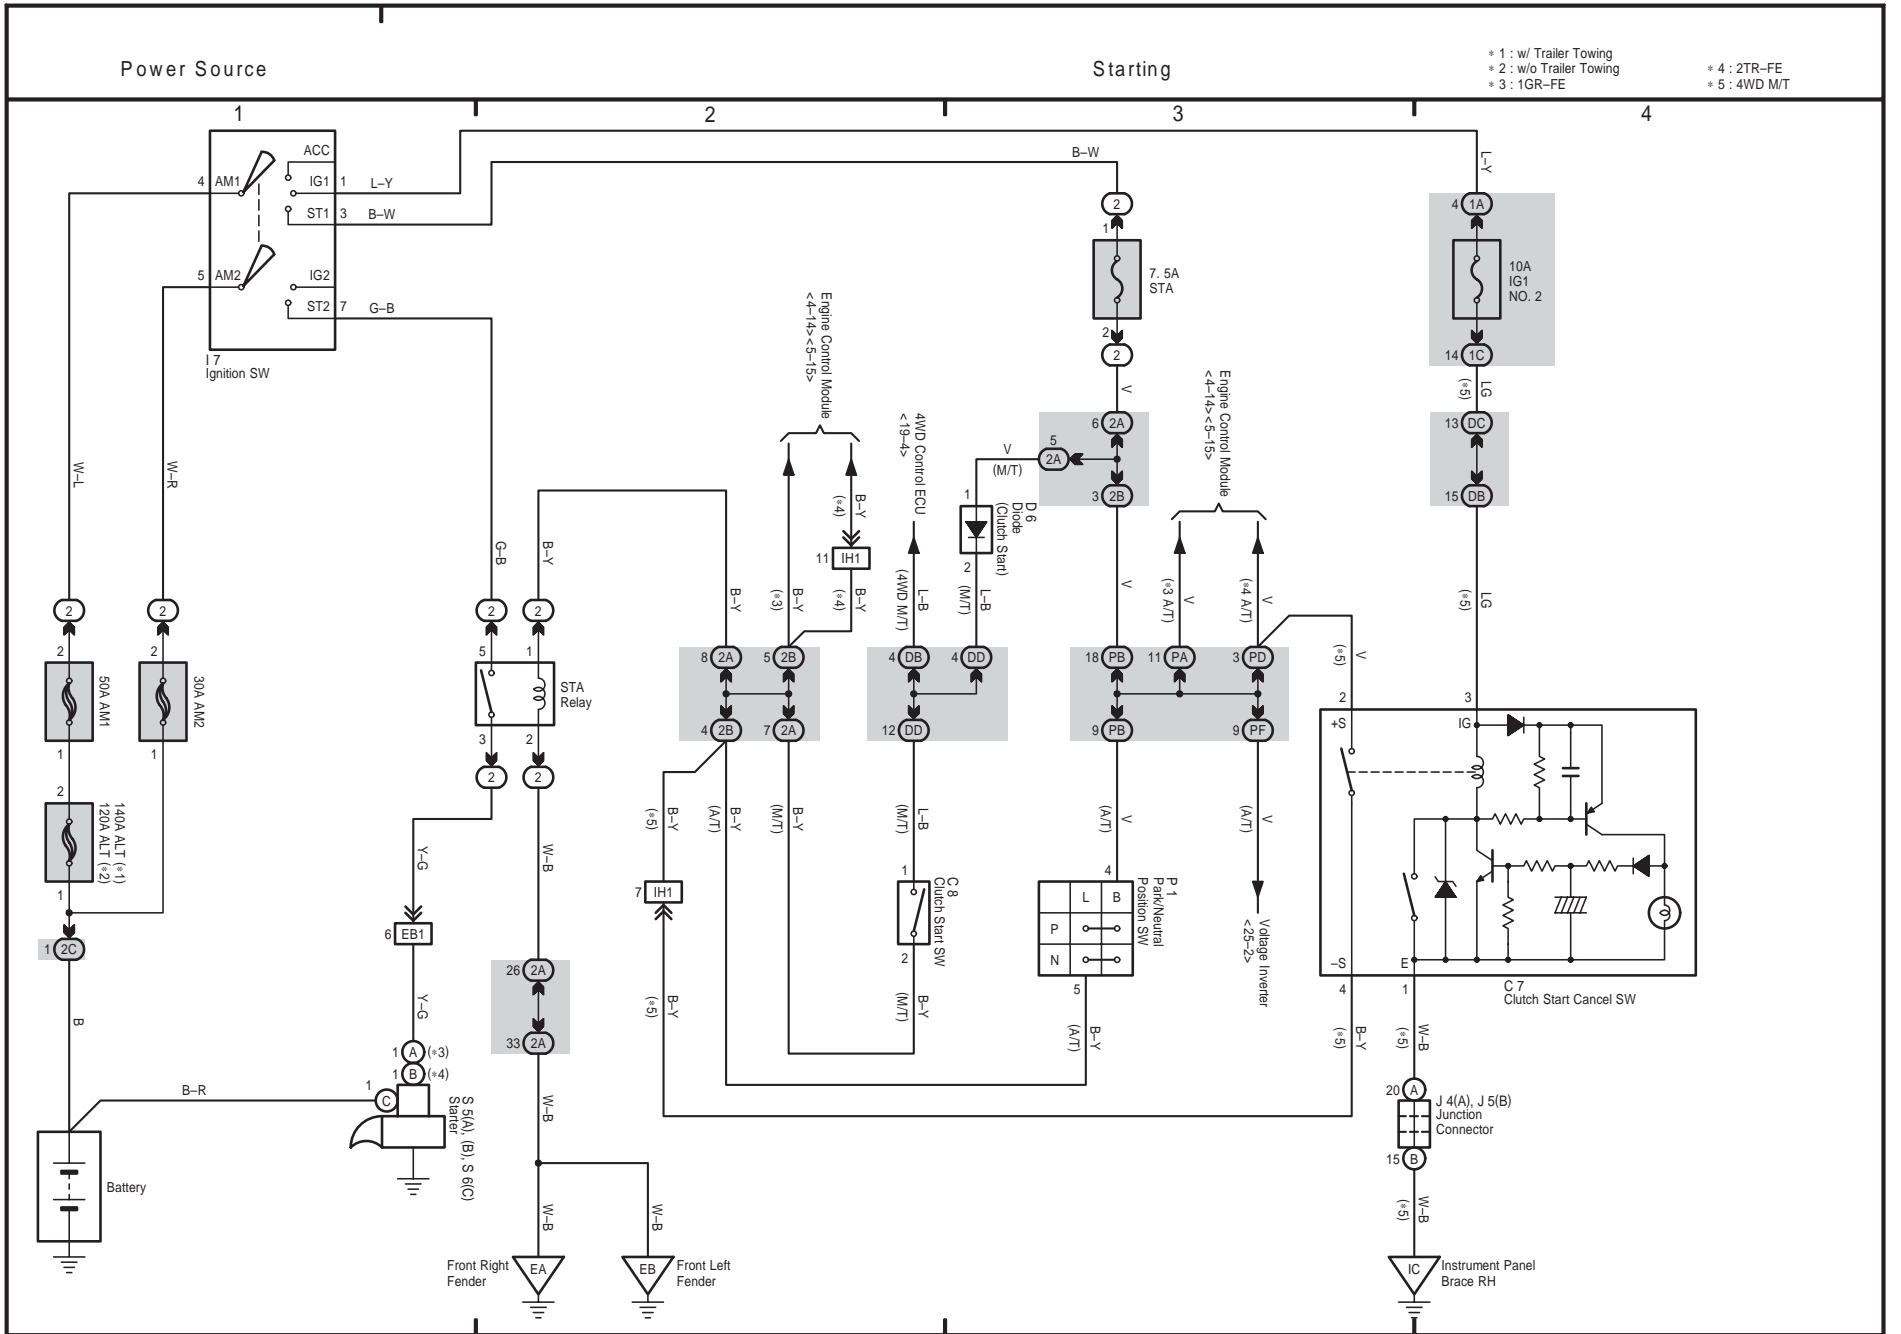


2 TOYOTA TACOMA

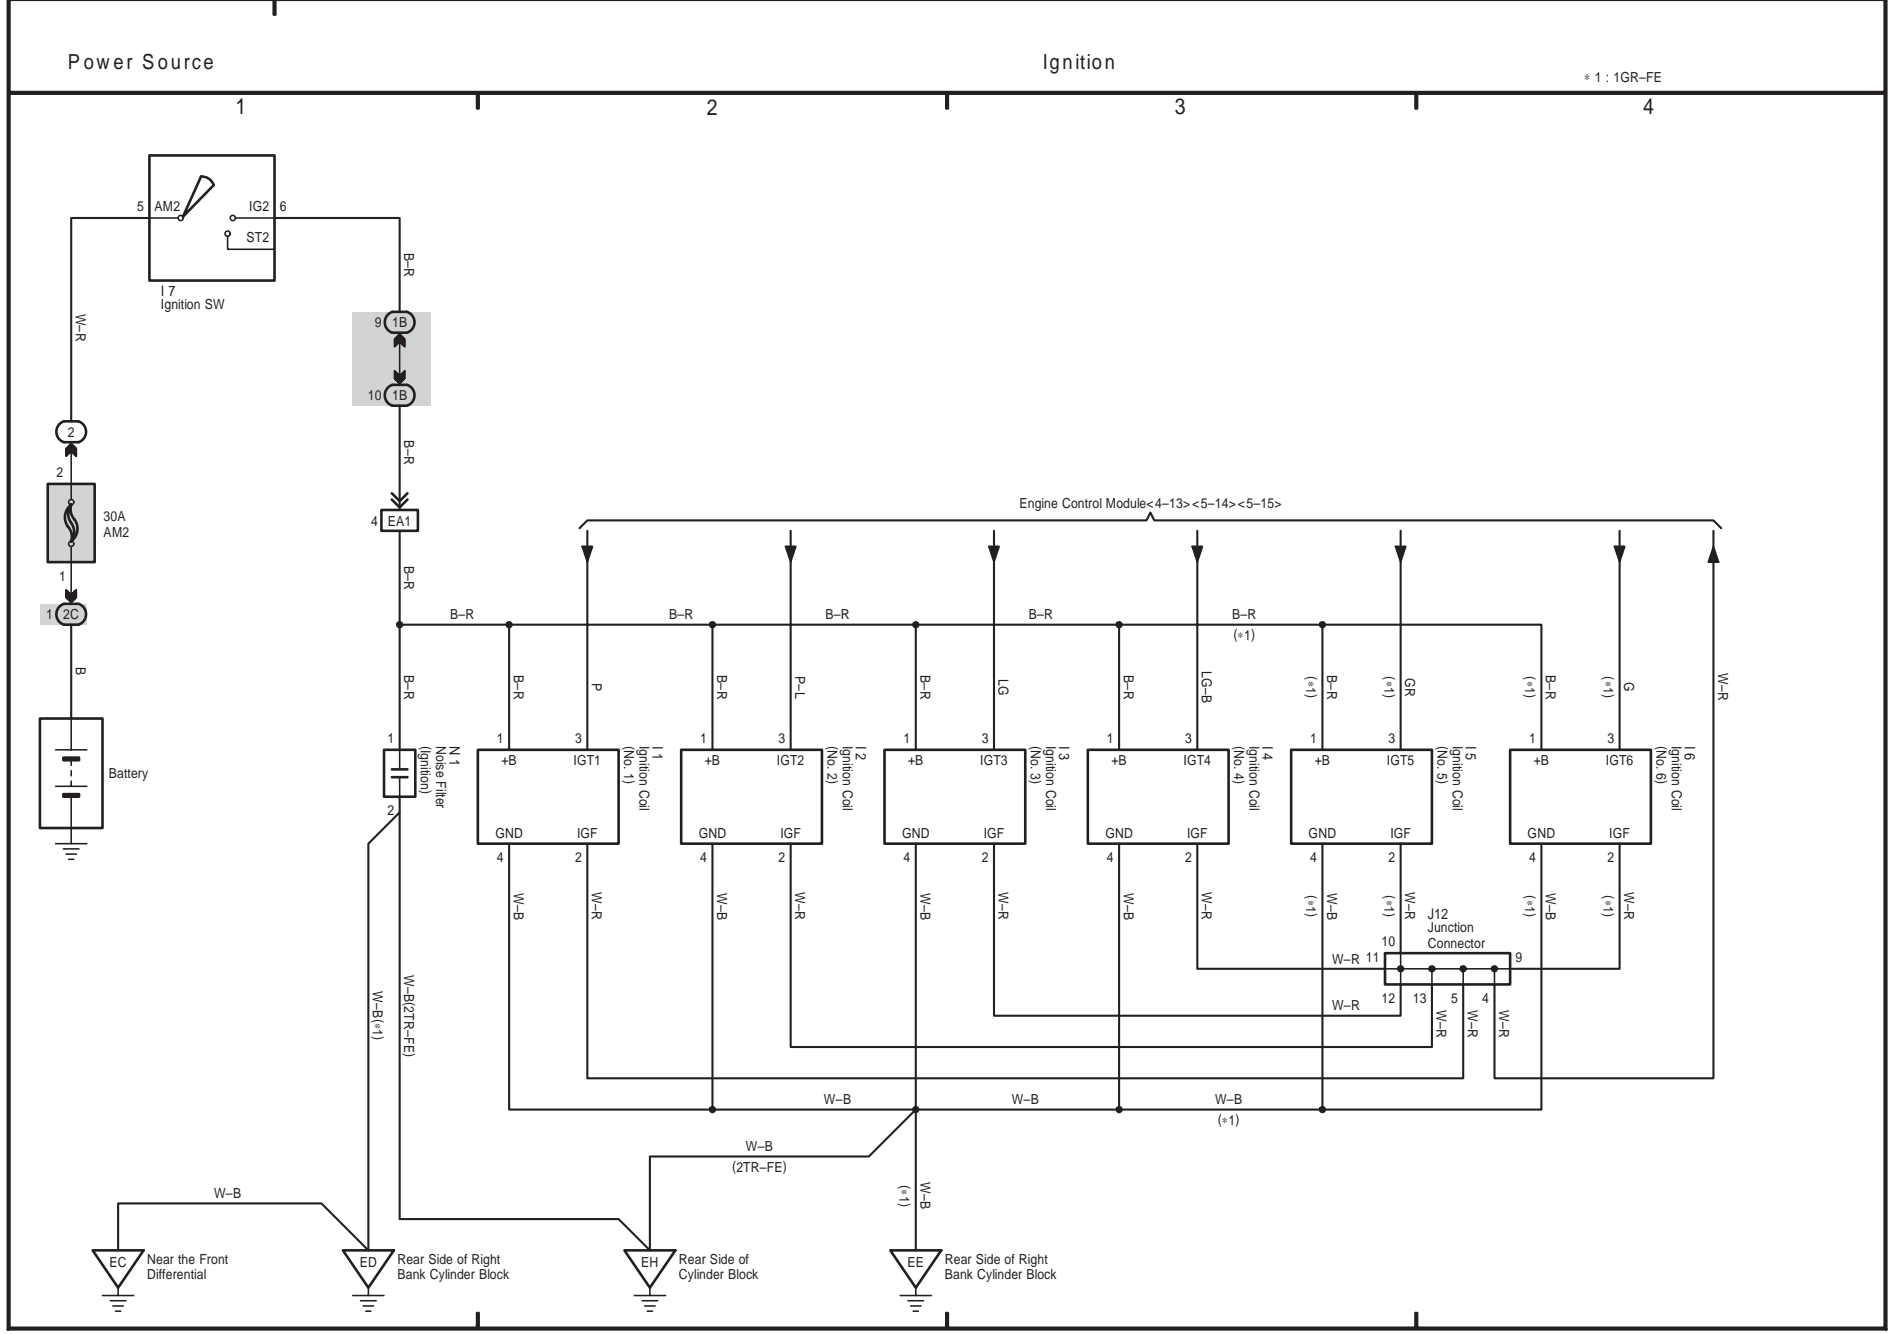


3 TOYOTA TACOMA

TOYOTA TACOMA (EM03N0U)

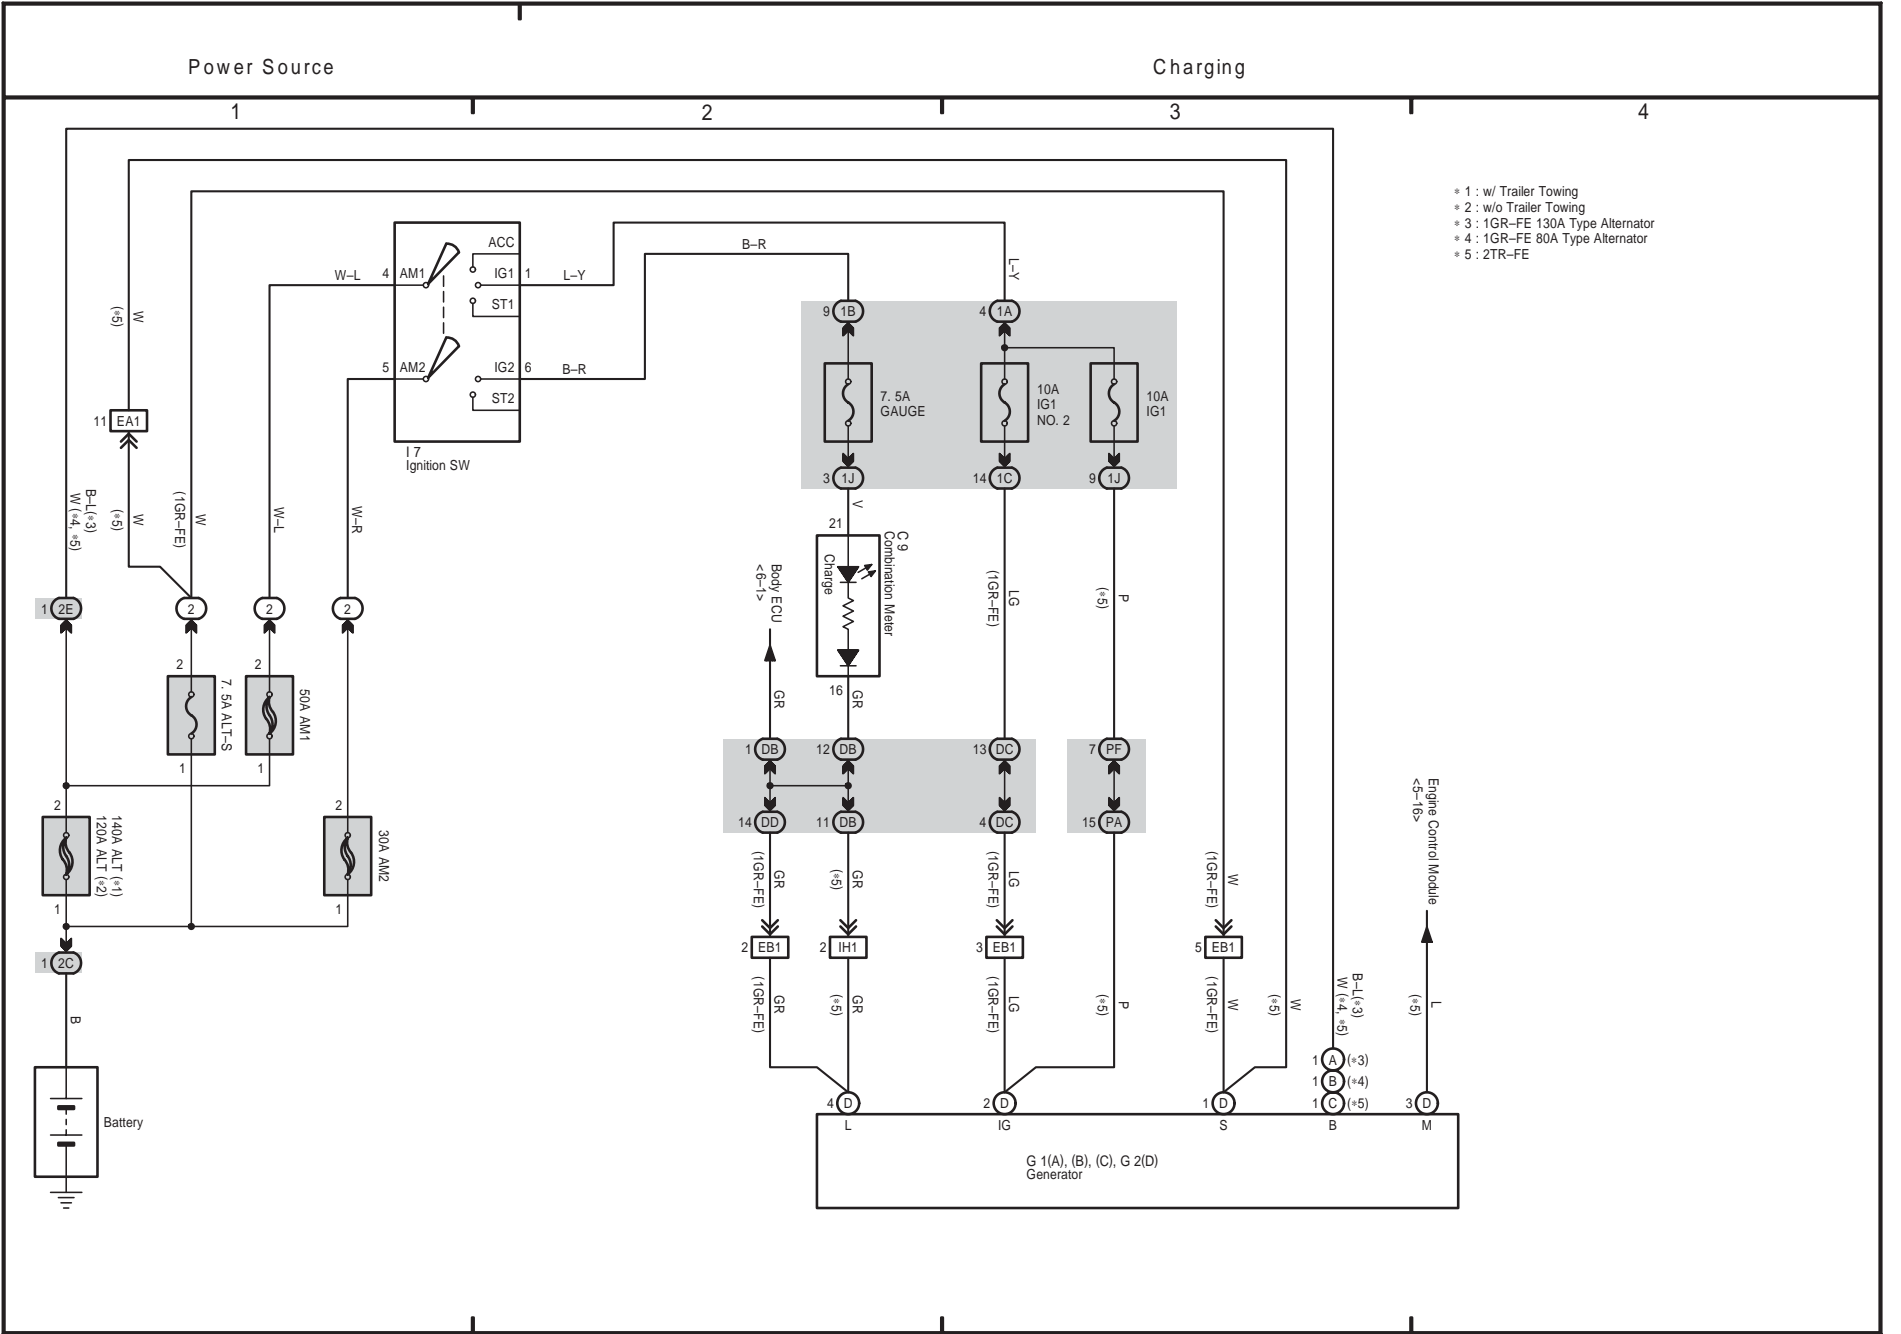


4 TOYOTA TACOMA

(Cont. next page)

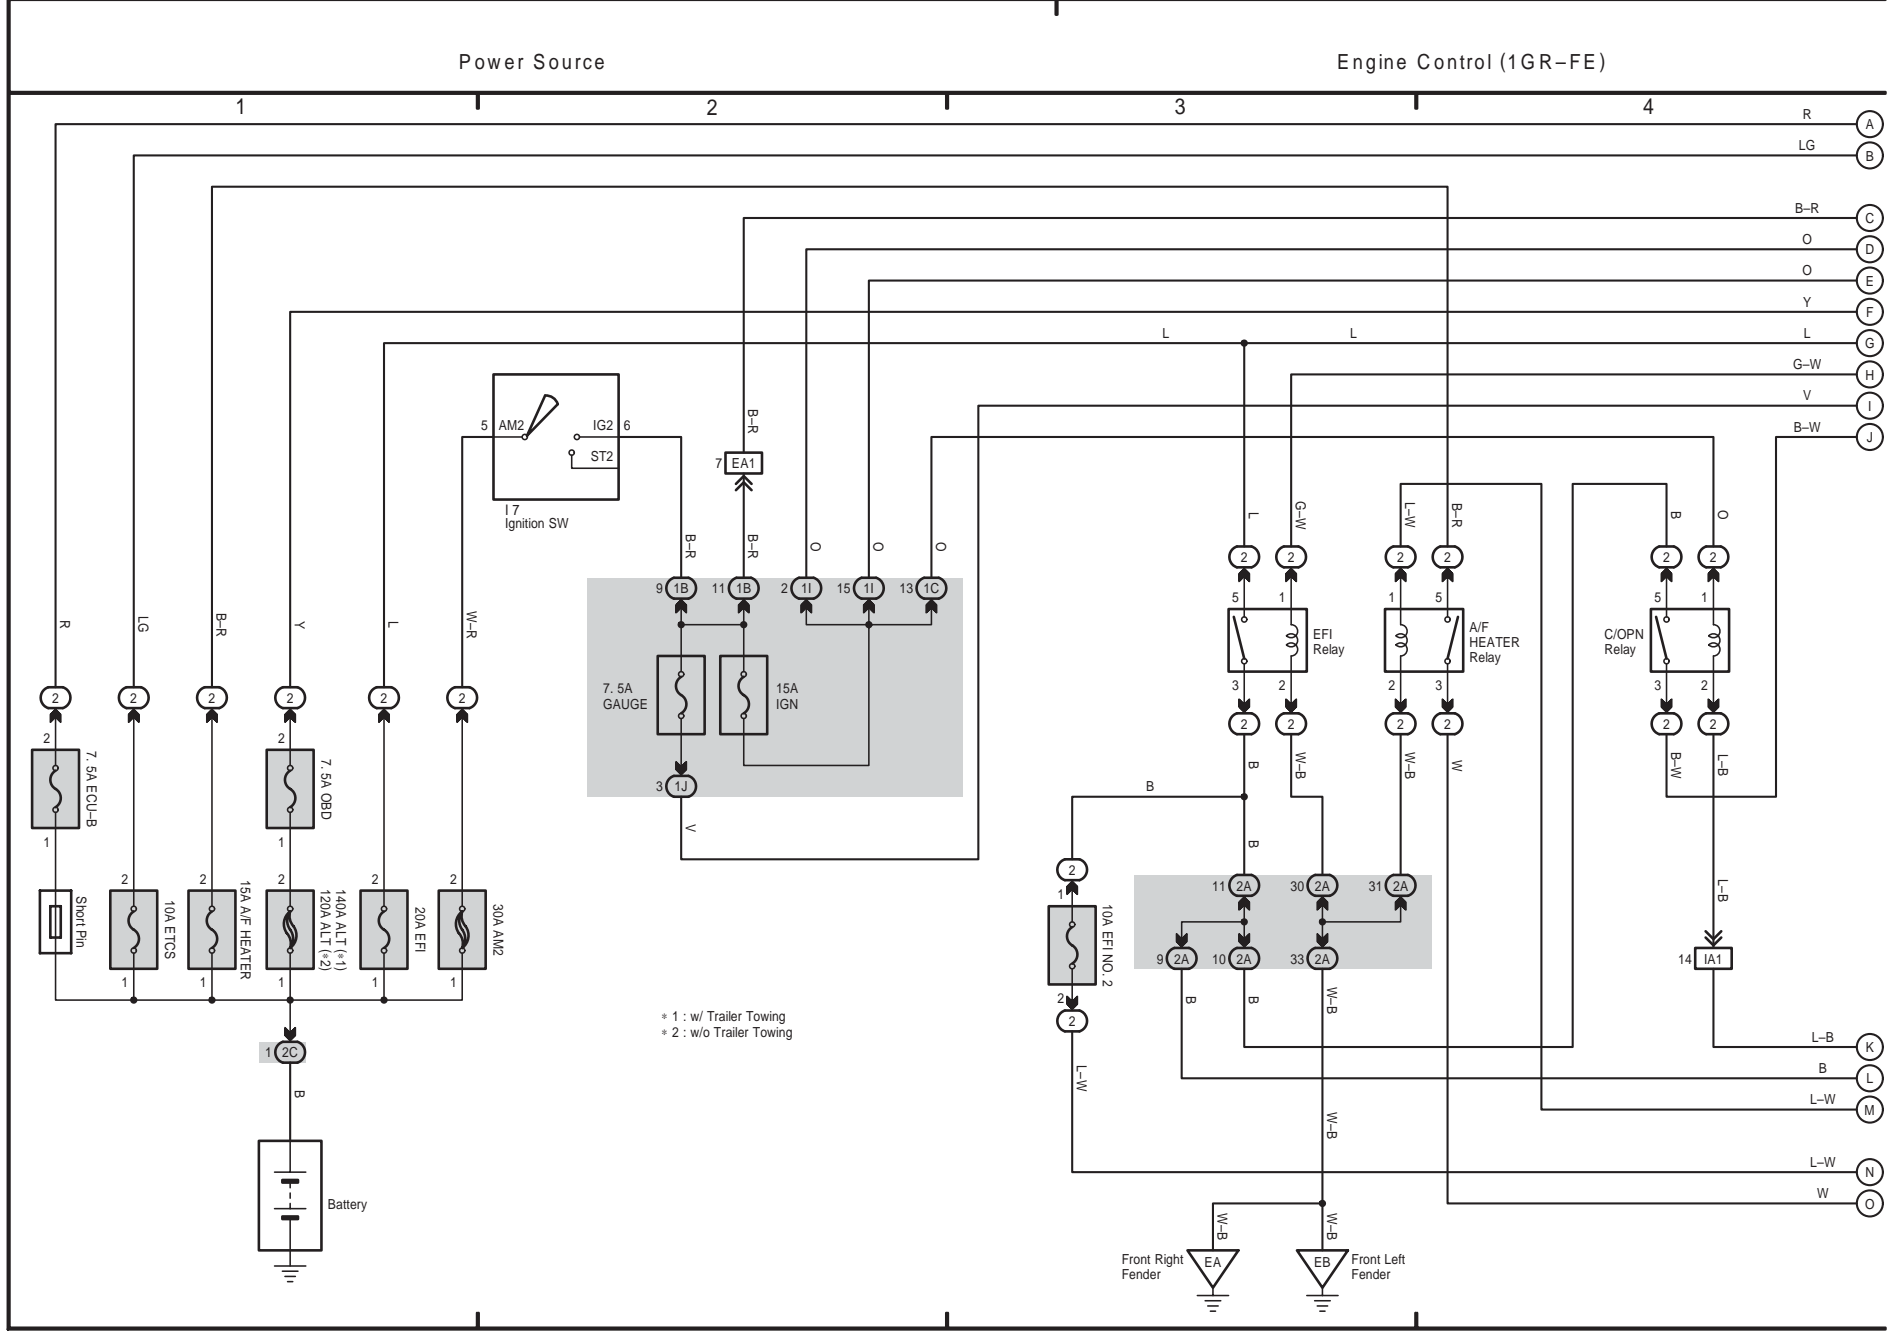

Engine Control (1GR-FE)


* 3 : Malfunction Indicator Lamp

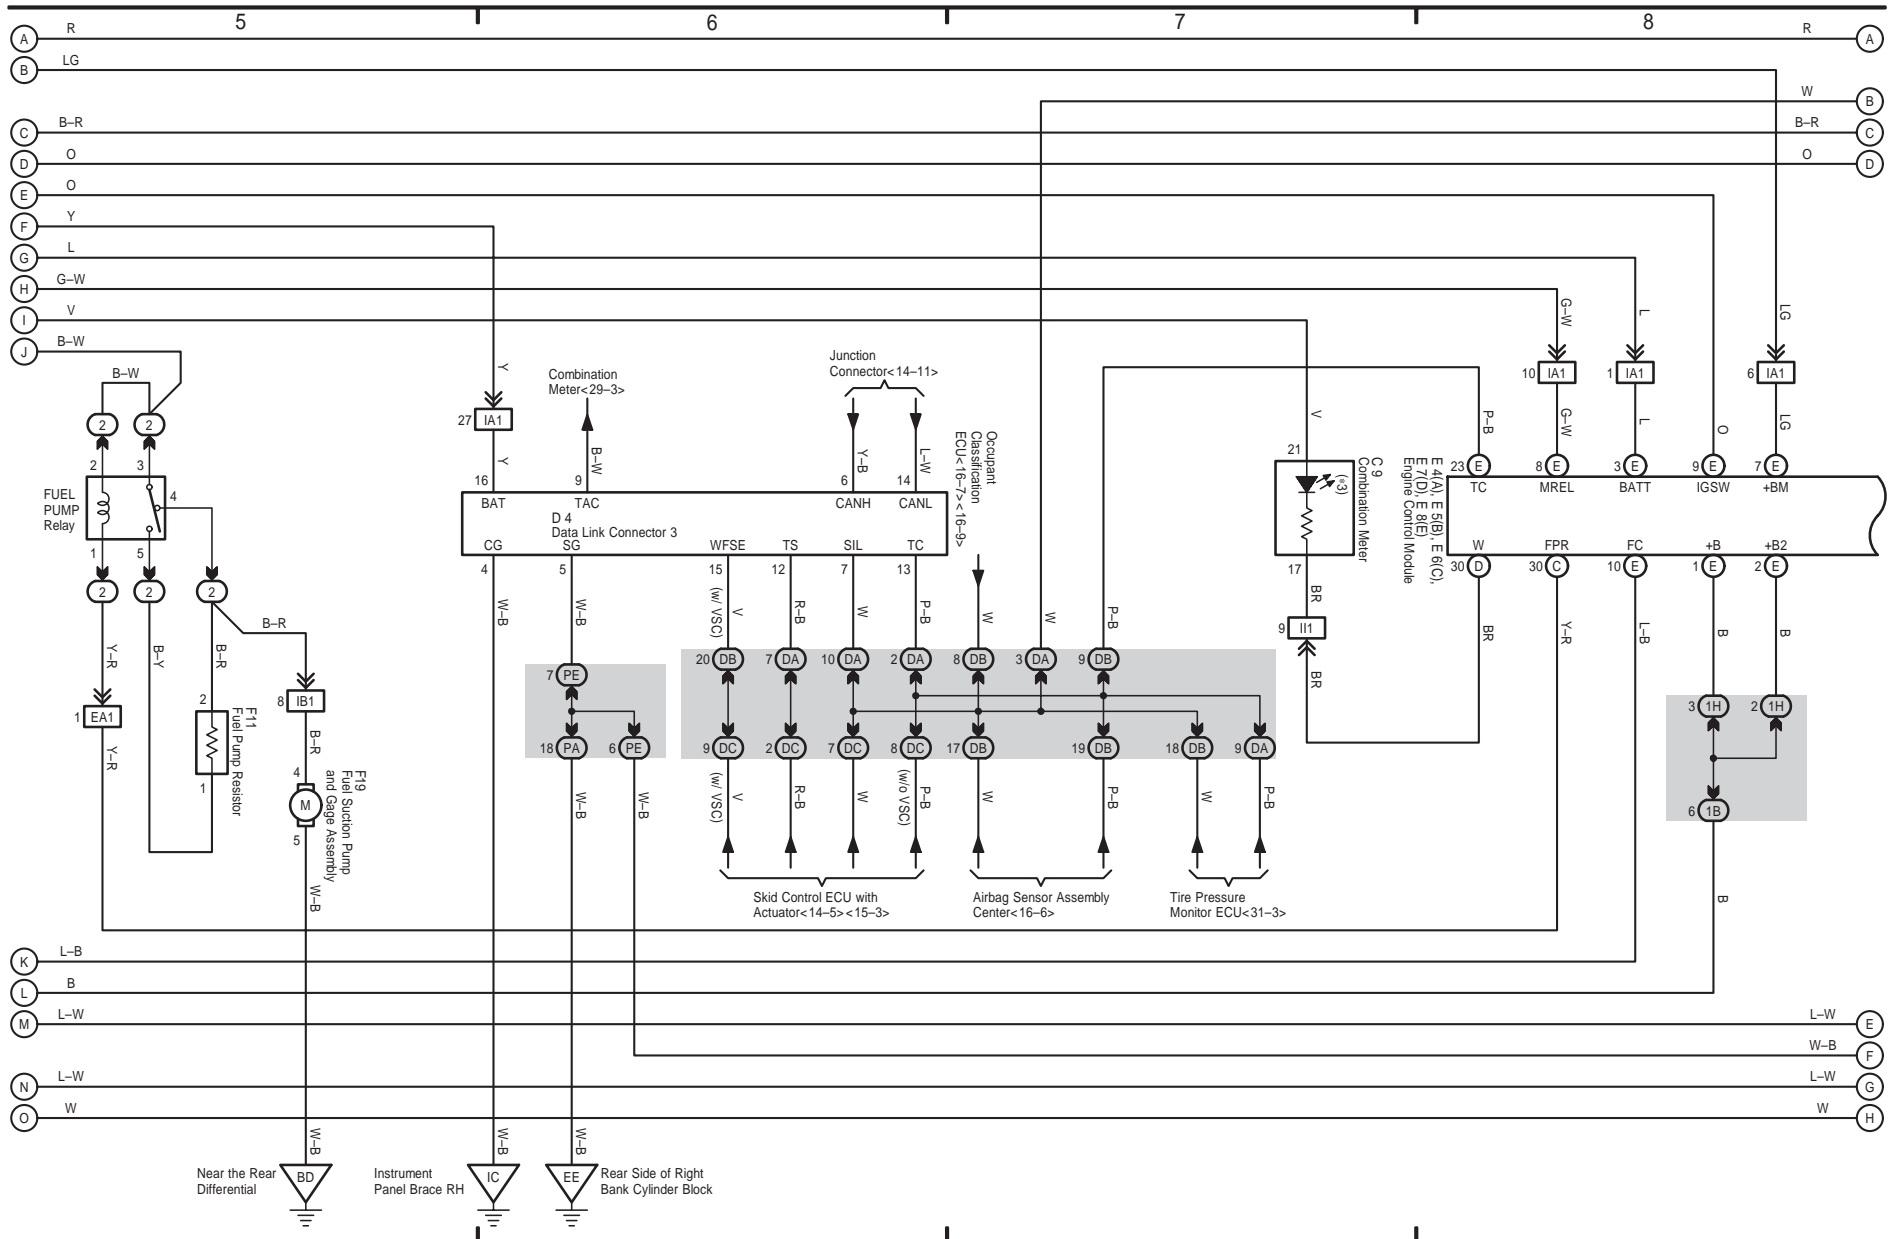

TOYOTA TACOMA (EM03N0U)




Engine Control (1GR-FE)

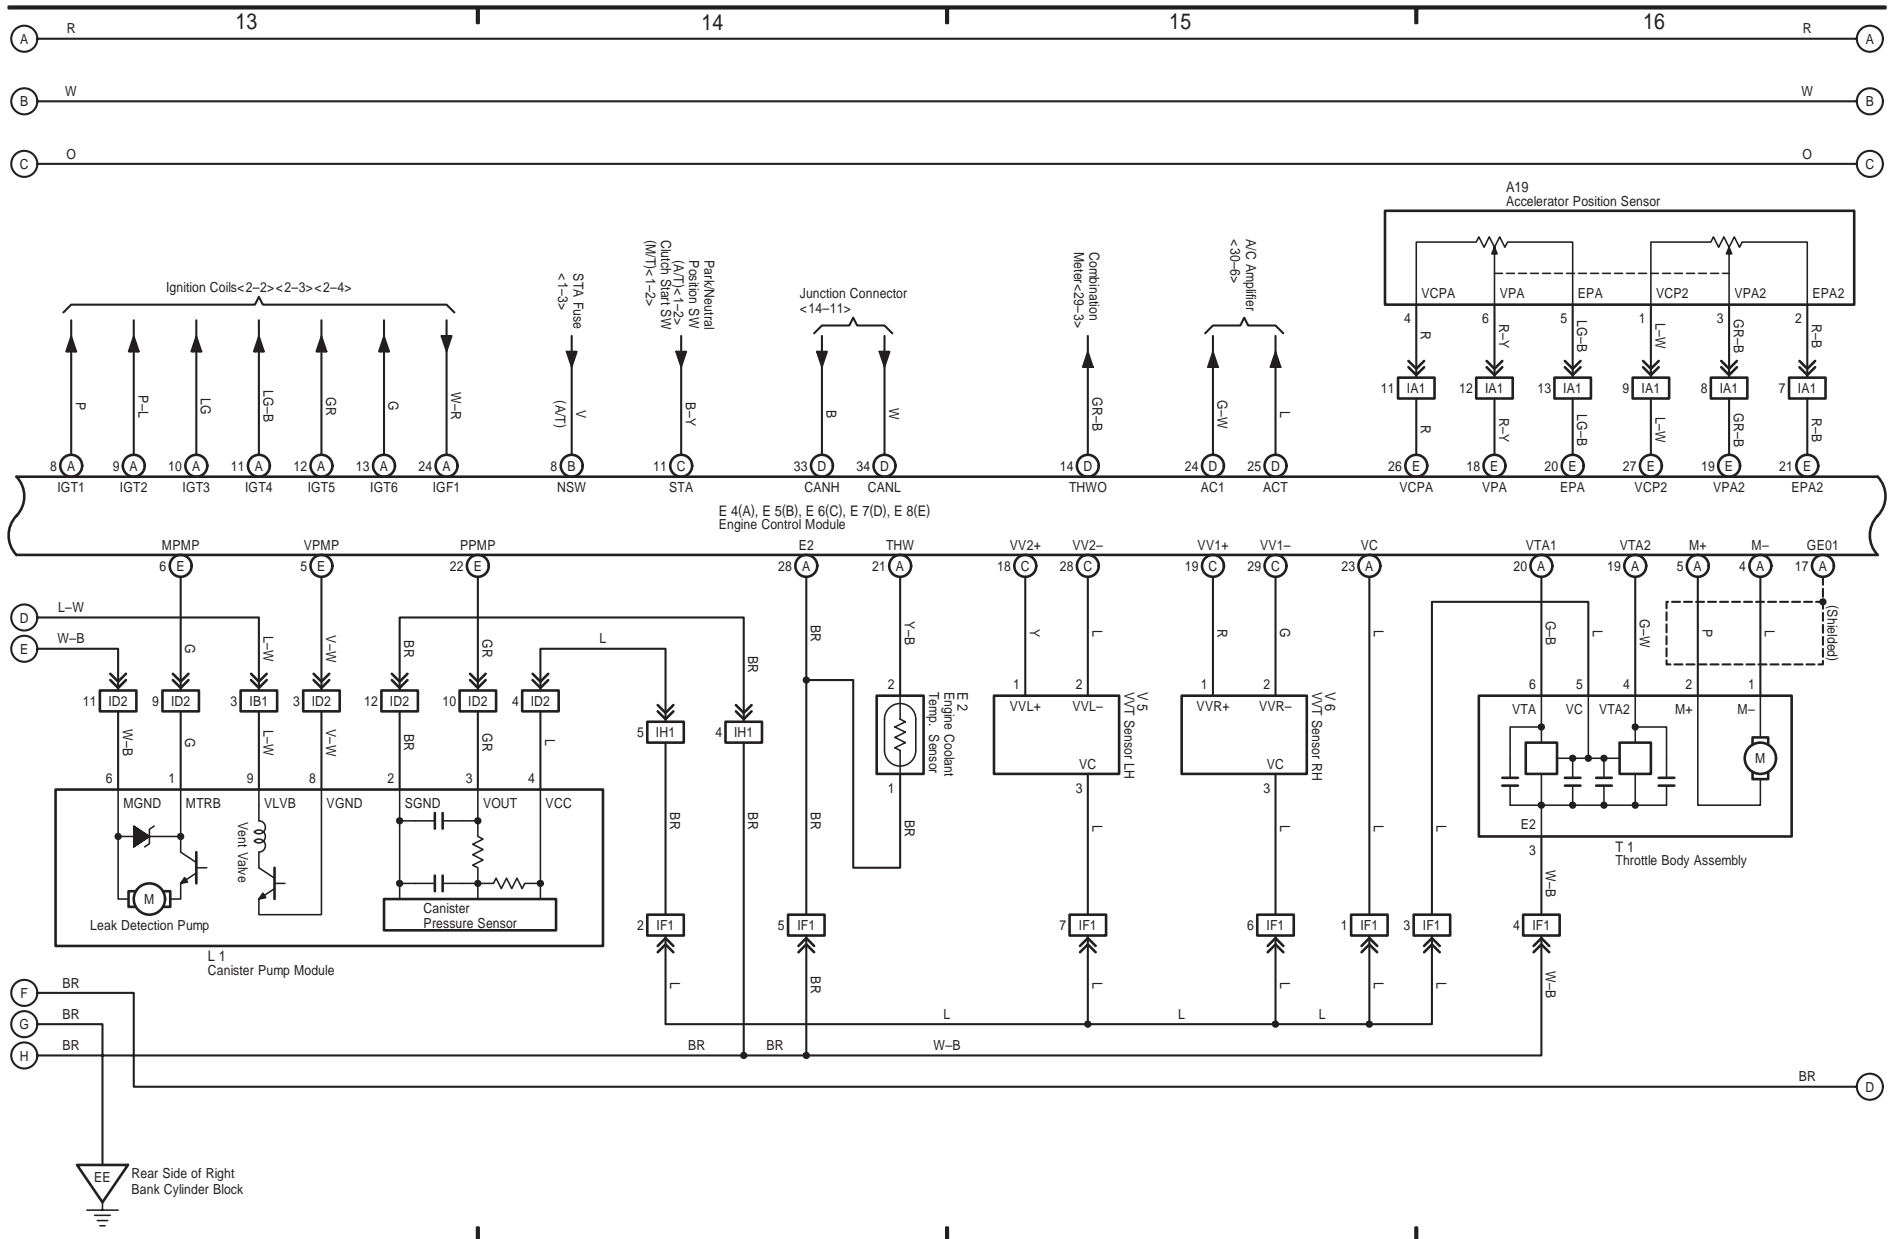

TOYOTA TACOMA (EM03N0U)




4 TOYOTA TACOMA (Cont' d)

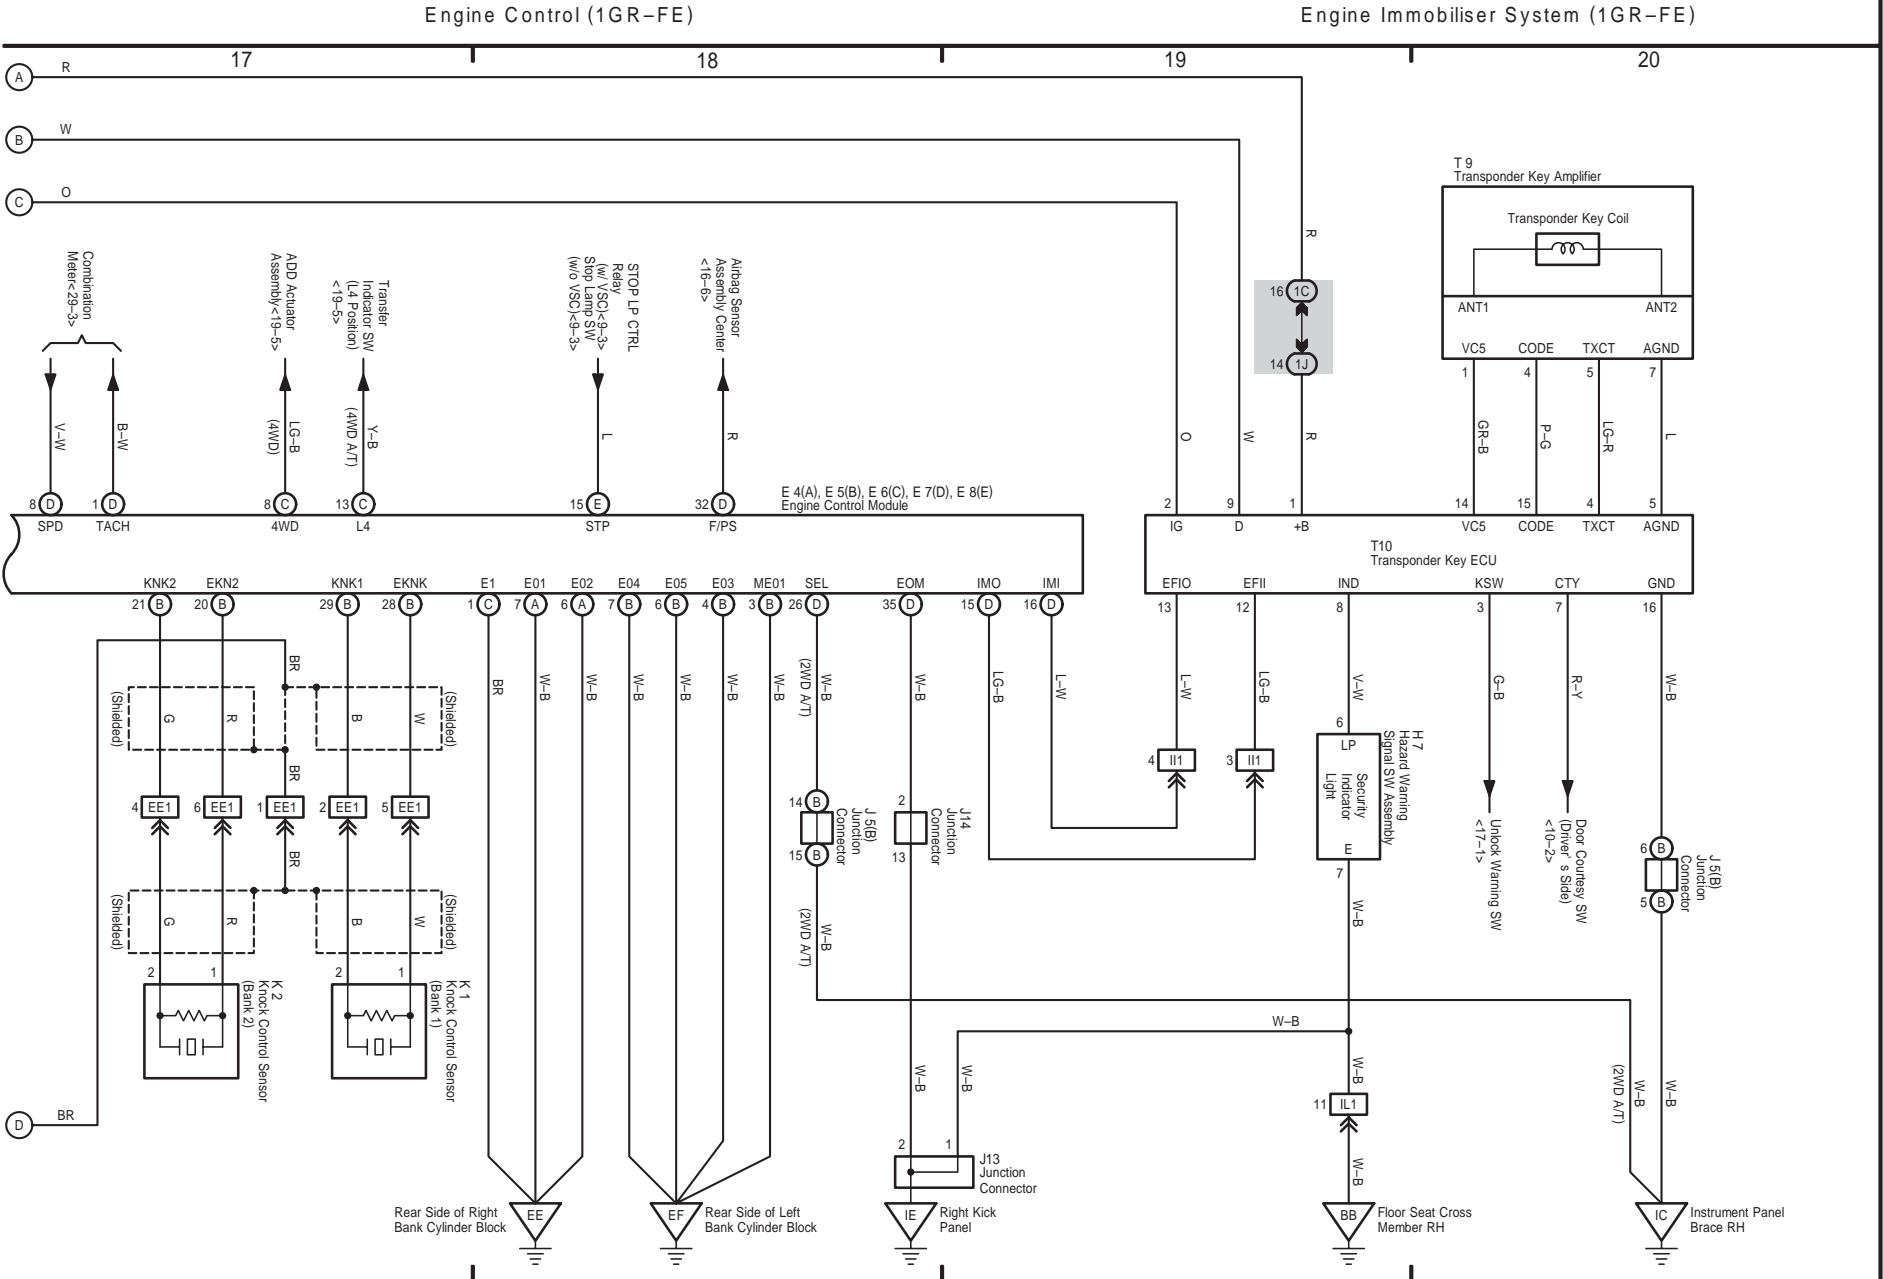

Engine Control (2TR-FE)


* 1 : Malfunction Indicator Lamp

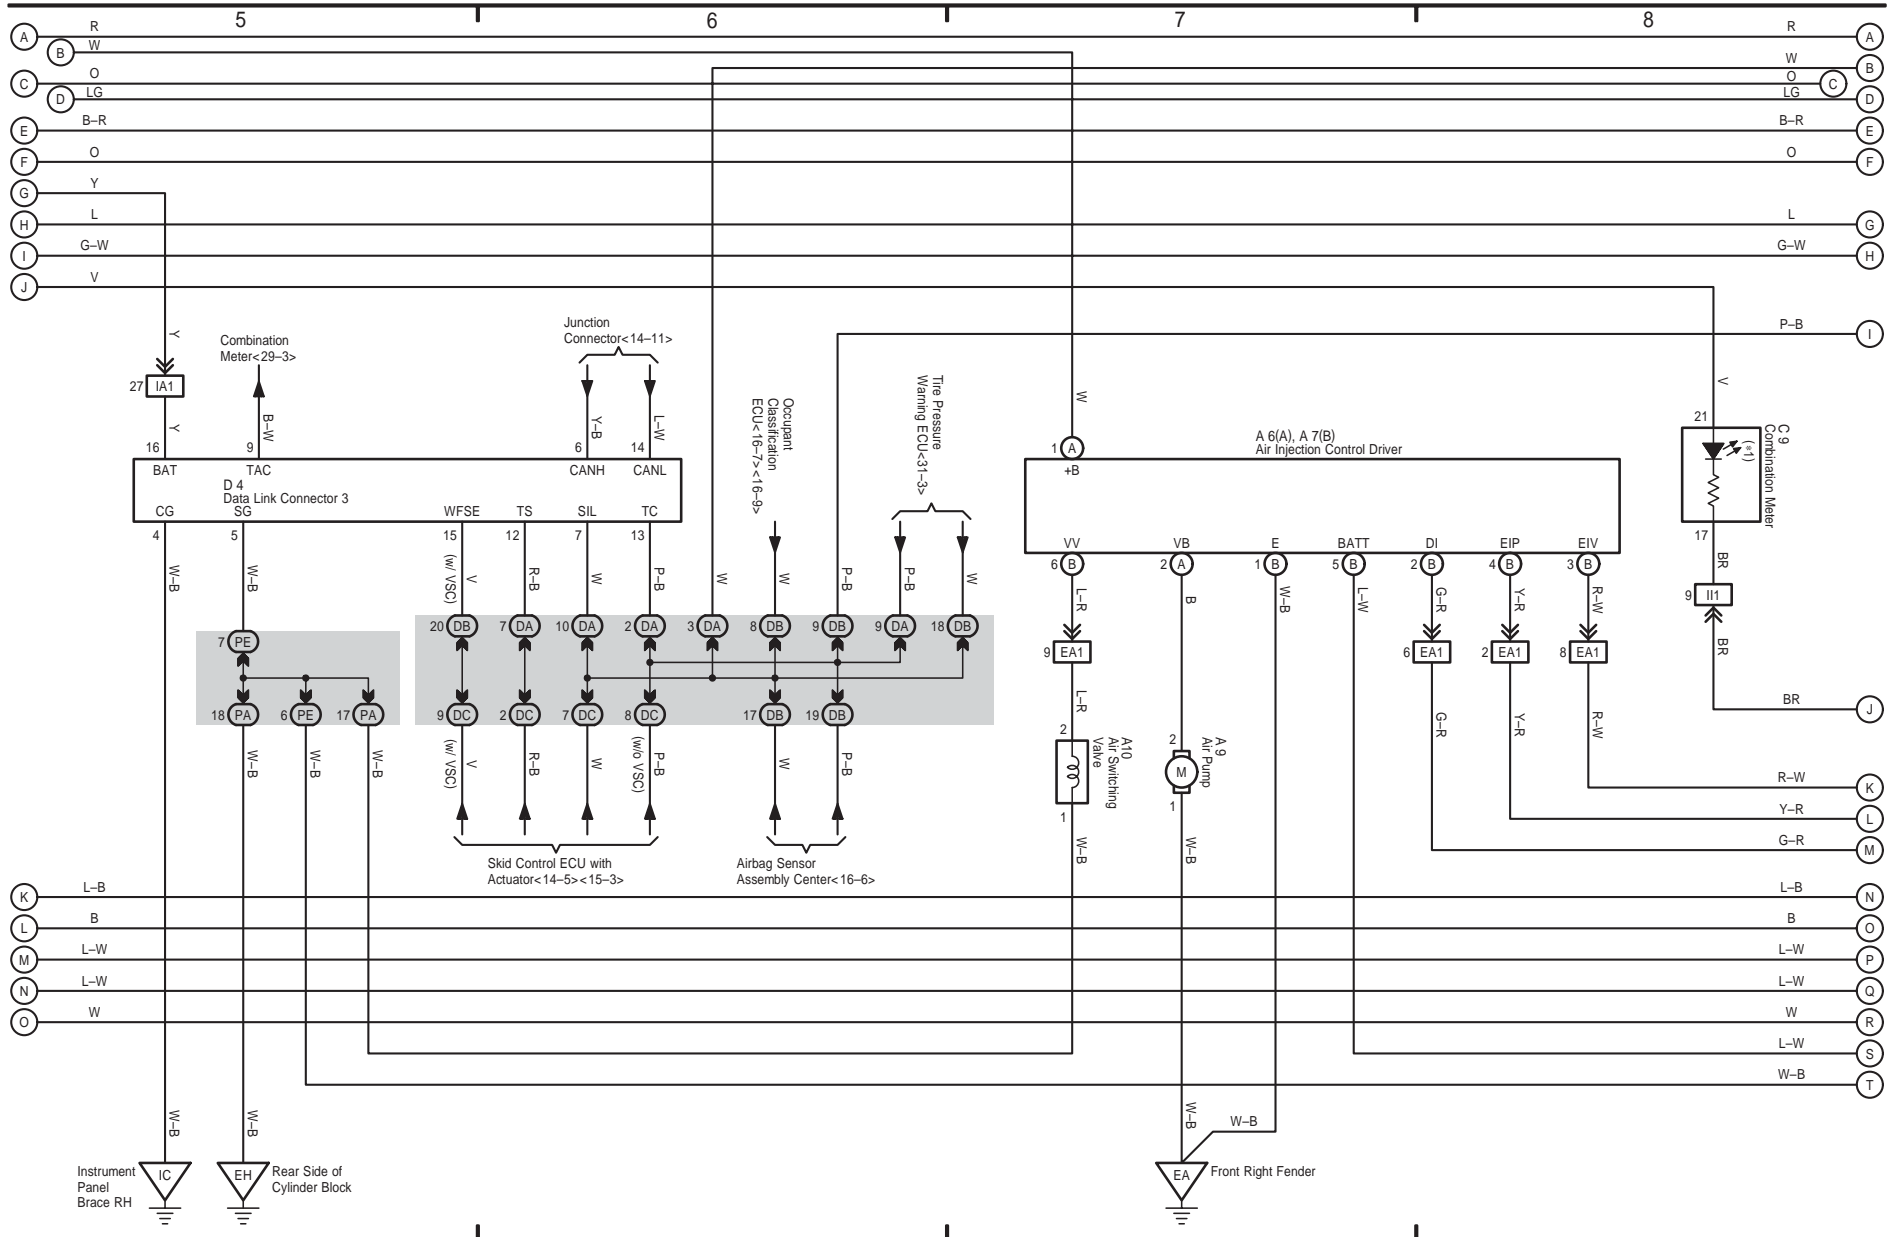


TOYOTA TACOMA (EM03N0U)



Engine Control (2TR-FE)

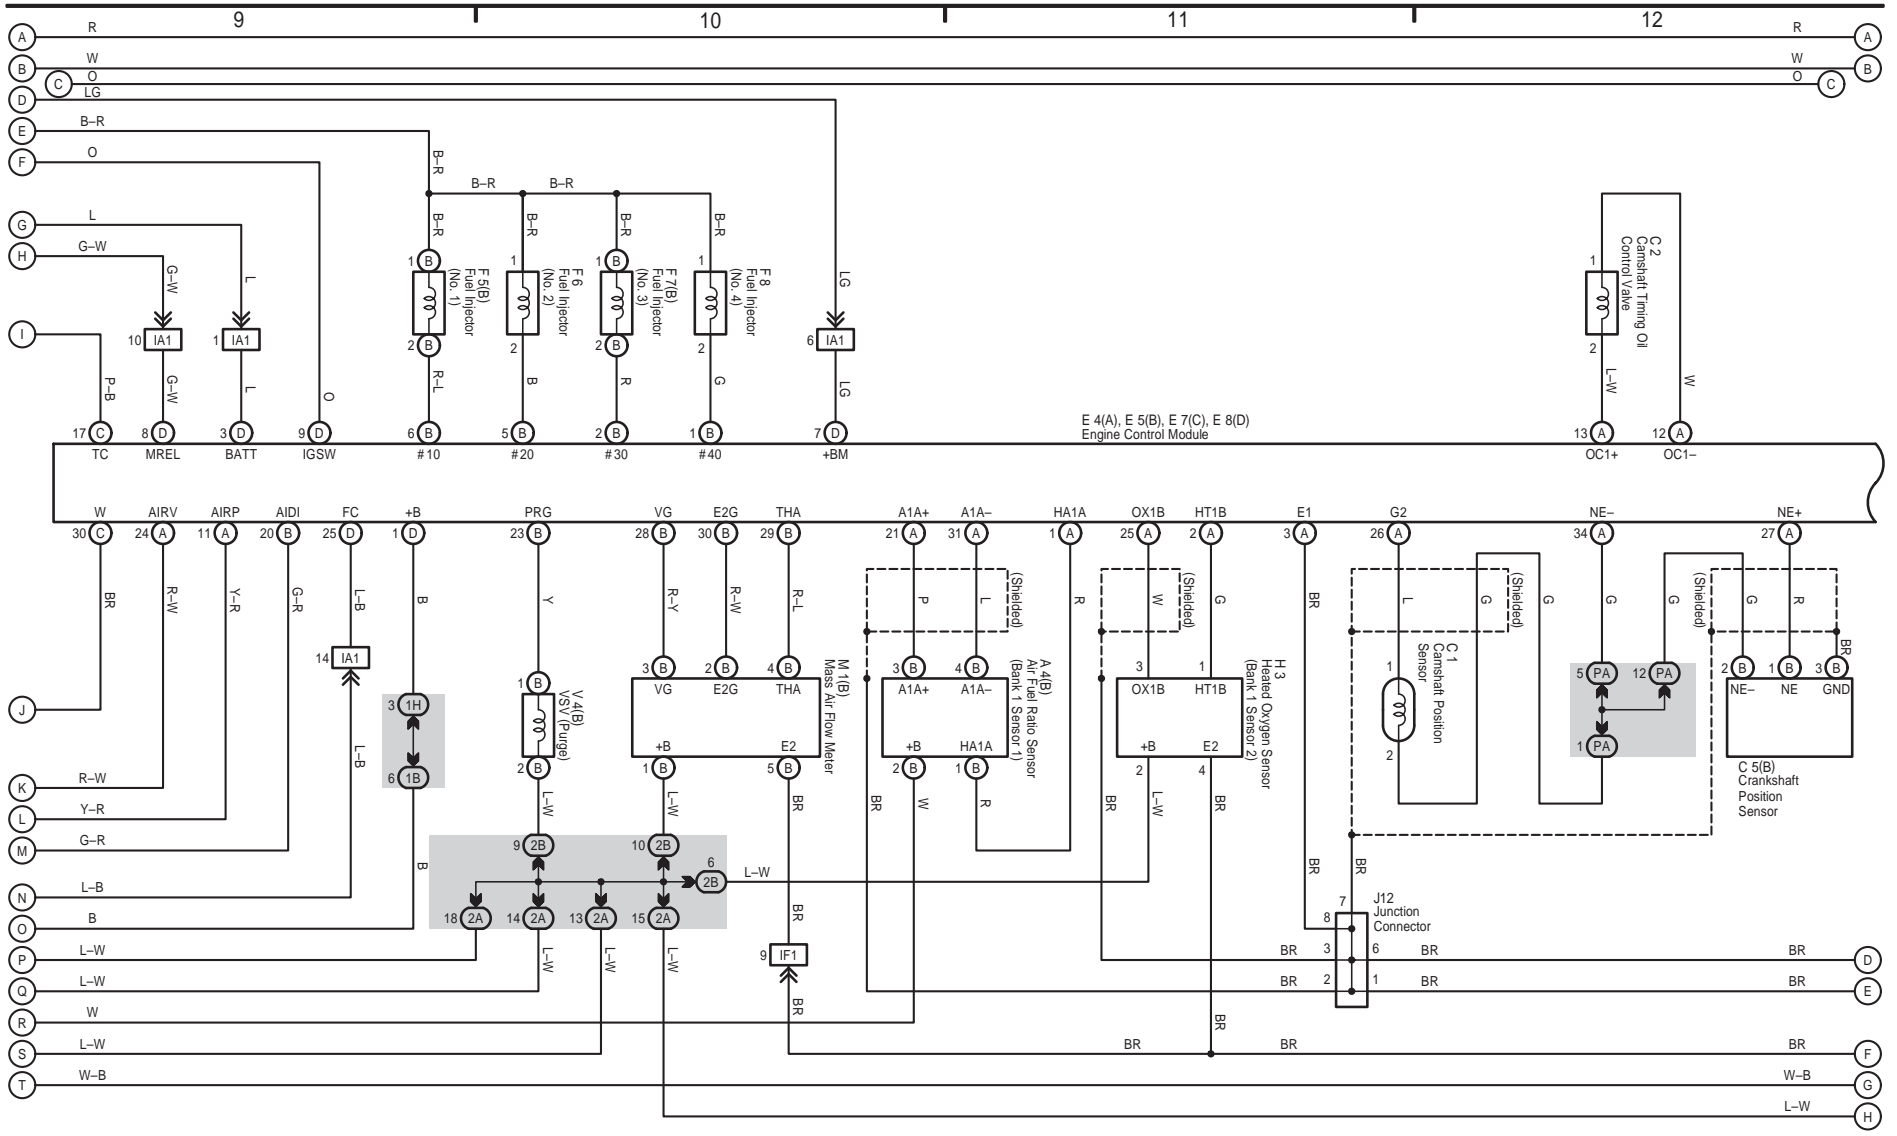


Engine Control (2TR-FE)

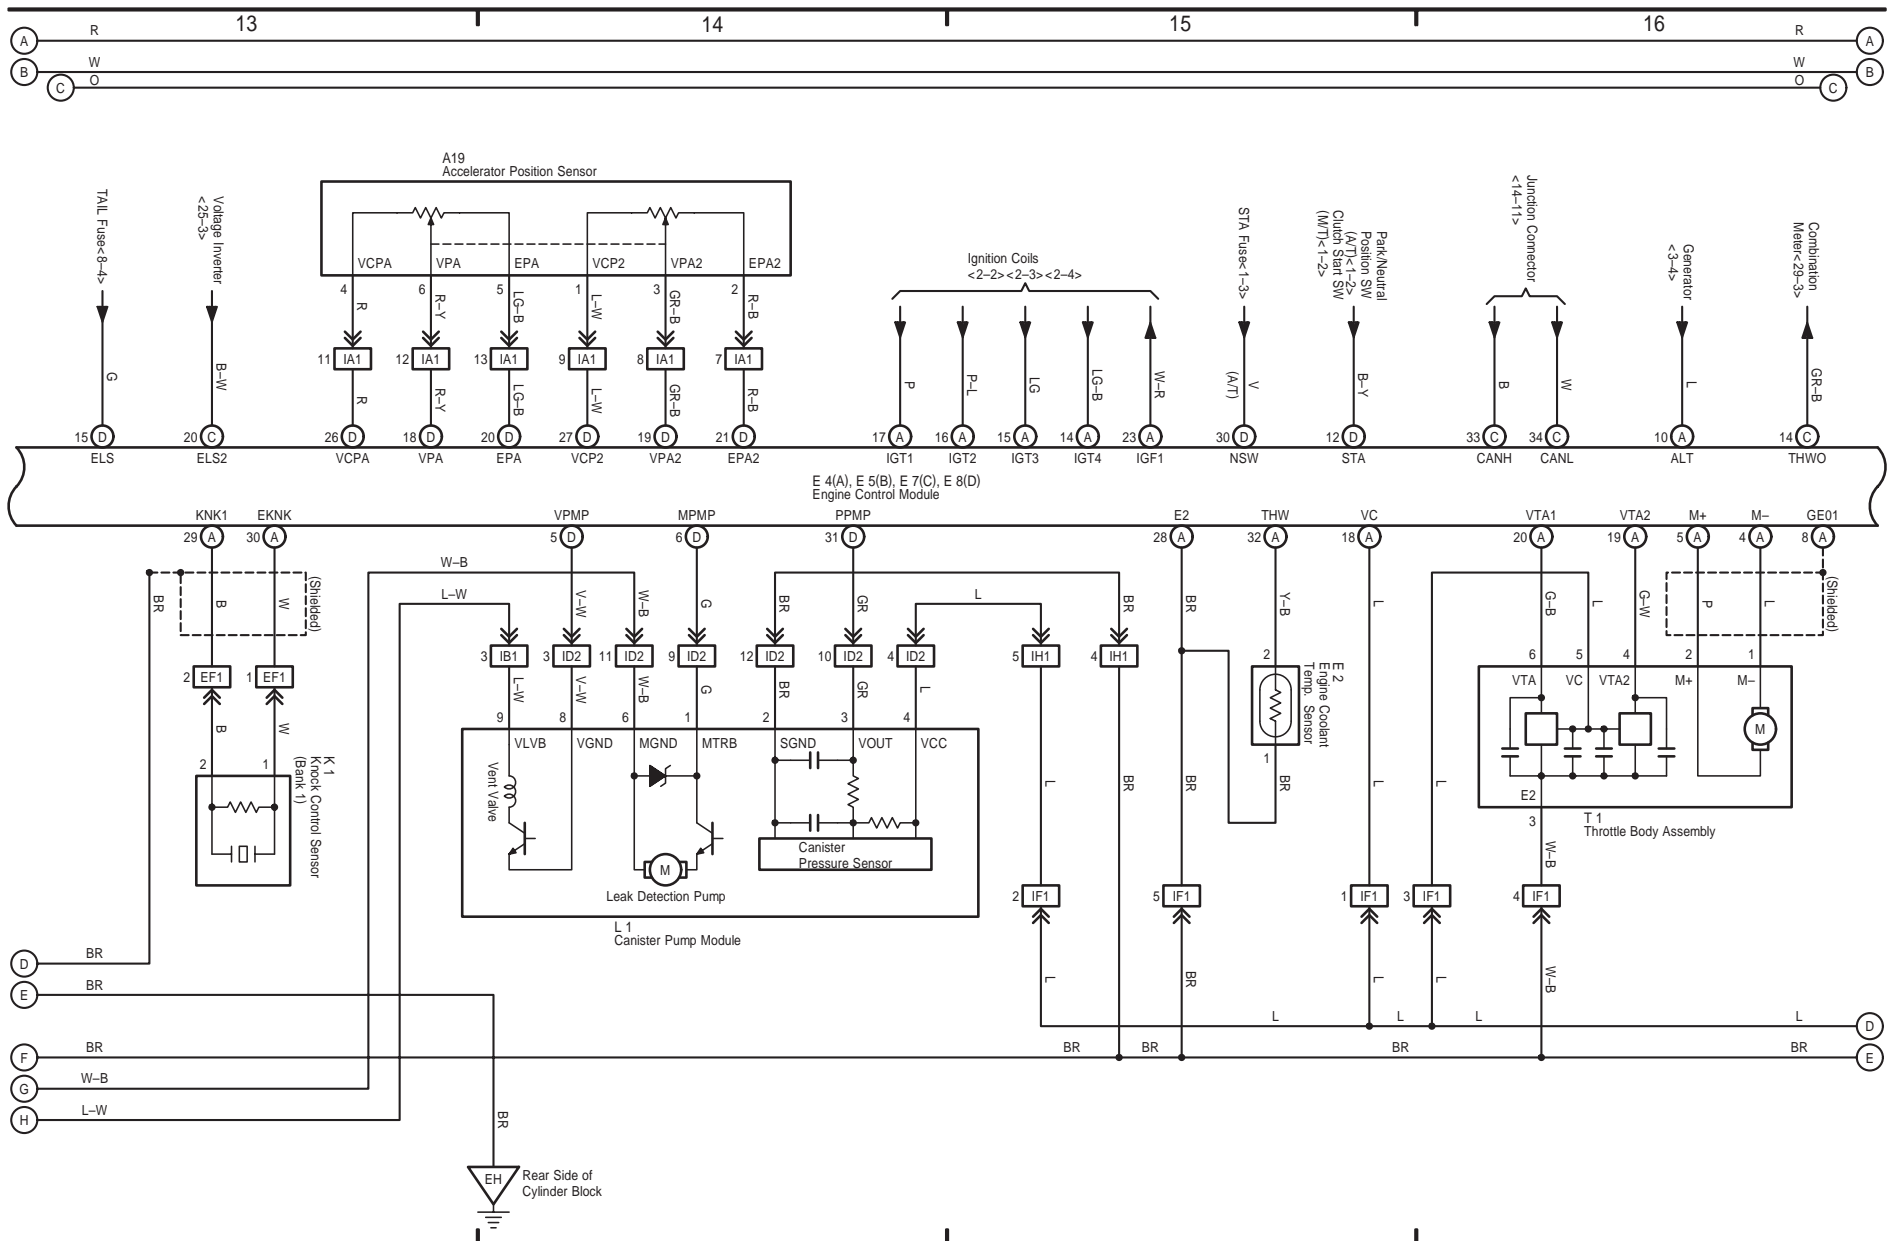

TOYOTA TACOMA (EM03N0U)




5 TOYOTA TACOMA (Cont' d)

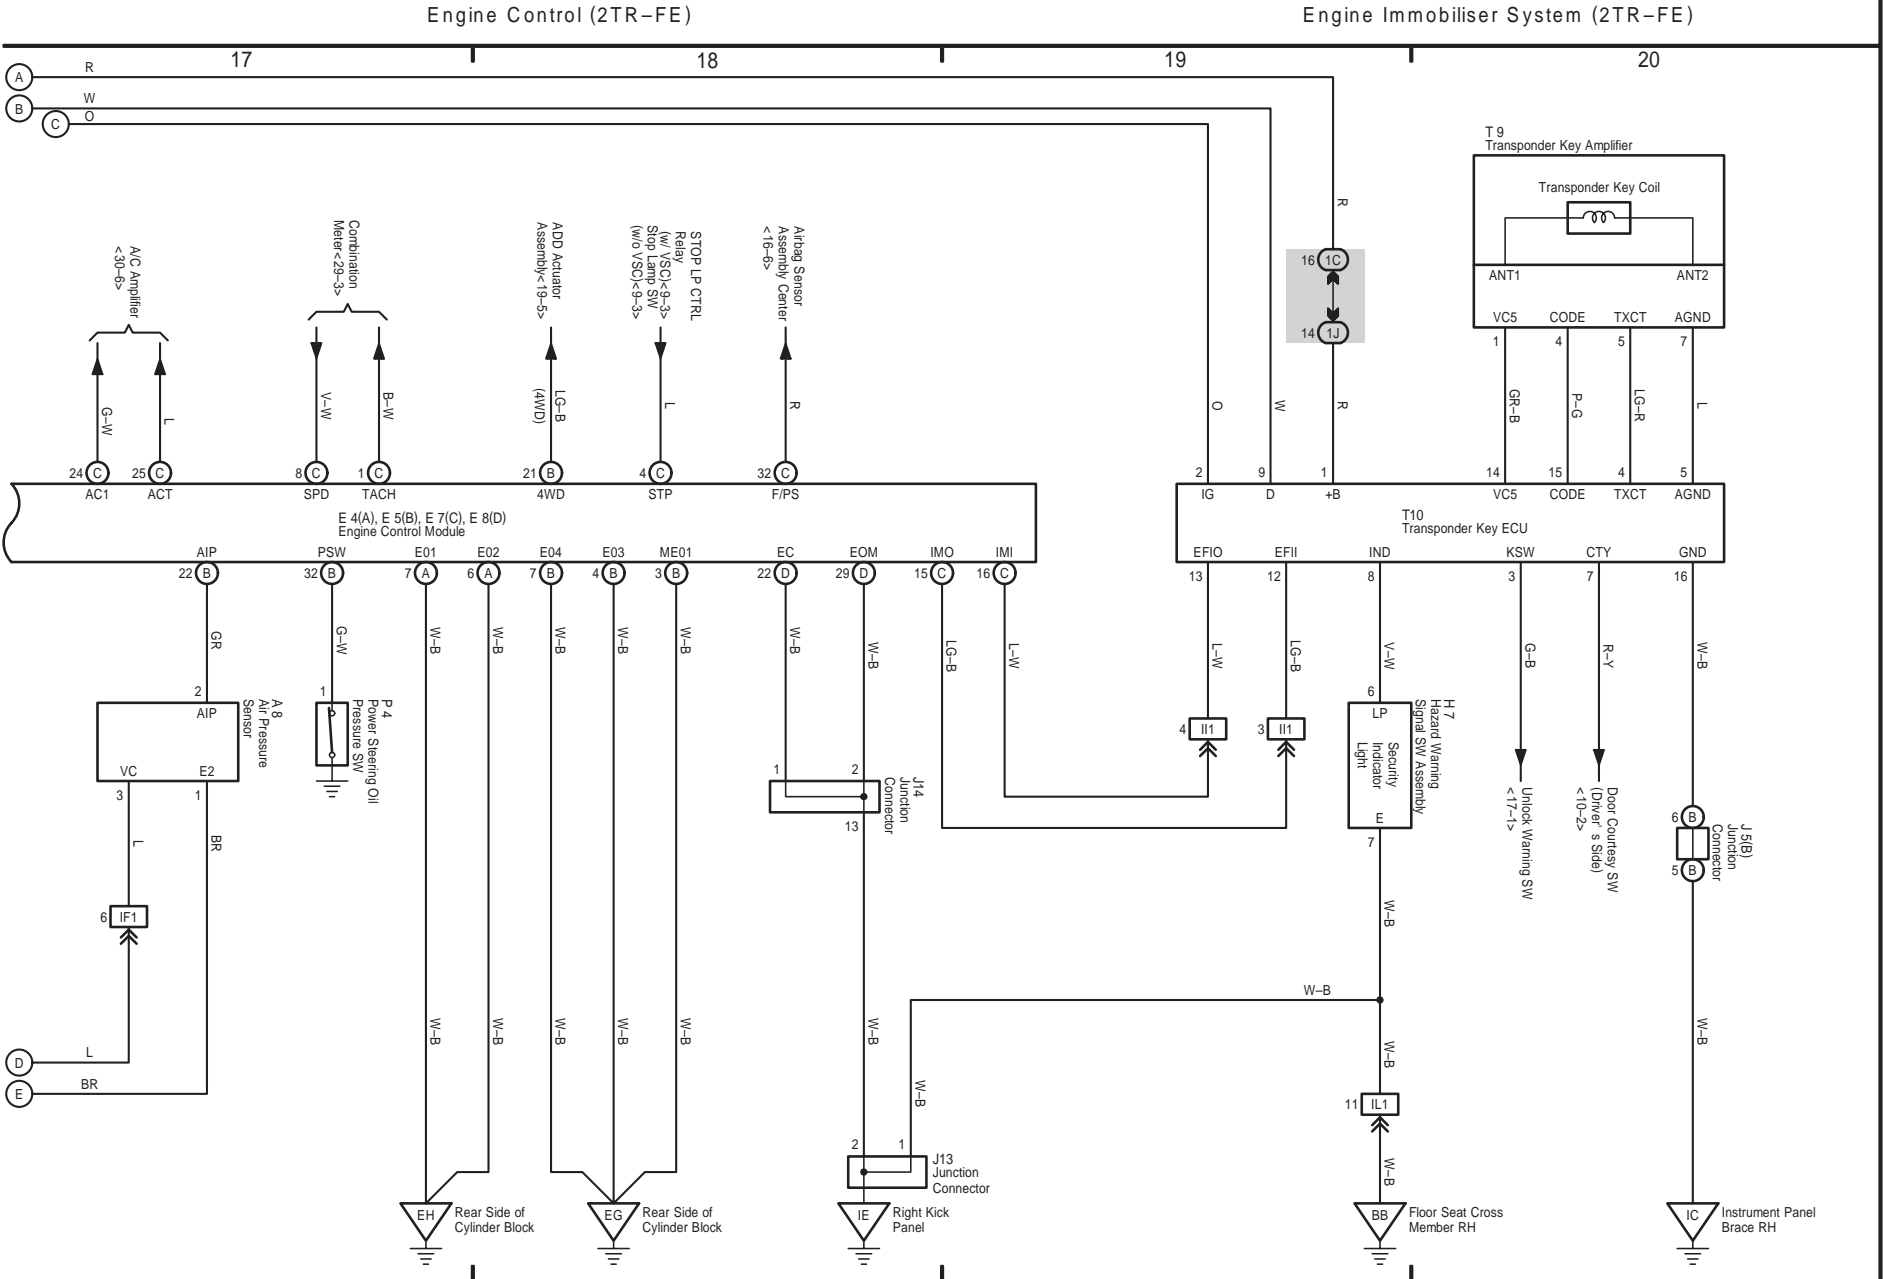


6 TOYOTA TACOMA

TOYOTA TACOMA (EM03N0U)

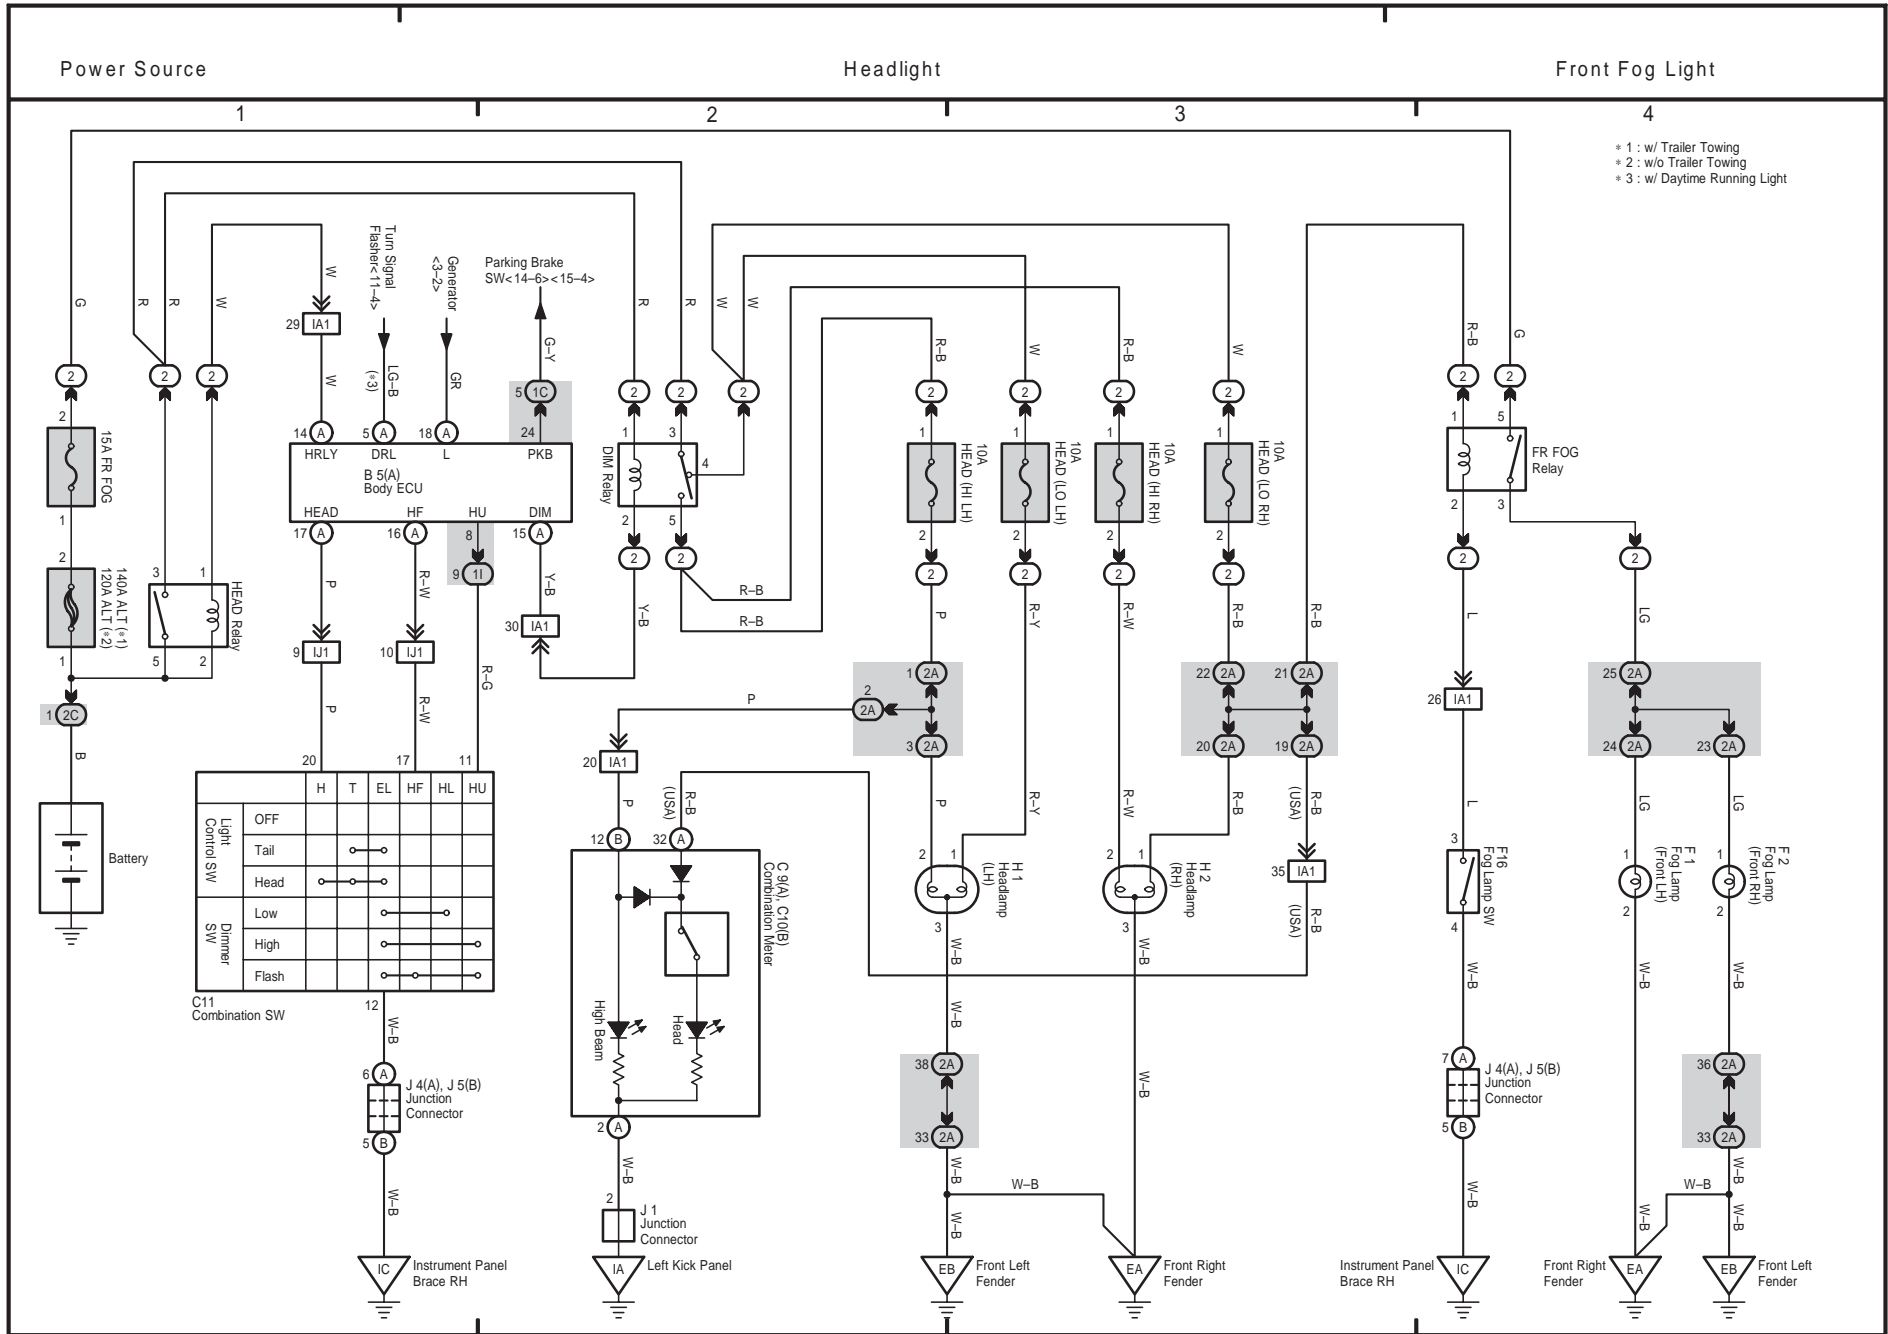


7 TOYOTA TACOMA

(Cont. next page)

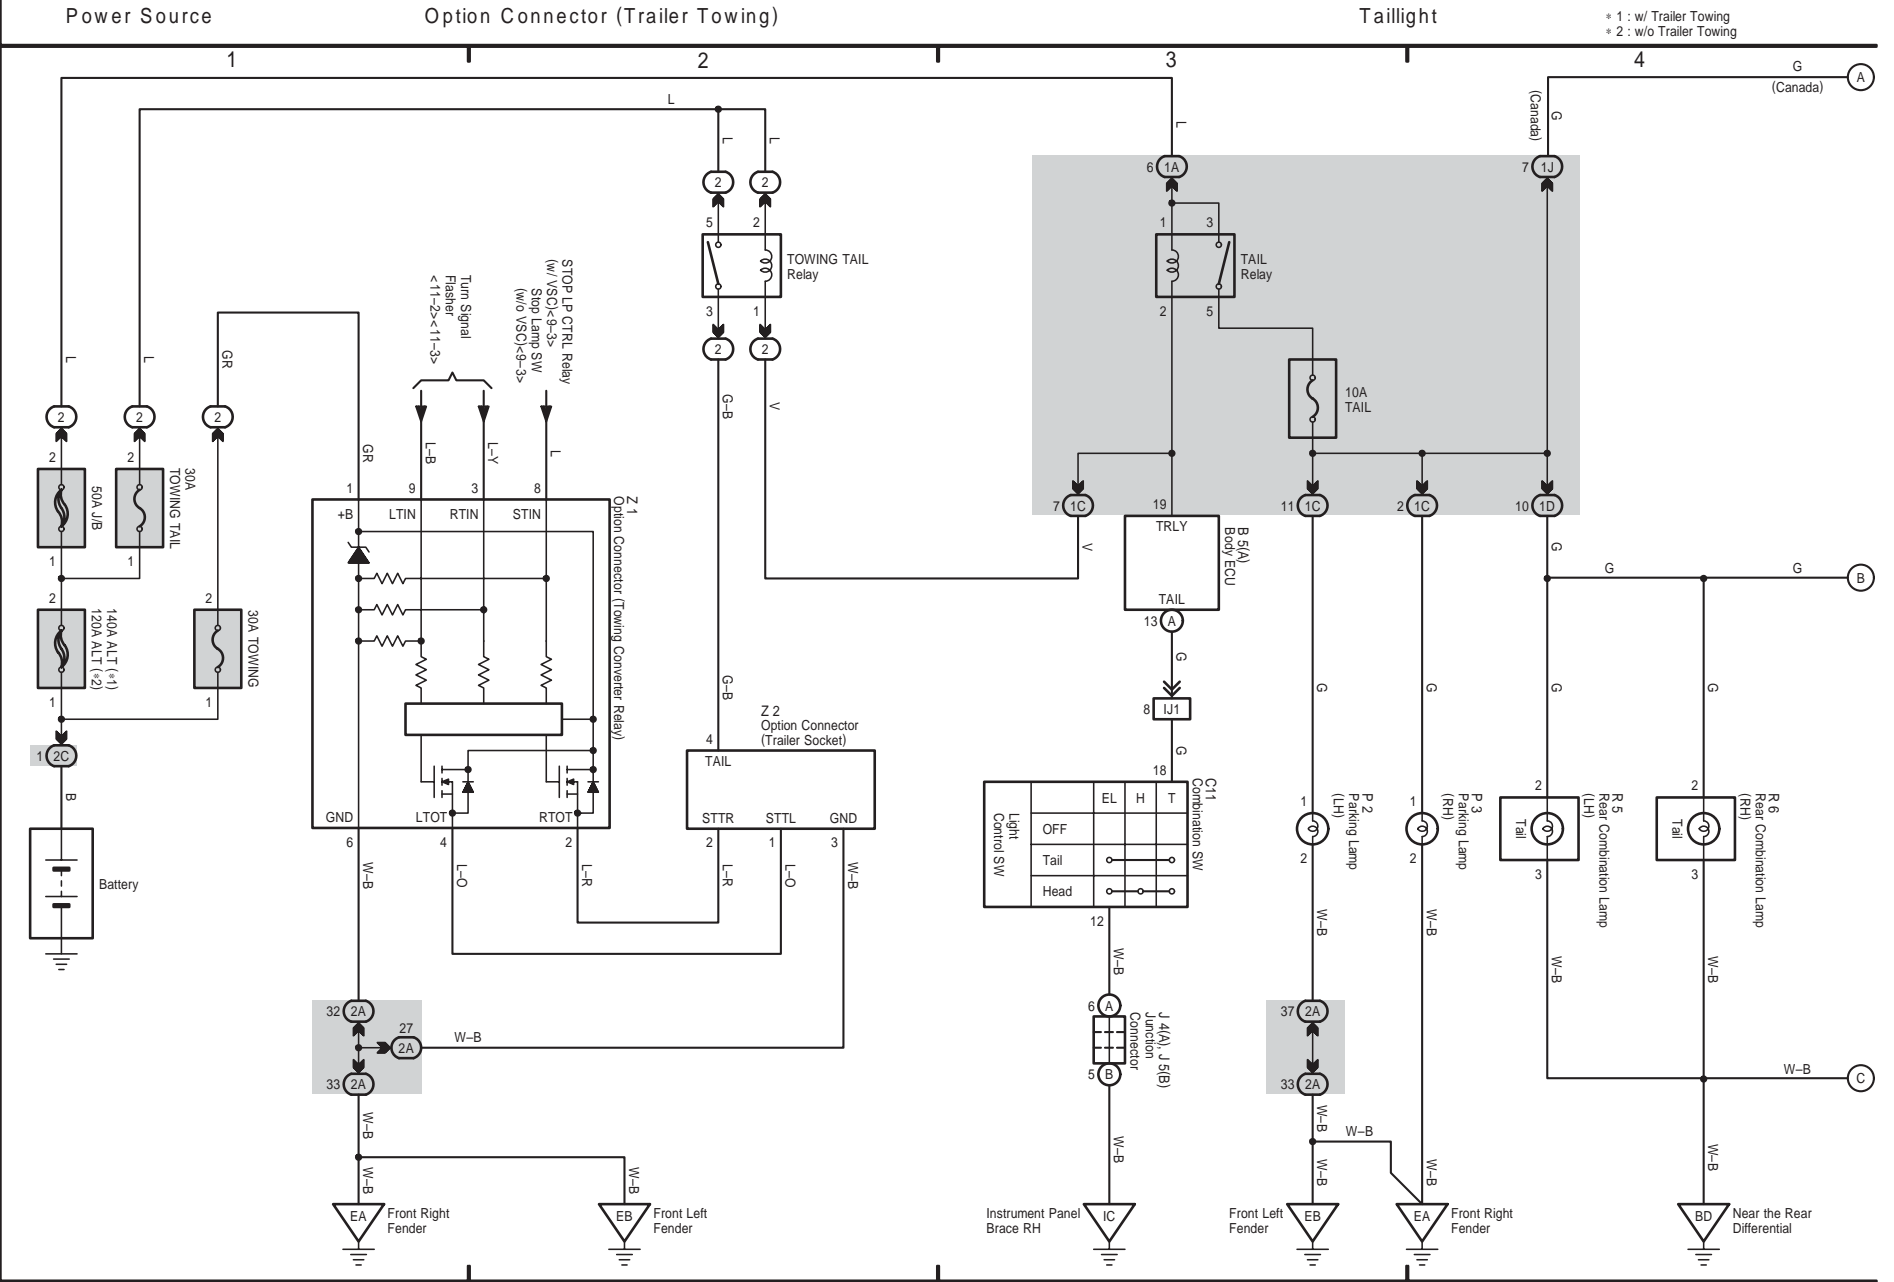

7 TOYOTA TACOMA (Cont' d)

Taillight

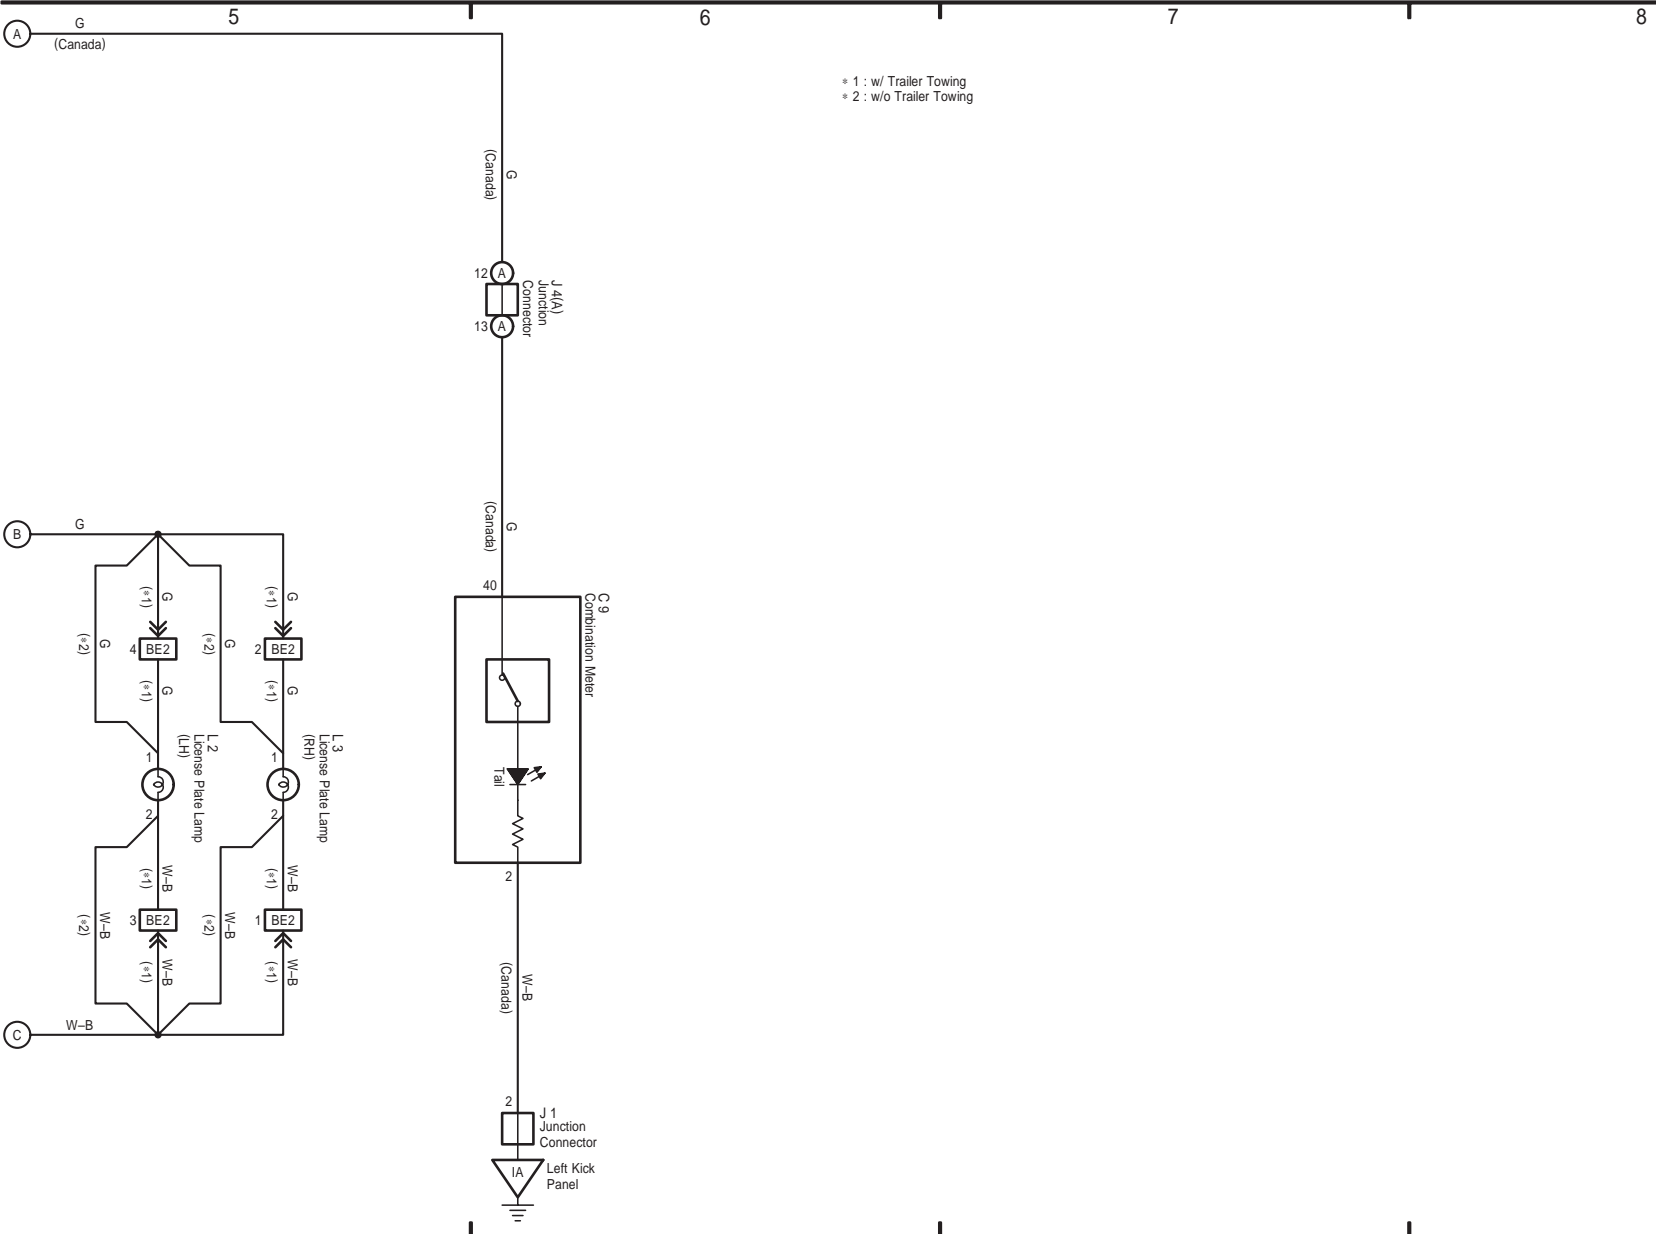

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing


8 TOYOTA TACOMA

Power Source

Illumination

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ Downhill Assist Control

- * 4 : Separate Type Amplifier
- * 5 : Built-in Type Amplifier
- * 6 : w/ Side Airbag

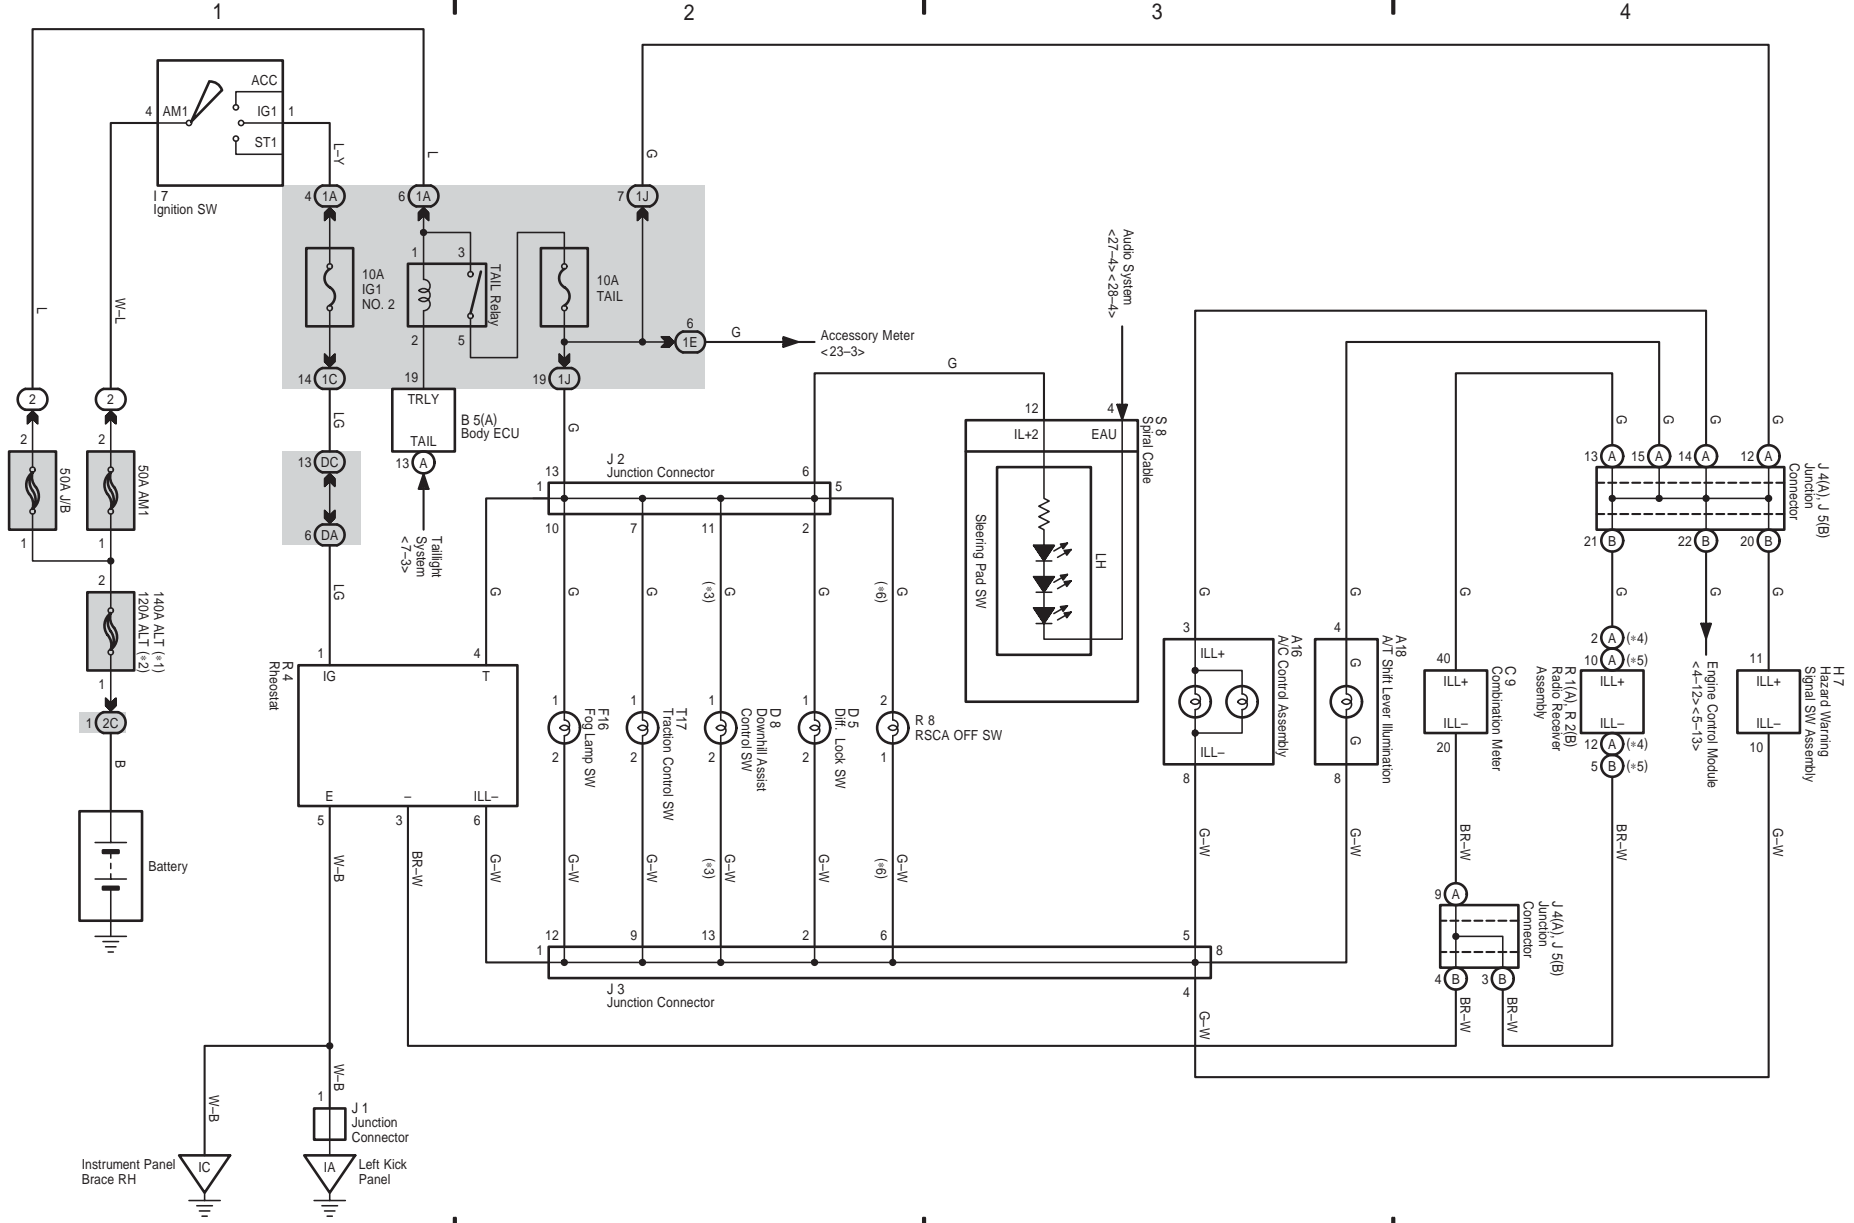


9 TOYOTA TACOMA

Power Source

Back-Up Light

Stop Light


- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ VSC
- * 4 : w/o VSC

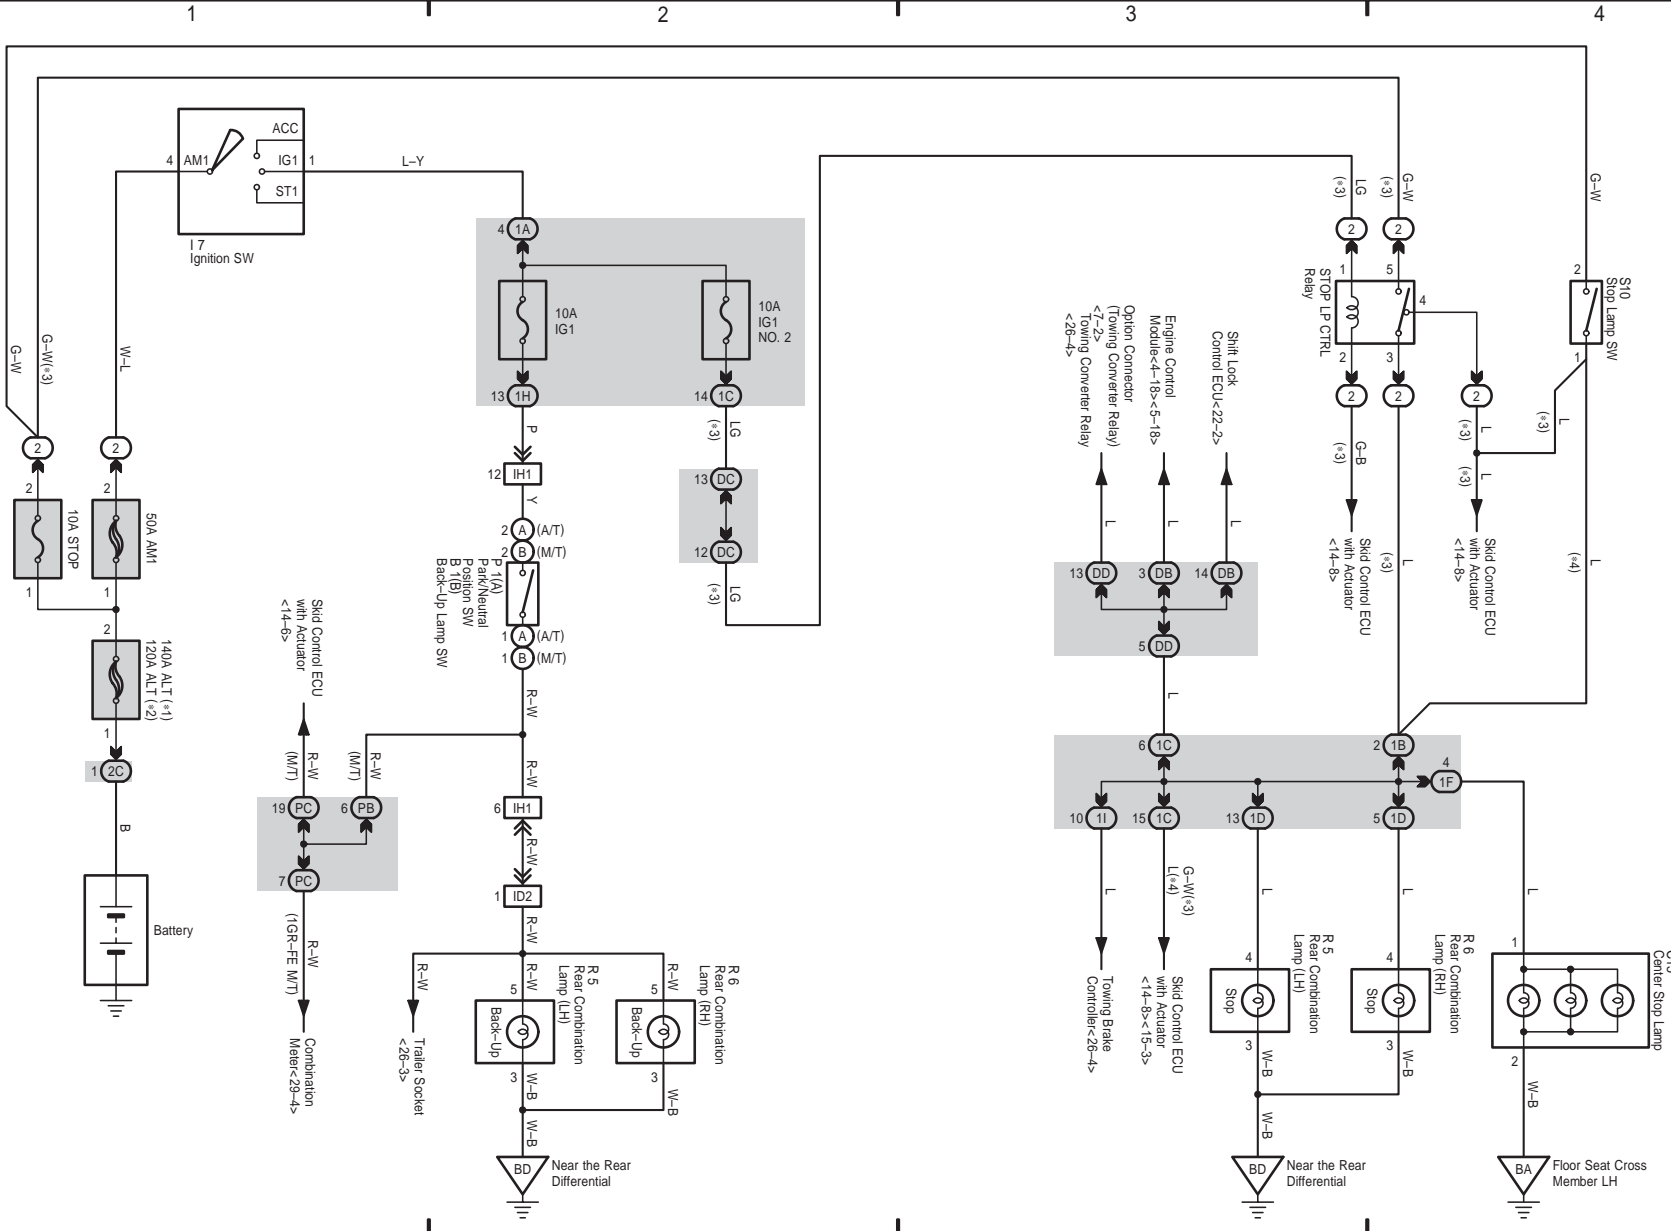

TOYOTA TACOMA (EM03N0U)

10 TOYOTA TACOMA

M OVERALL ELECTRICAL WIRING DIAGRAM

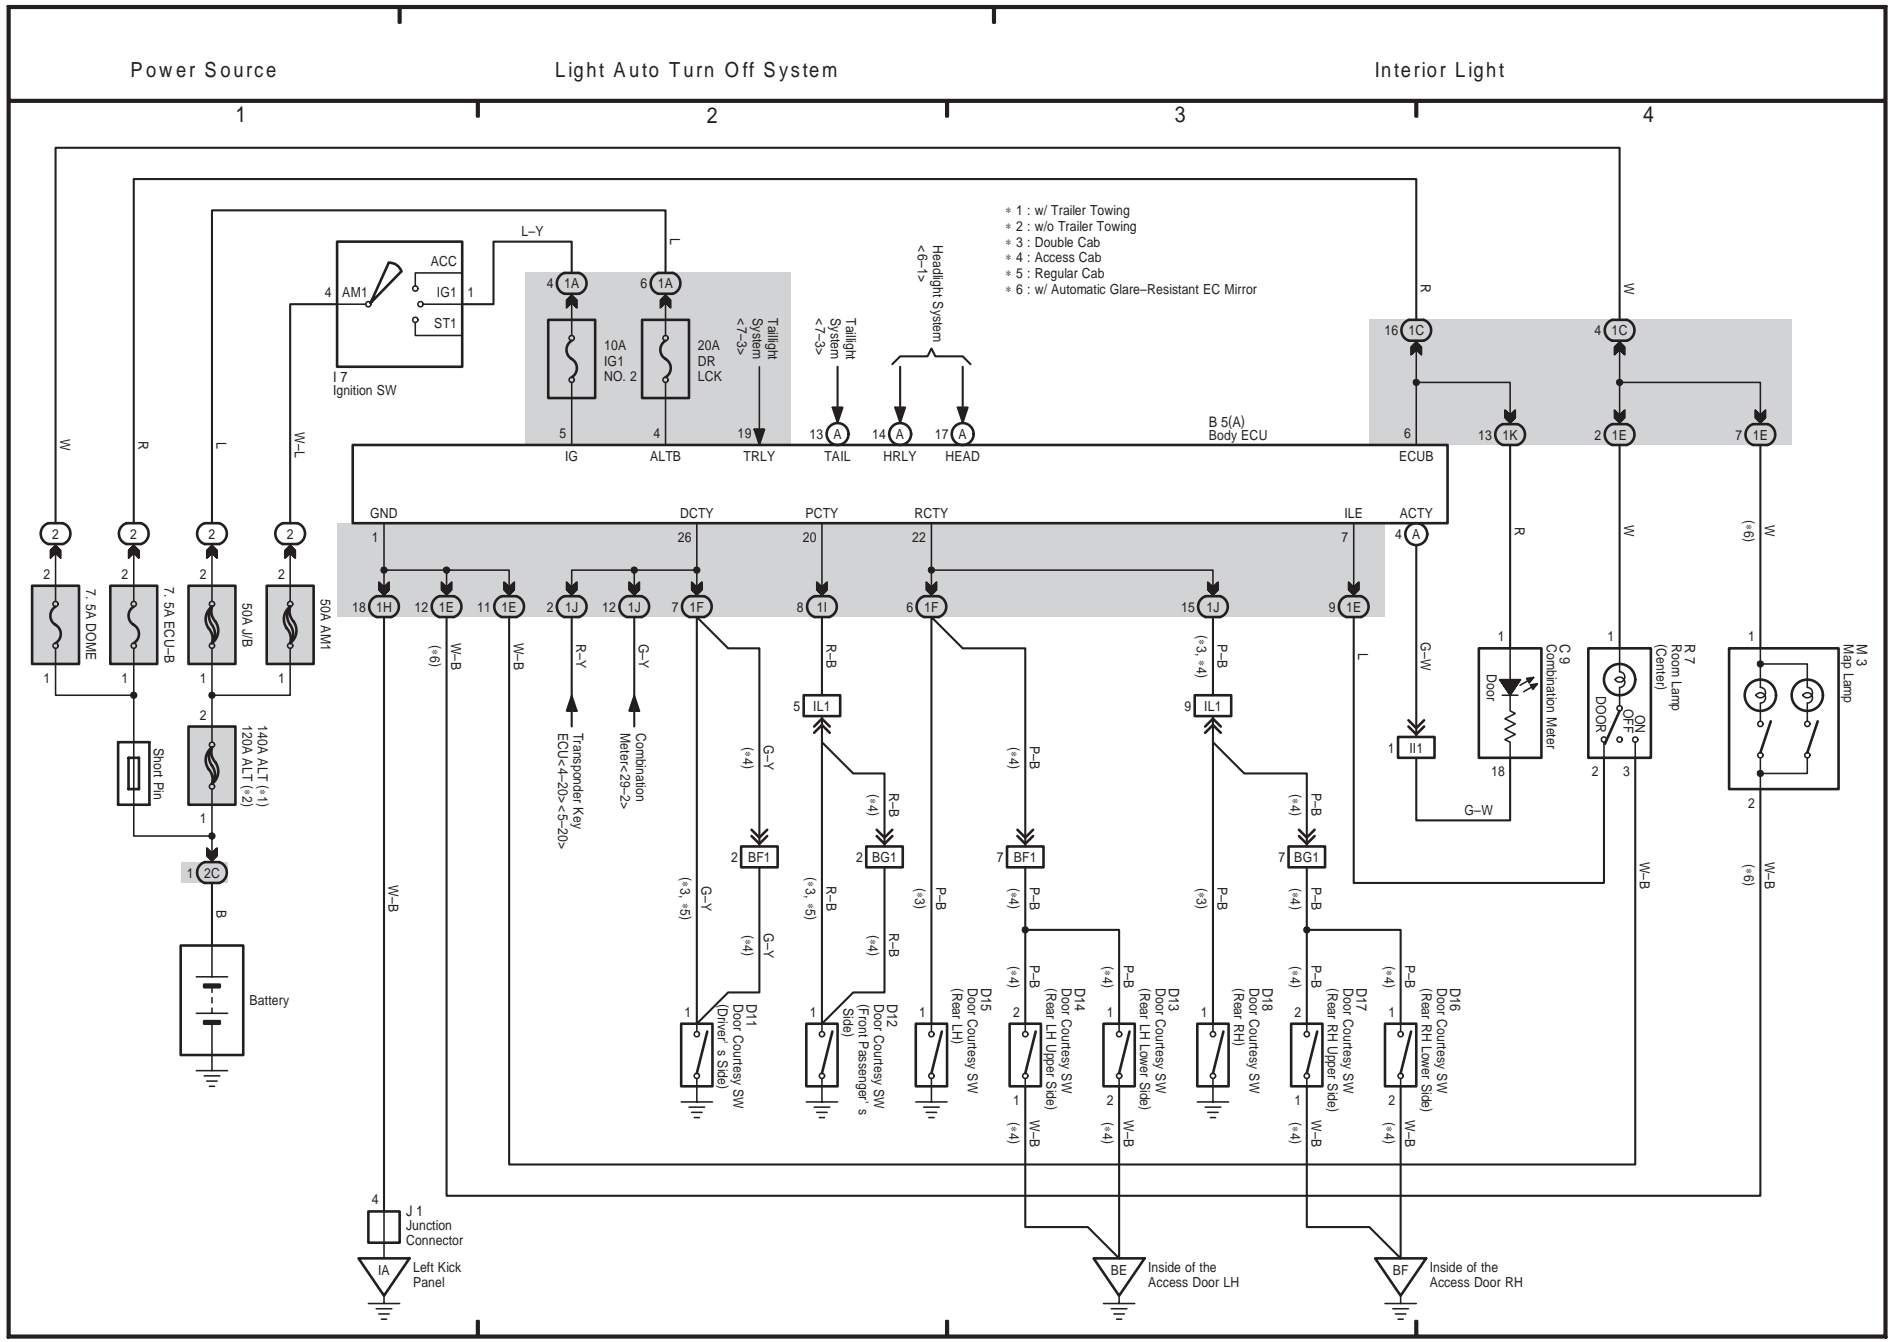


11 TOYOTA TACOMA


TOYOTA TACOMA (EM03N0U)

Power Source


Turn Signal and Hazard Warning Light

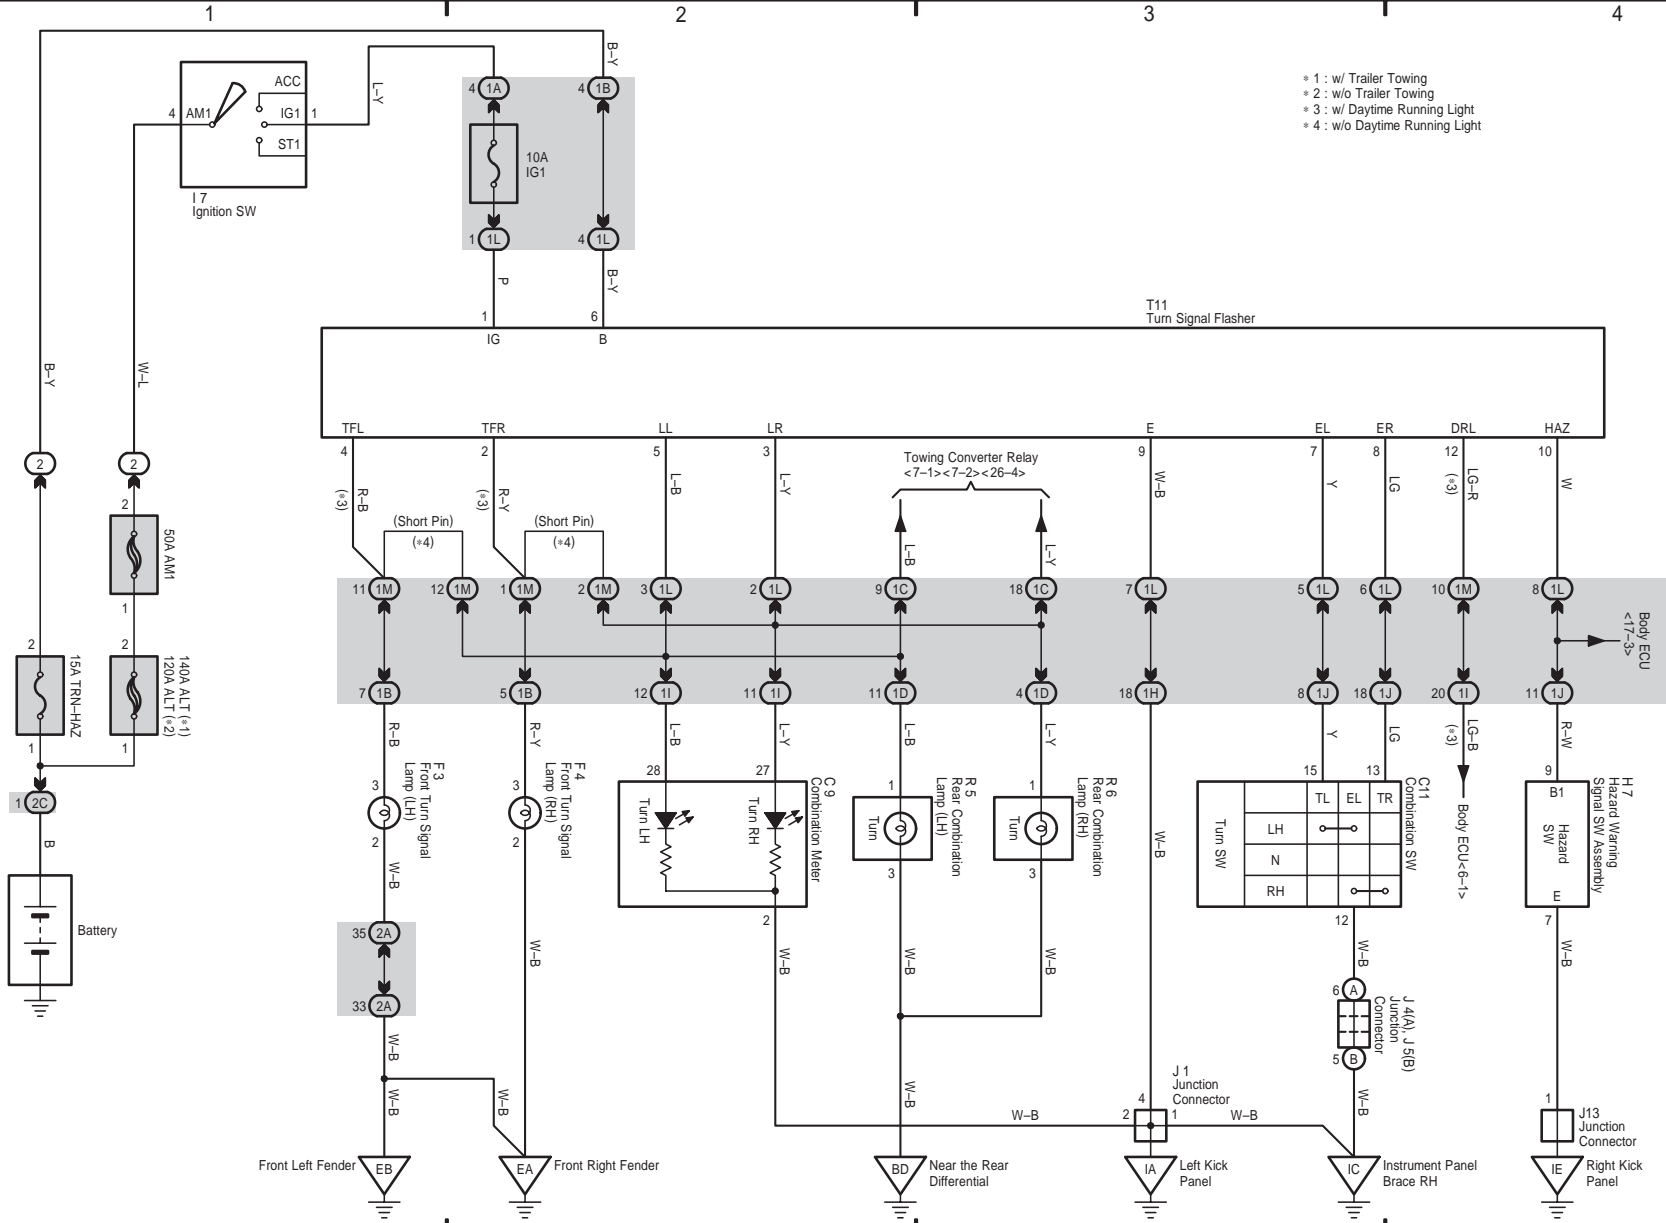

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ Daytime Running Light
- * 4 : w/o Daytime Running Light

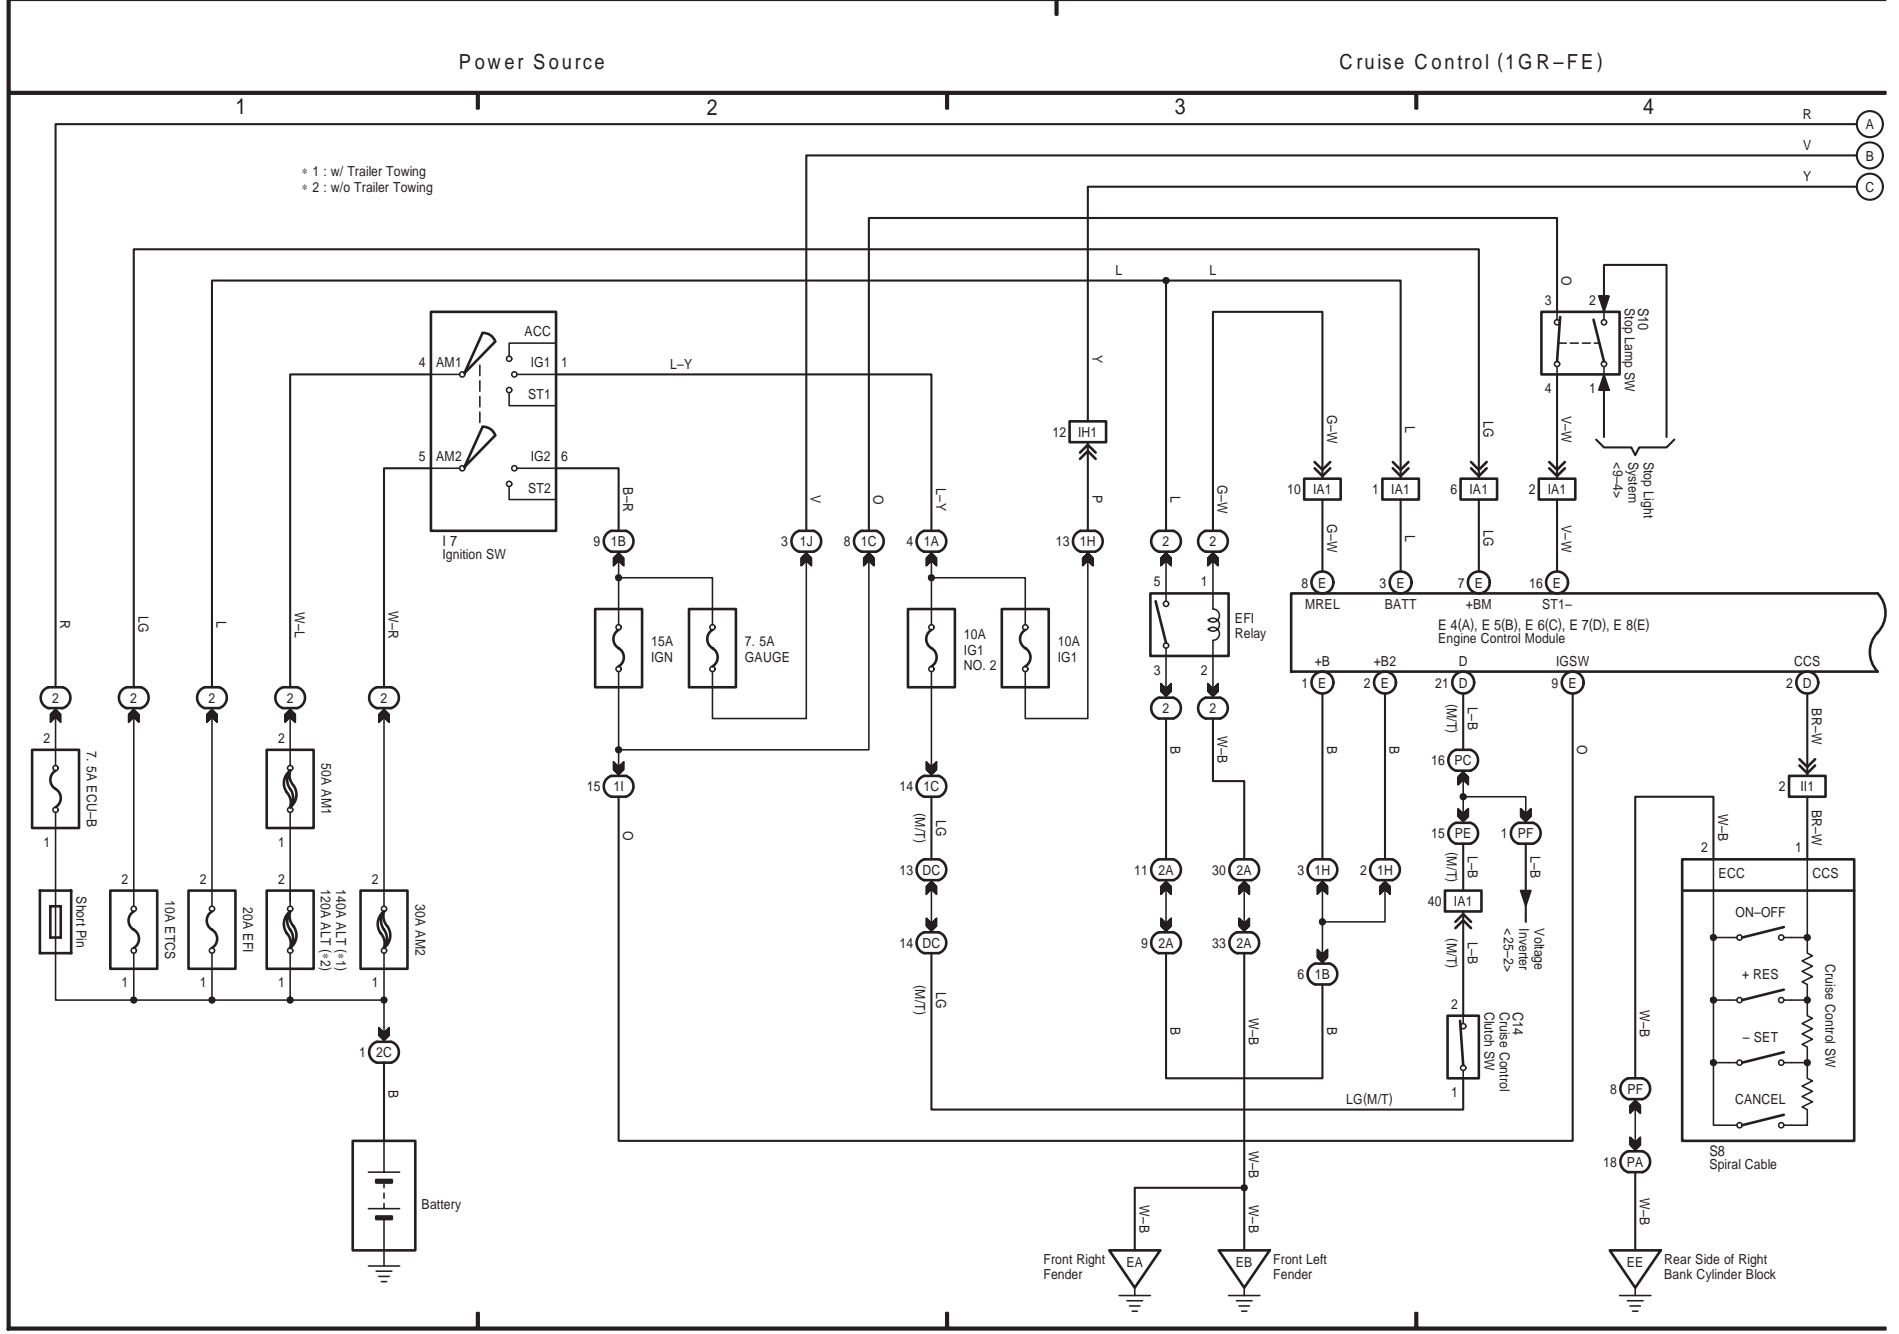


Electronically Controlled Transmission and A/T Indicator (1GR-FE)

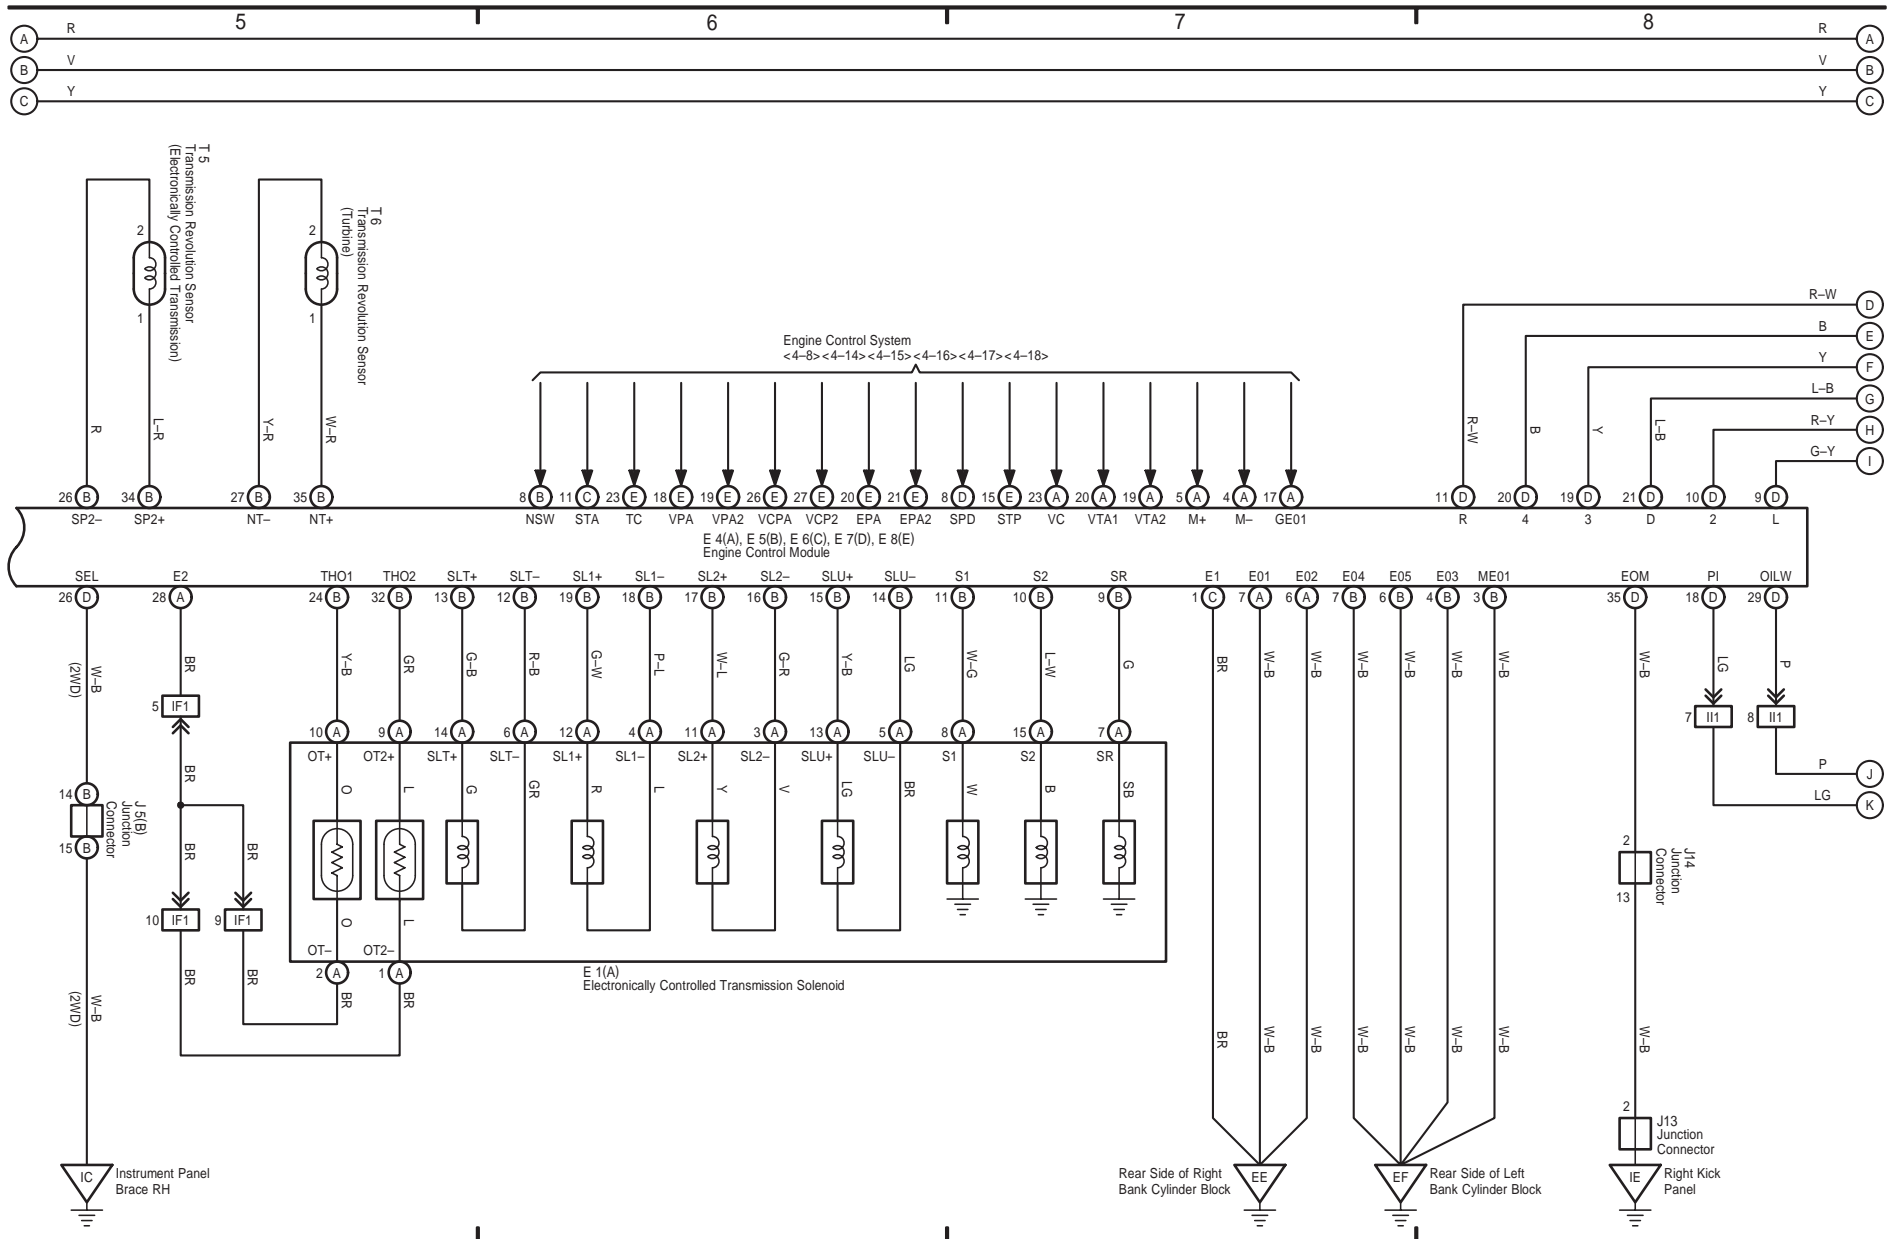


TOYOTA TACOMA (EM03N0U)





Electronically Controlled Transmission and A/T Indicator (1GR-FE)

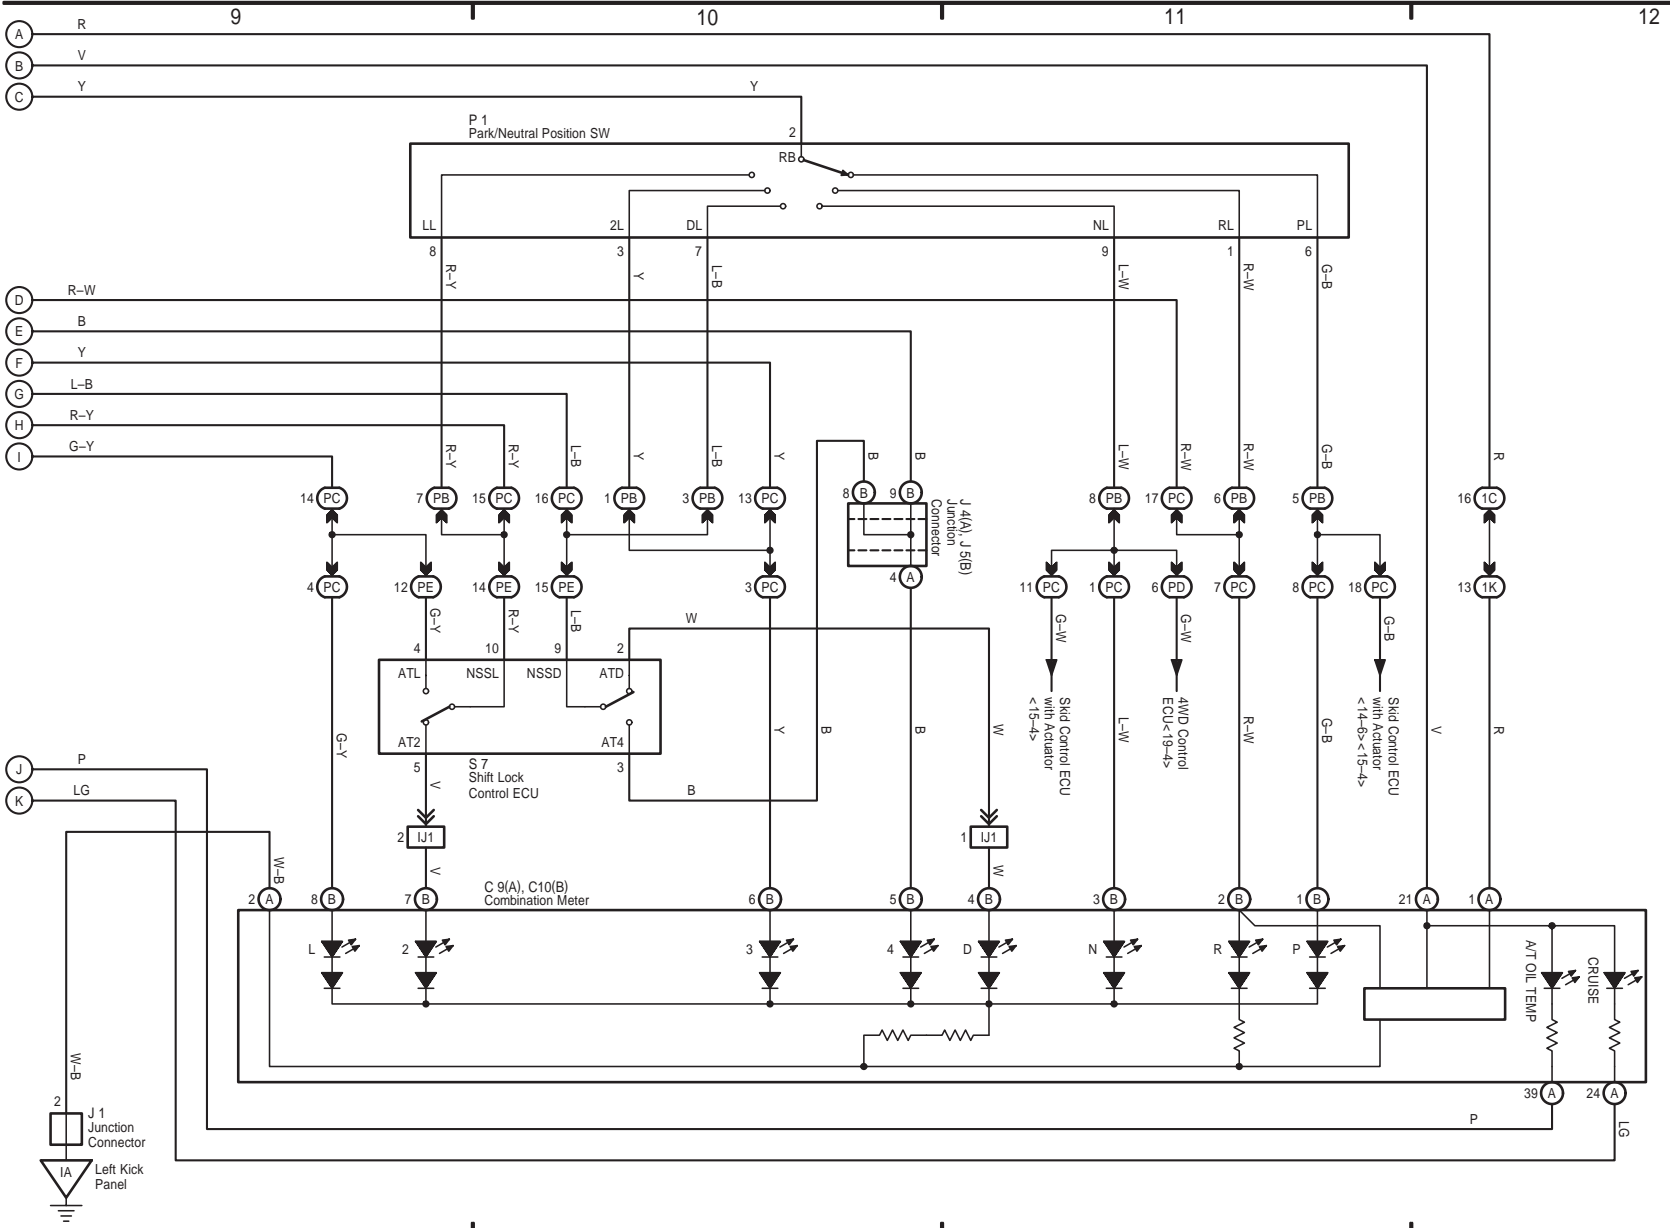

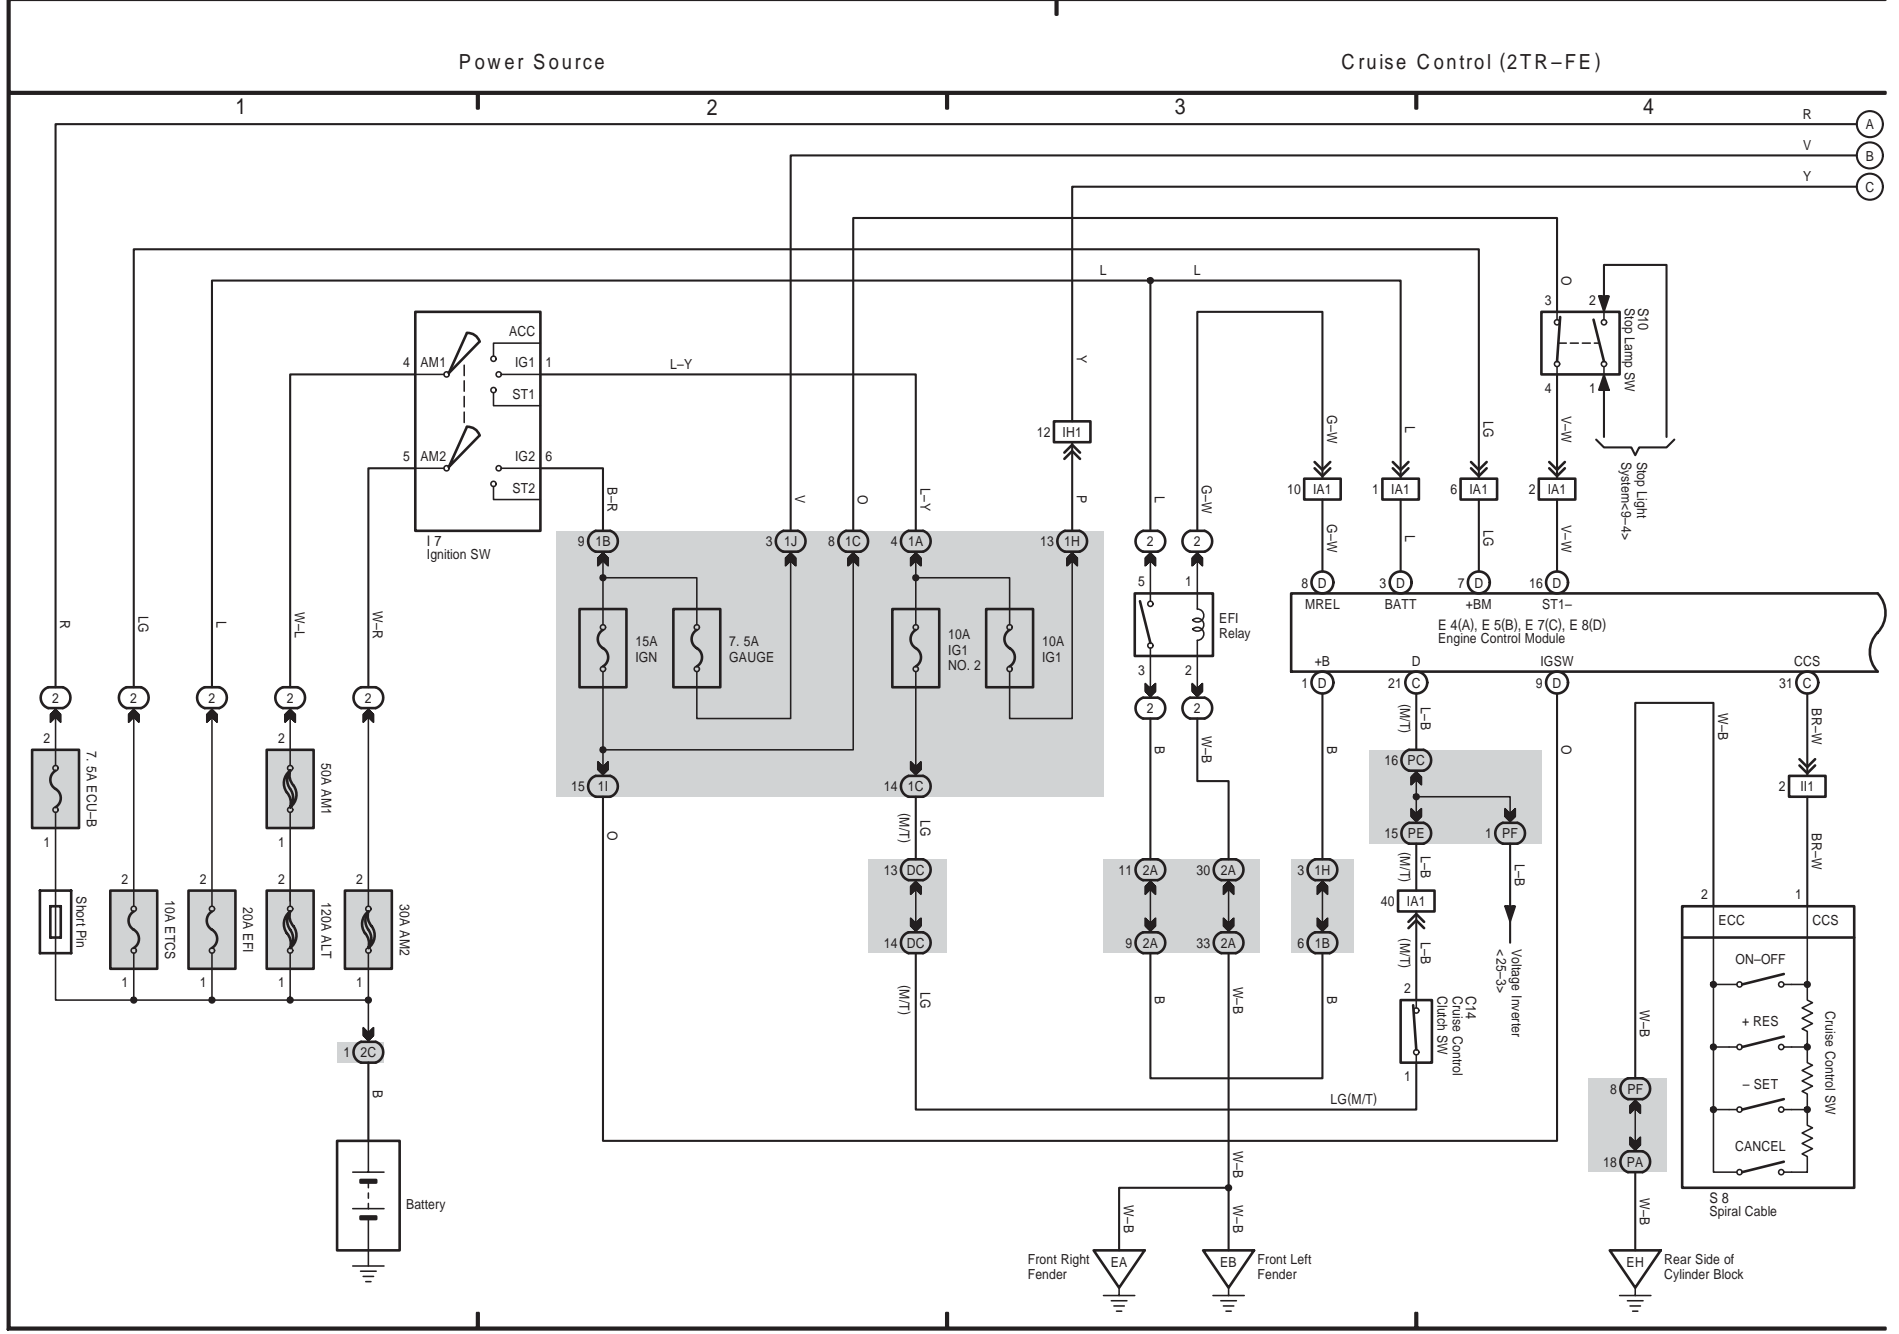


Electronically Controlled Transmission and A/T Indicator (2TR-FE)

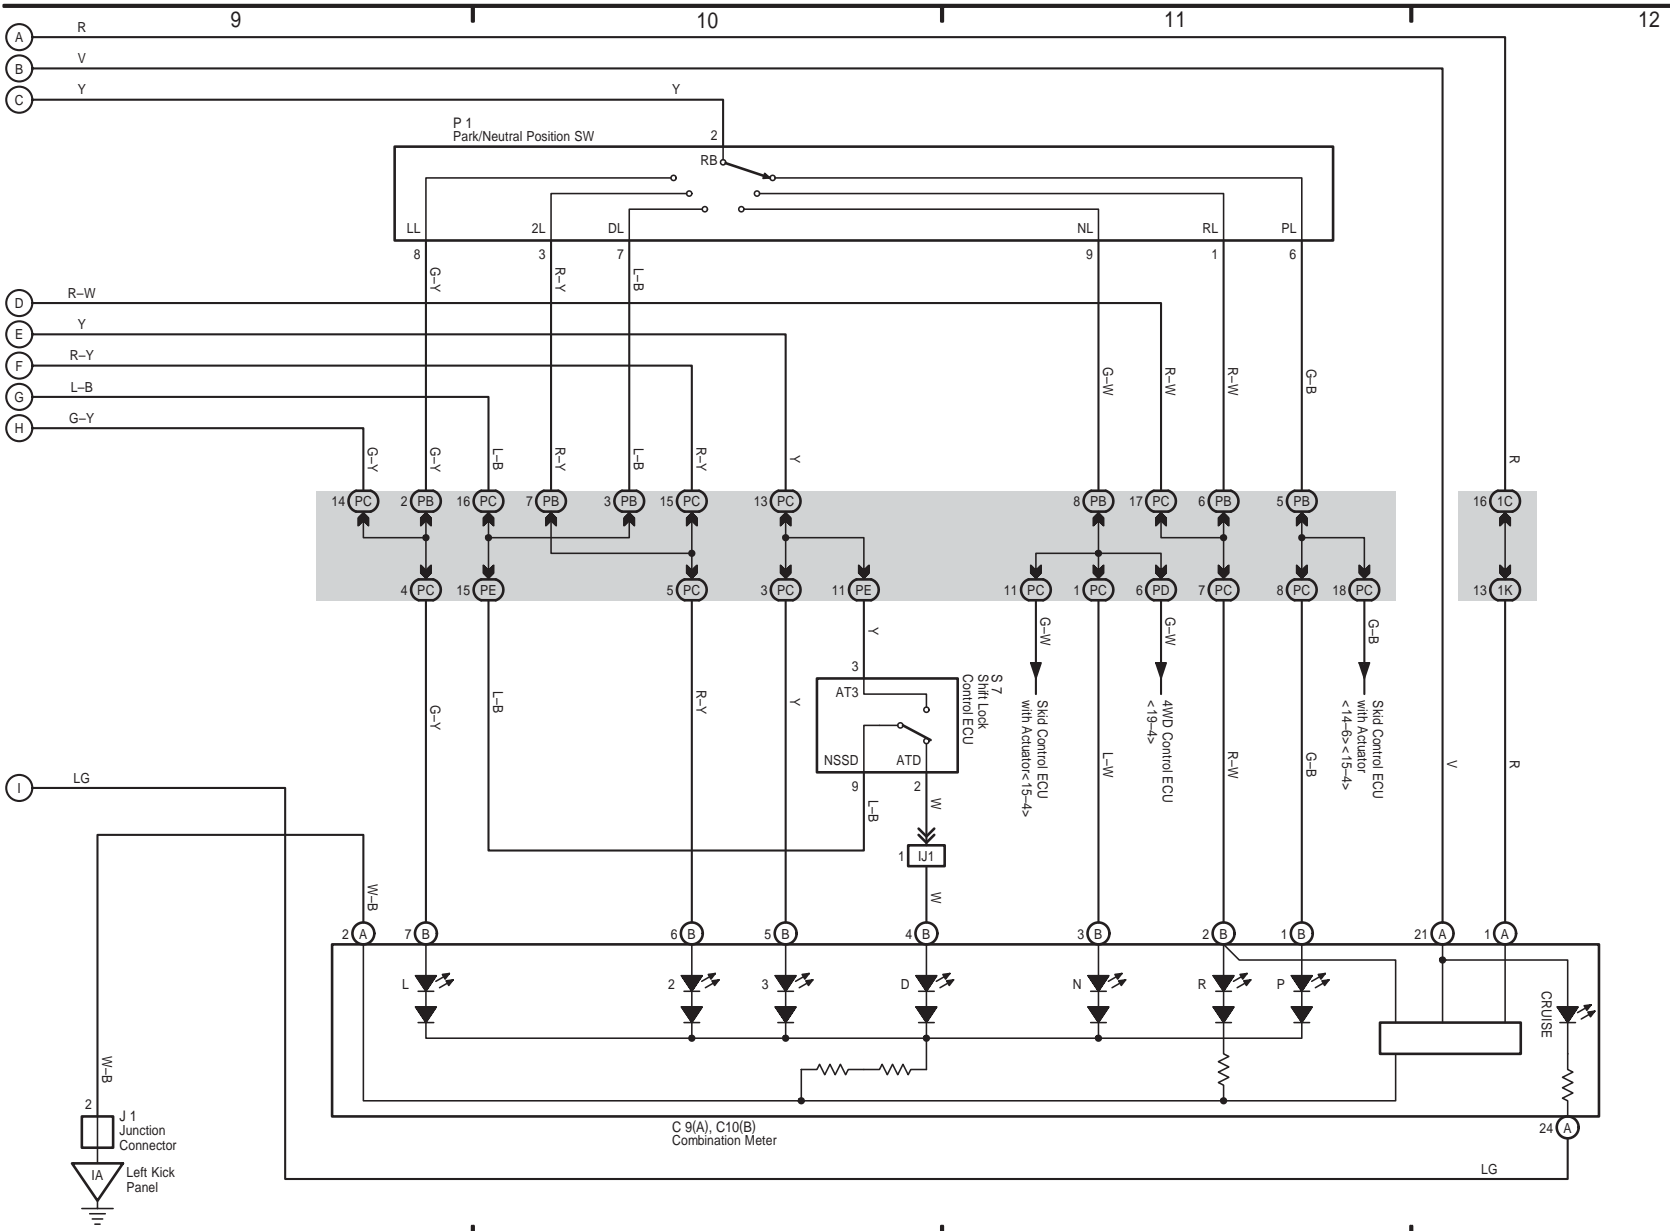

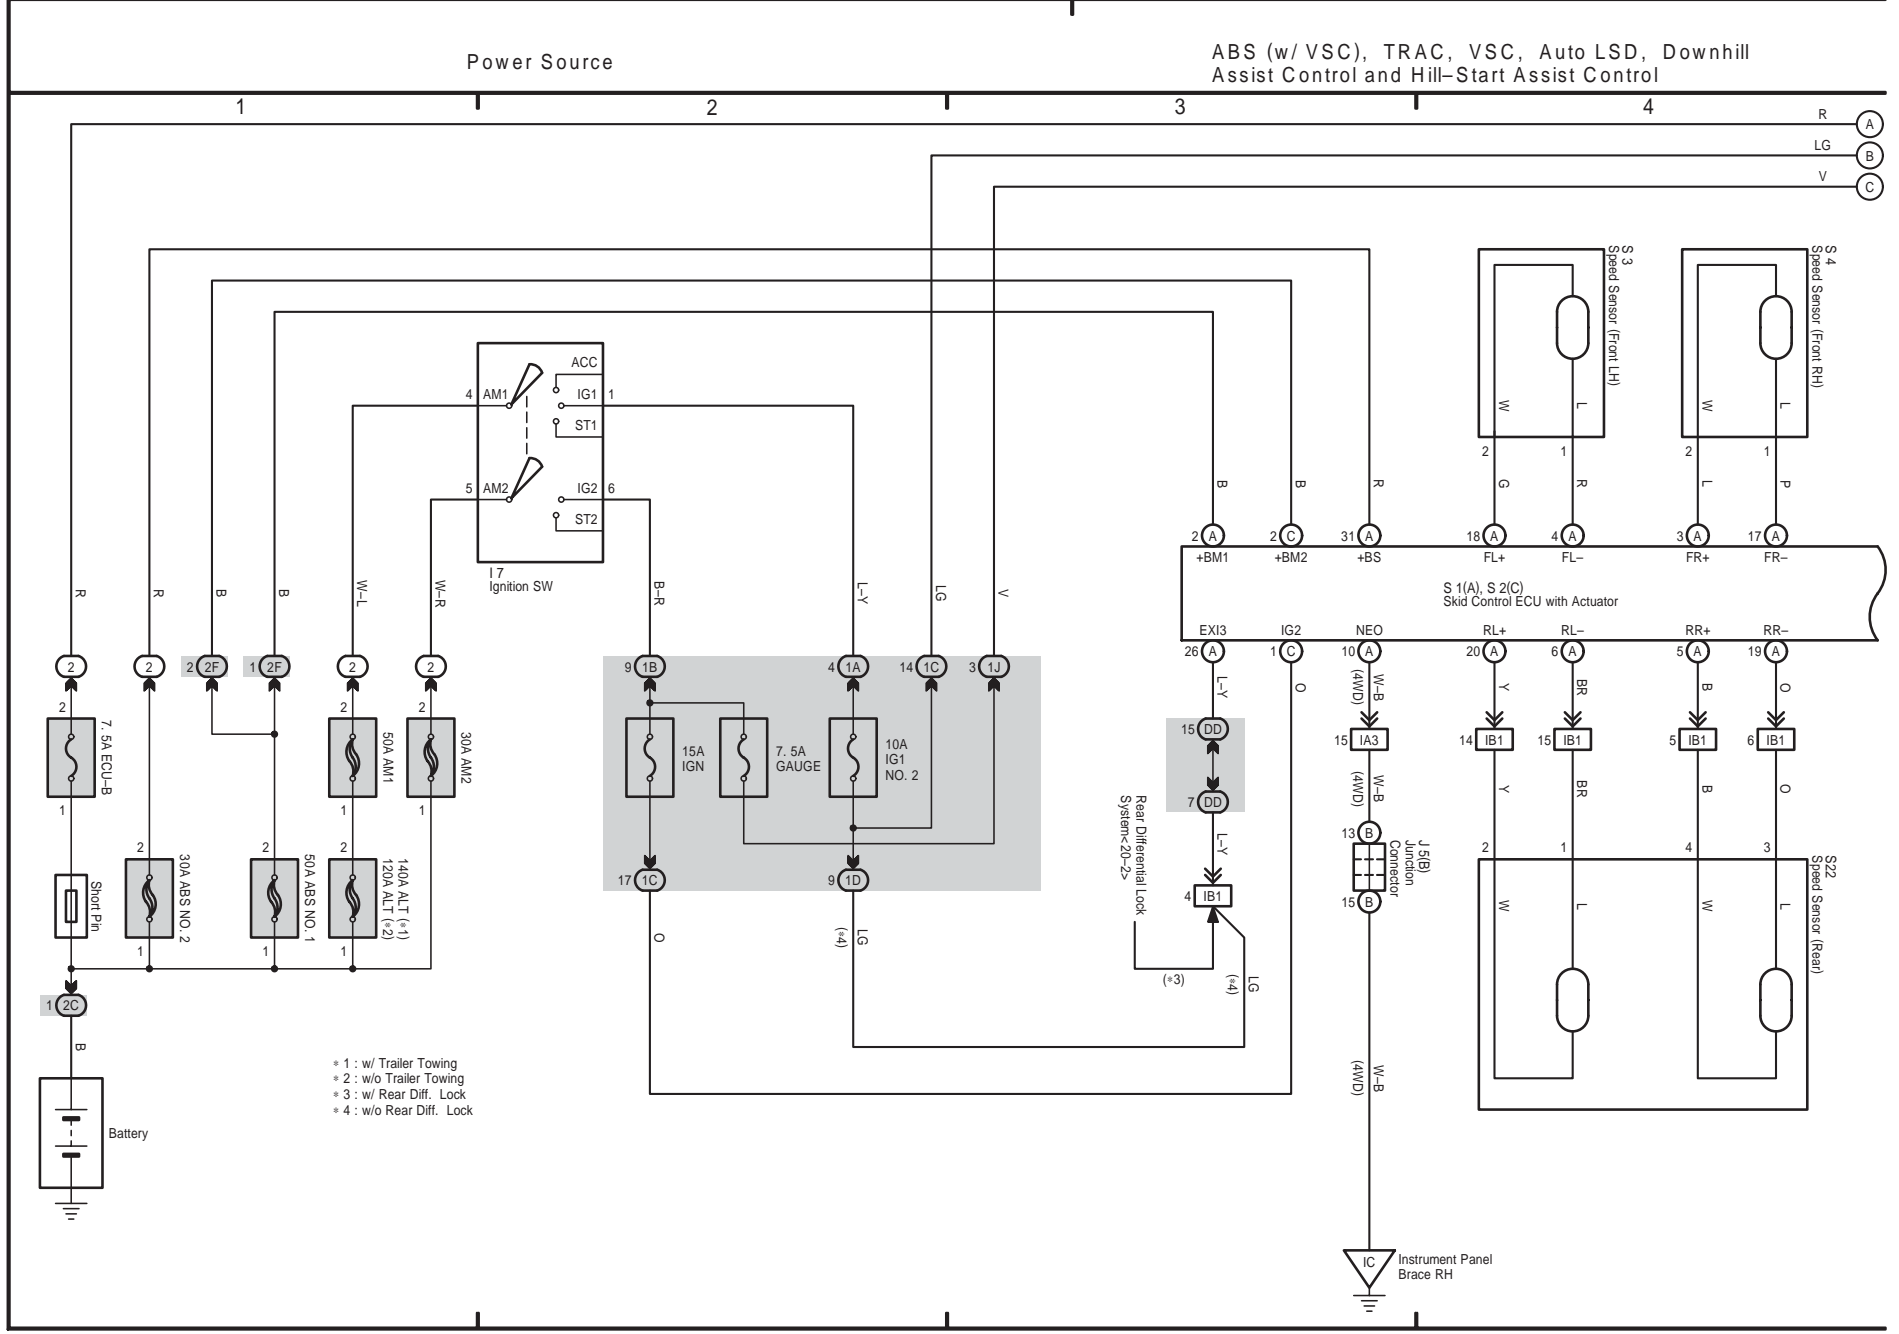

ABS (w/ VSC), TRAC, VSC, Auto LSD, Downhill Assist Control and Hill-Start Assist Control

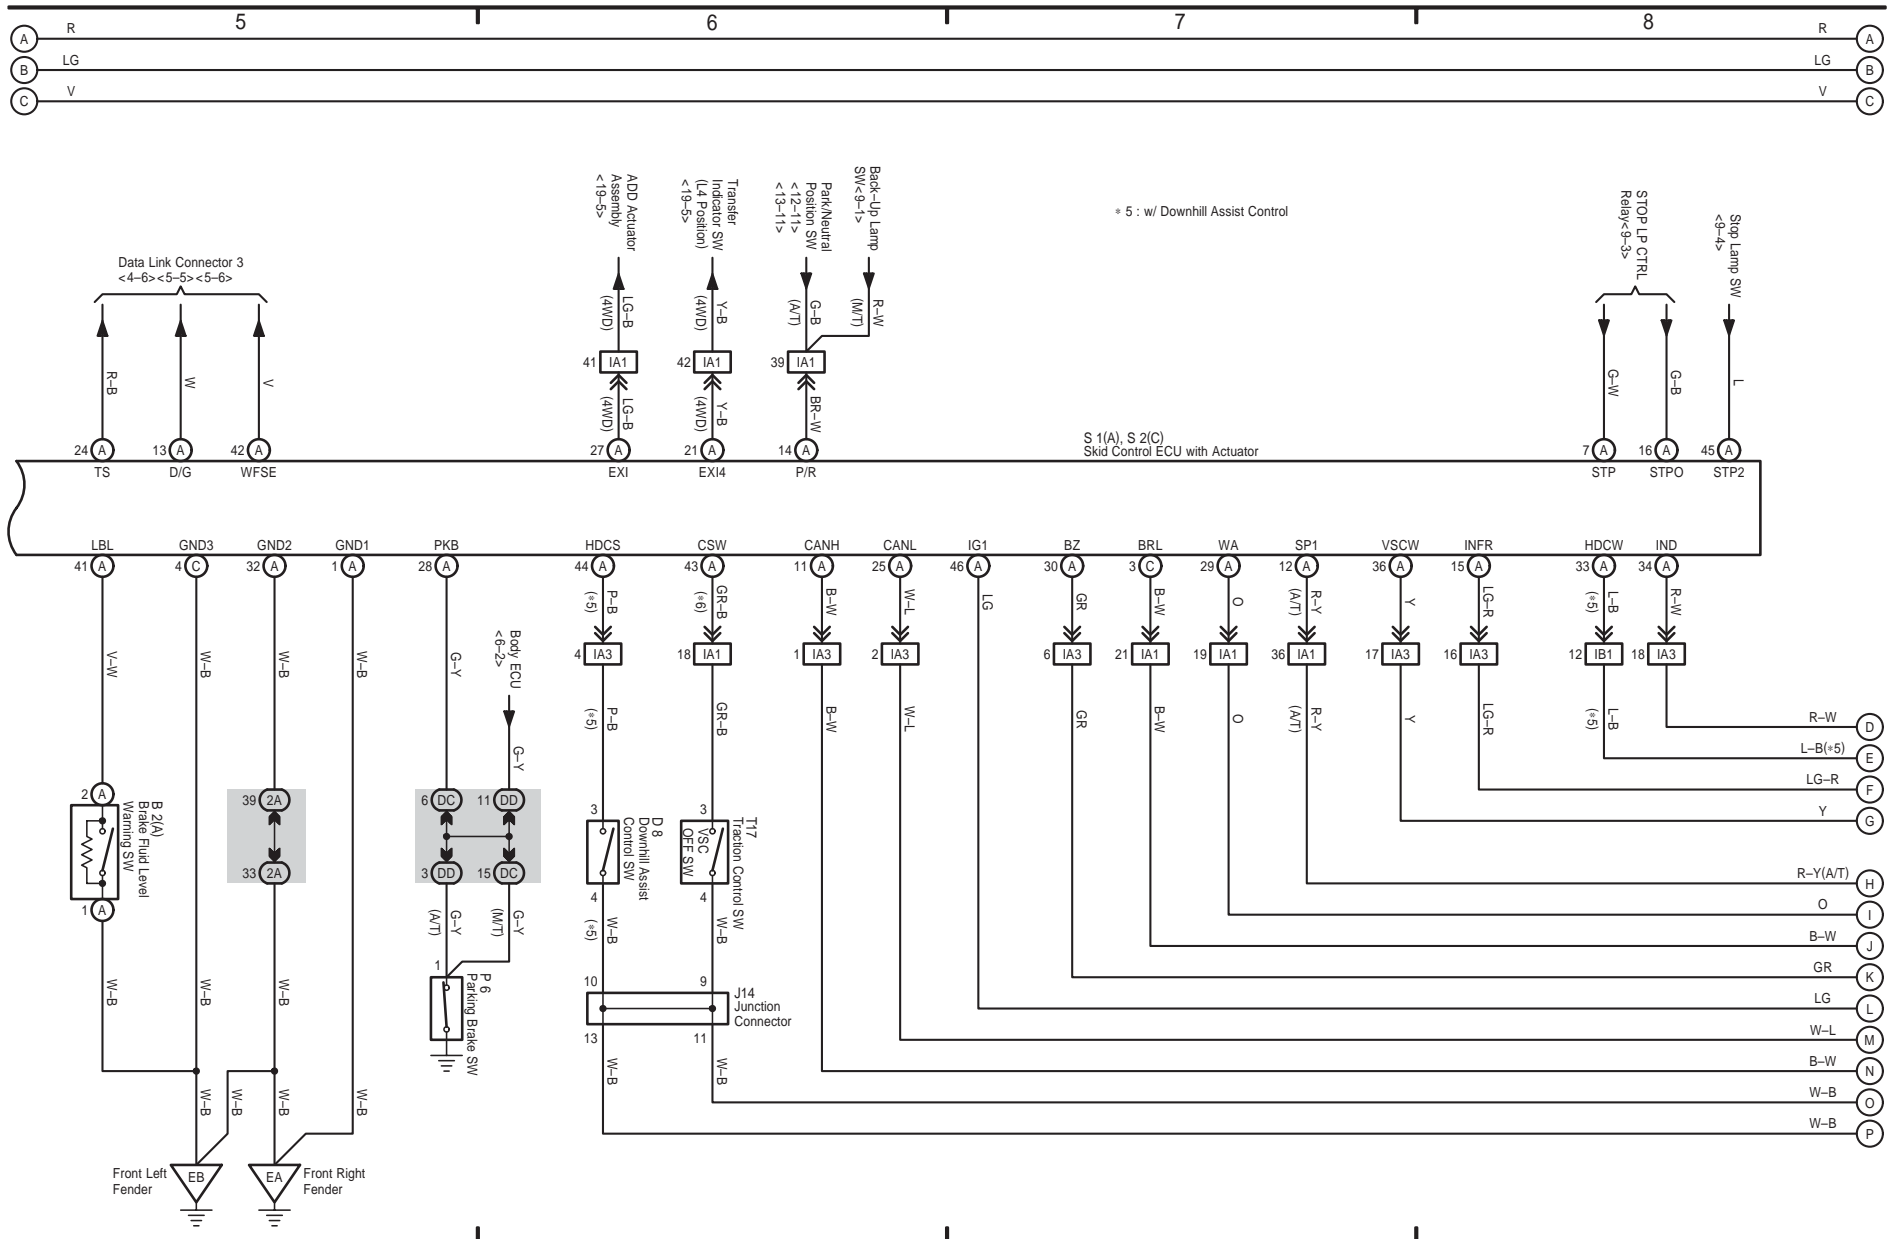


TOYOTA TACOMA (EM03N0U)




14 TOYOTA TACOMA (Cont' d)


ABS (w/ VSC), TRAC, VSC, Auto LSD, Downhill Assist Control and Hill-Start Assist Control

Multiplex Communication System (CAN)

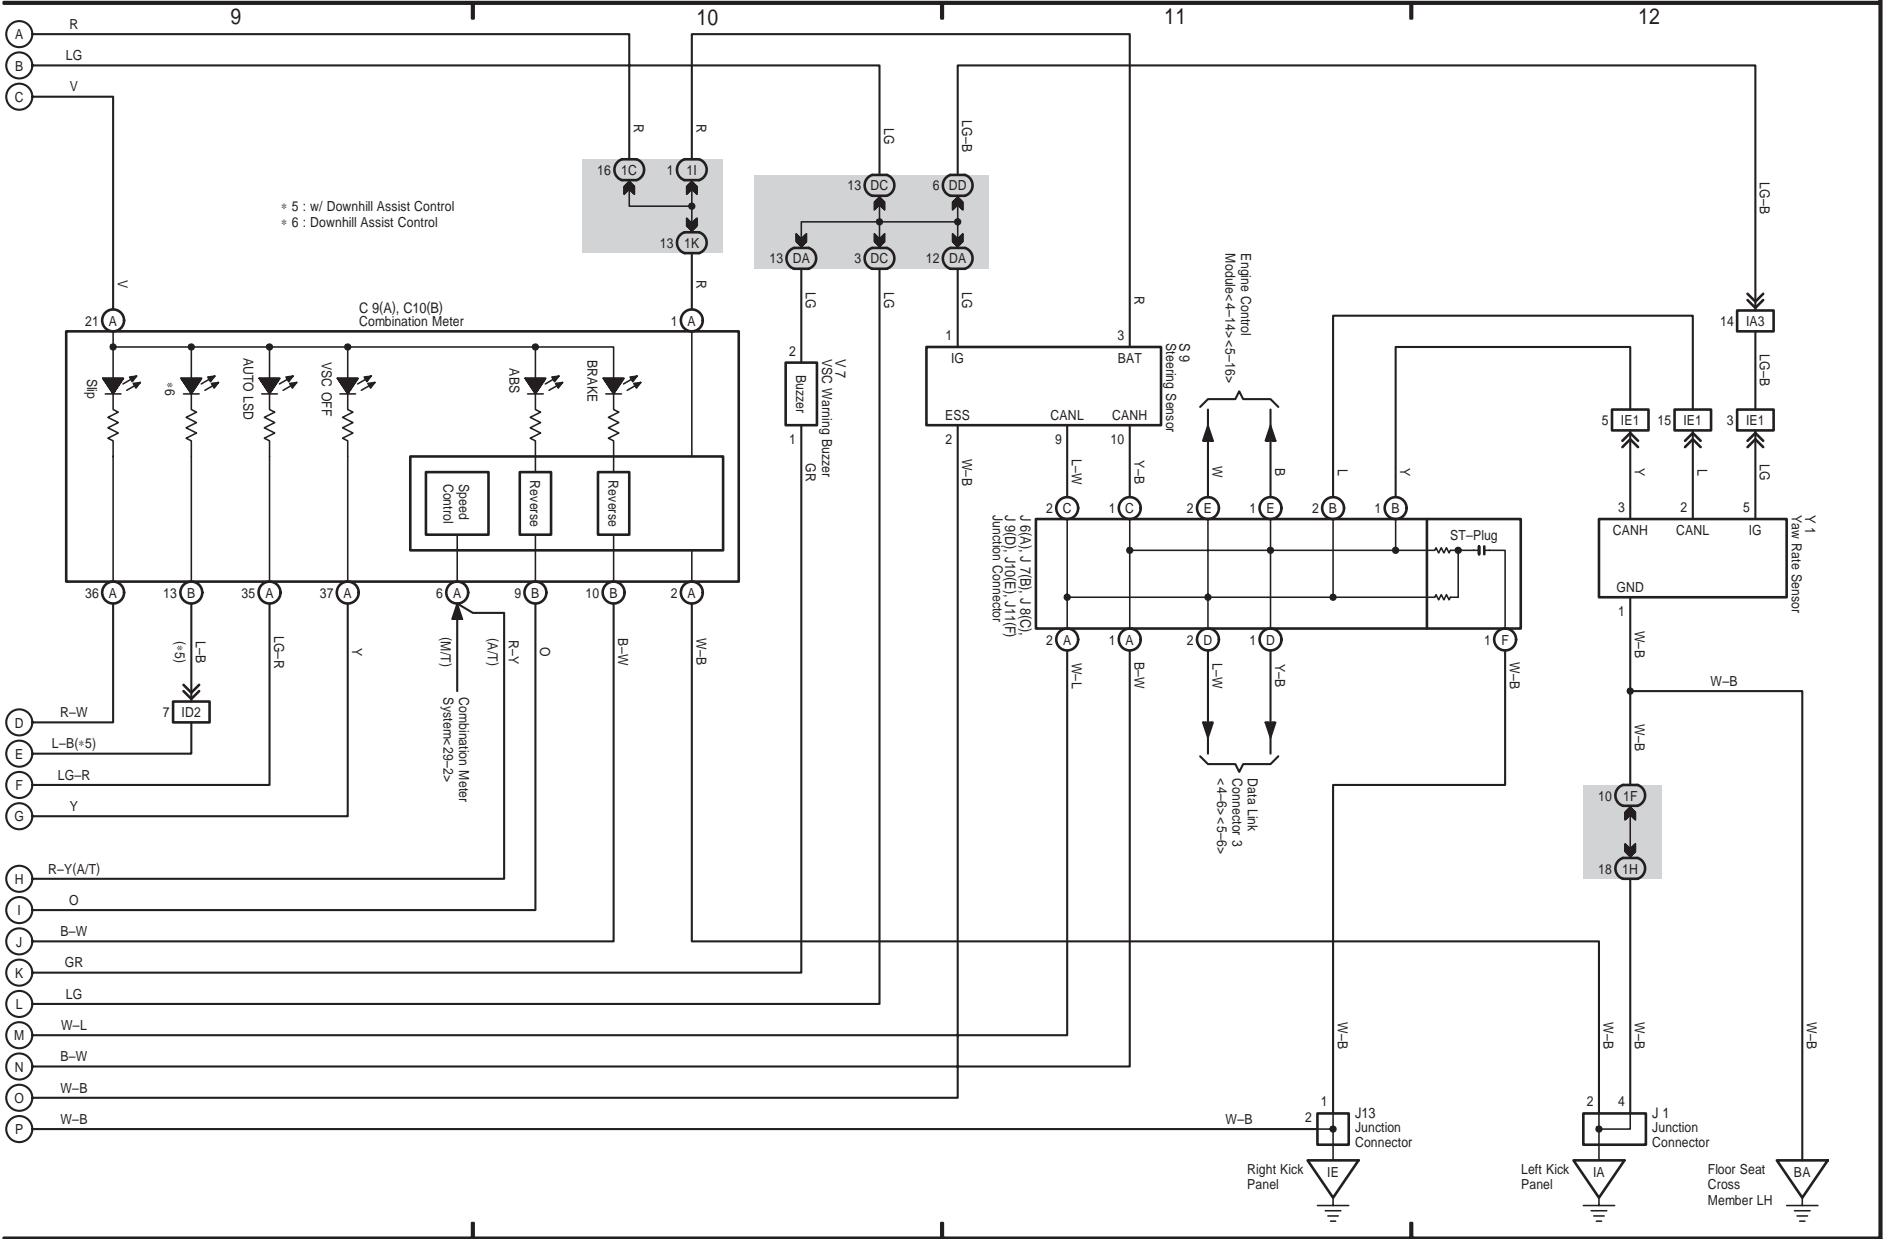


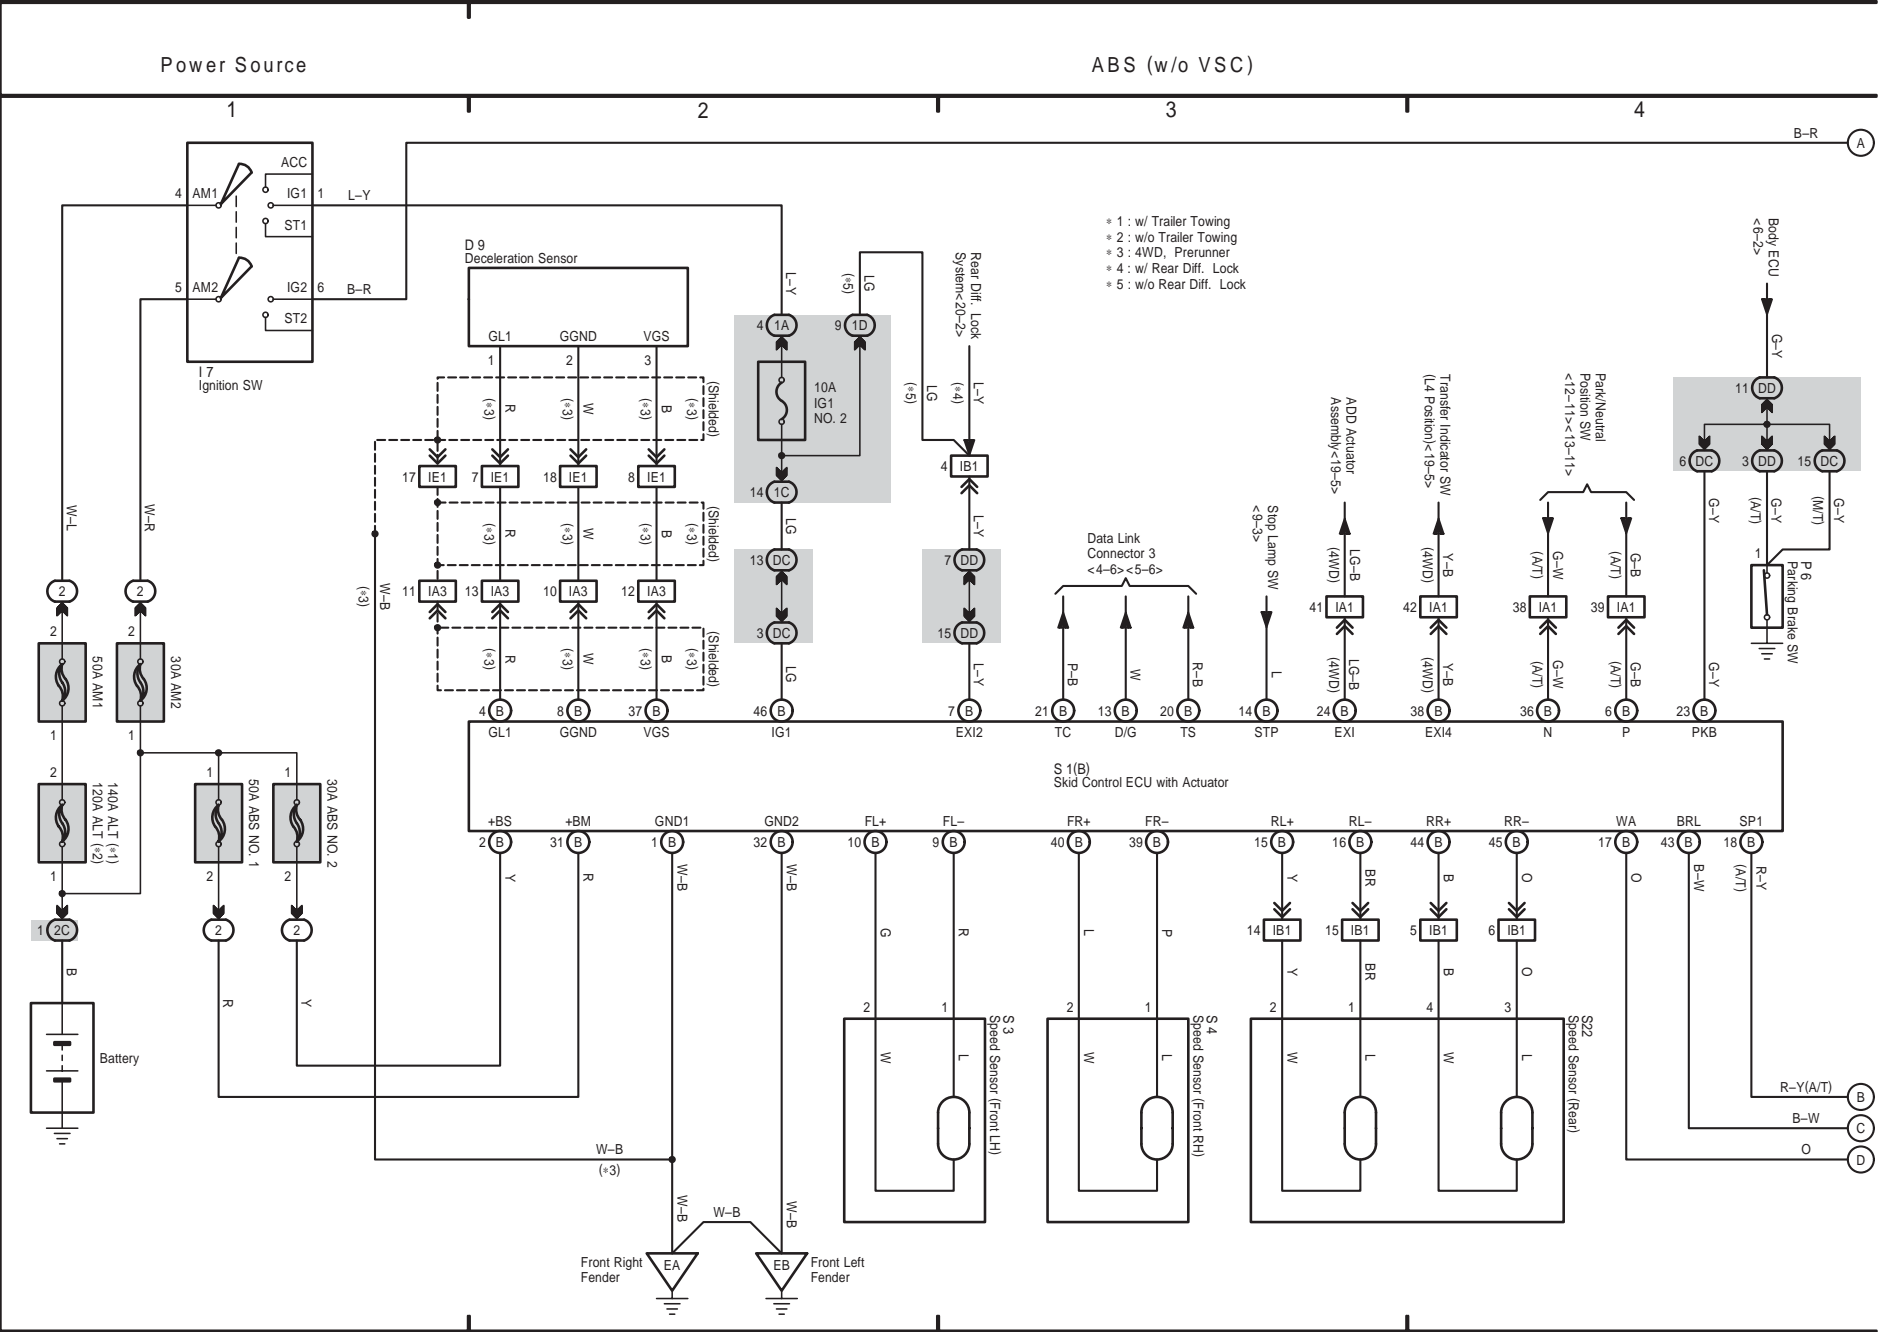

ABS (w/o VSC)

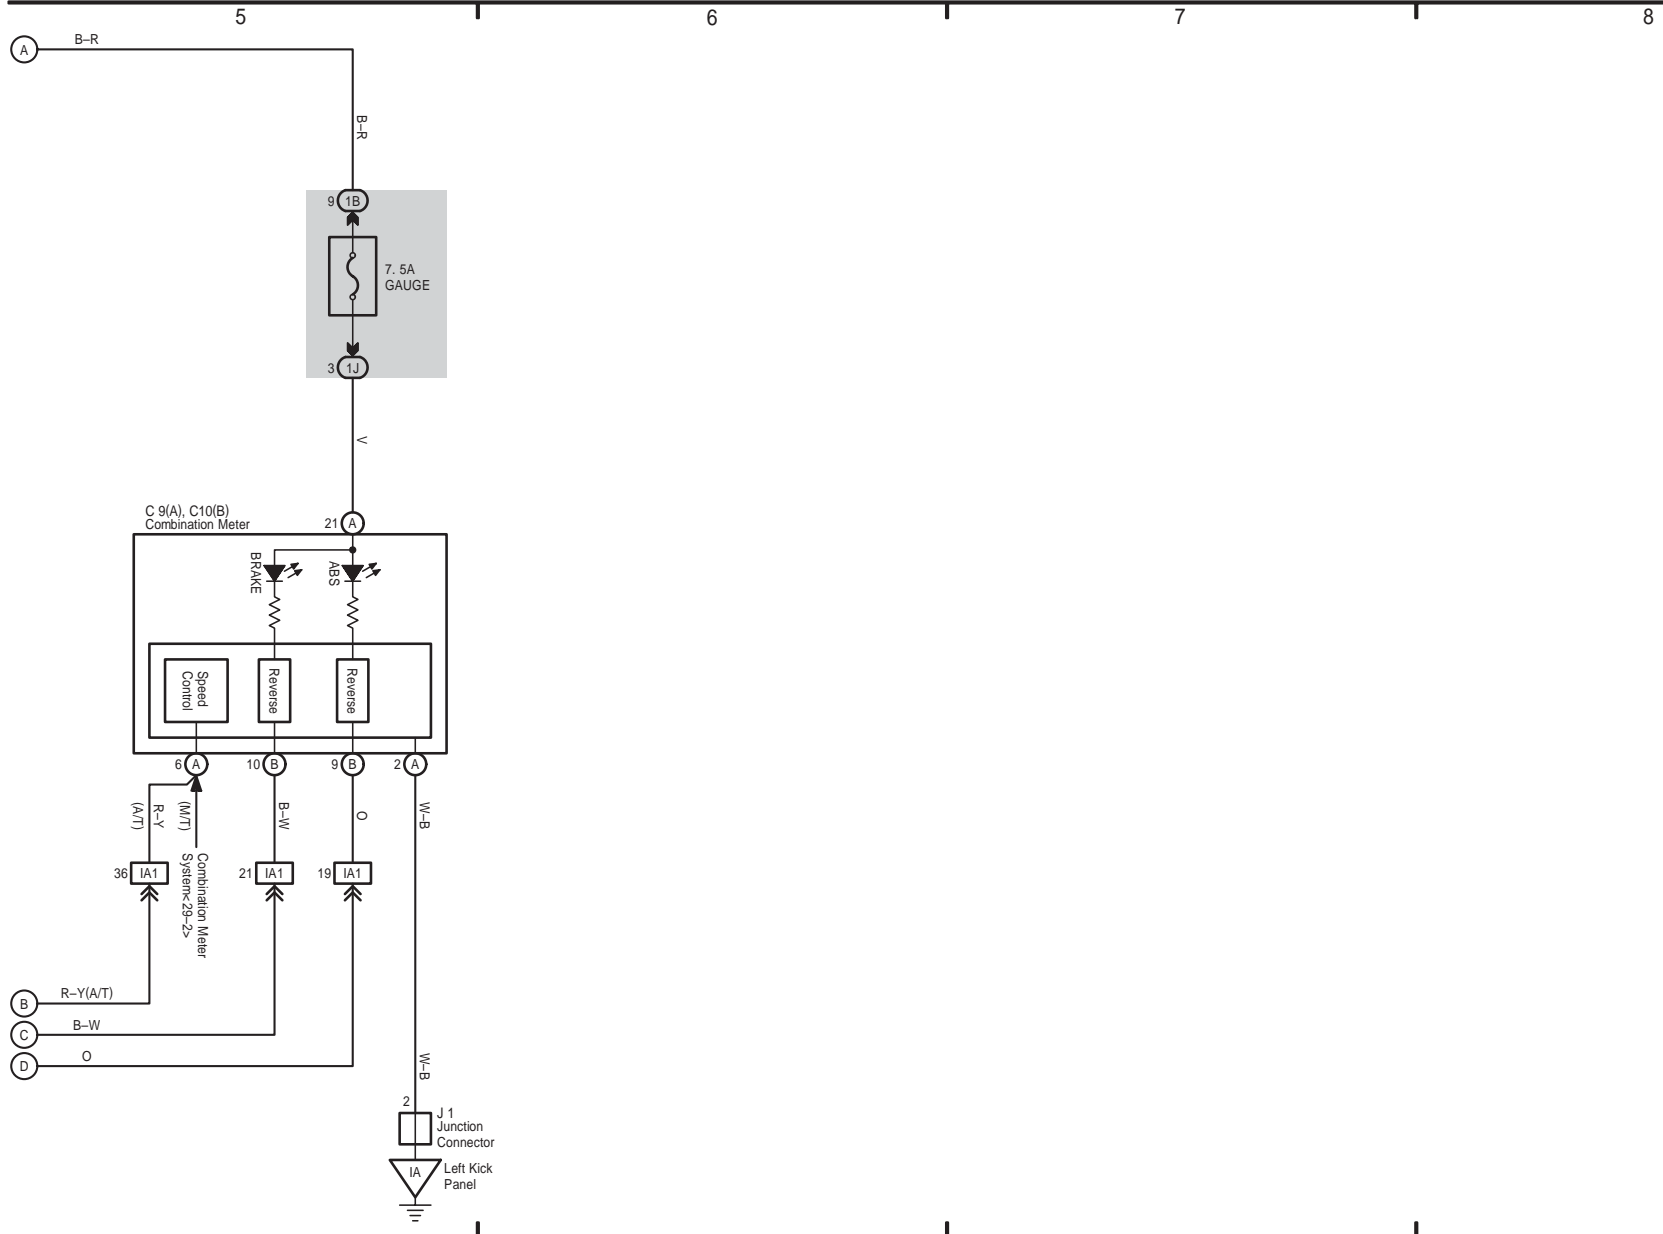


TOYOTA TACOMA (EM03N0U)

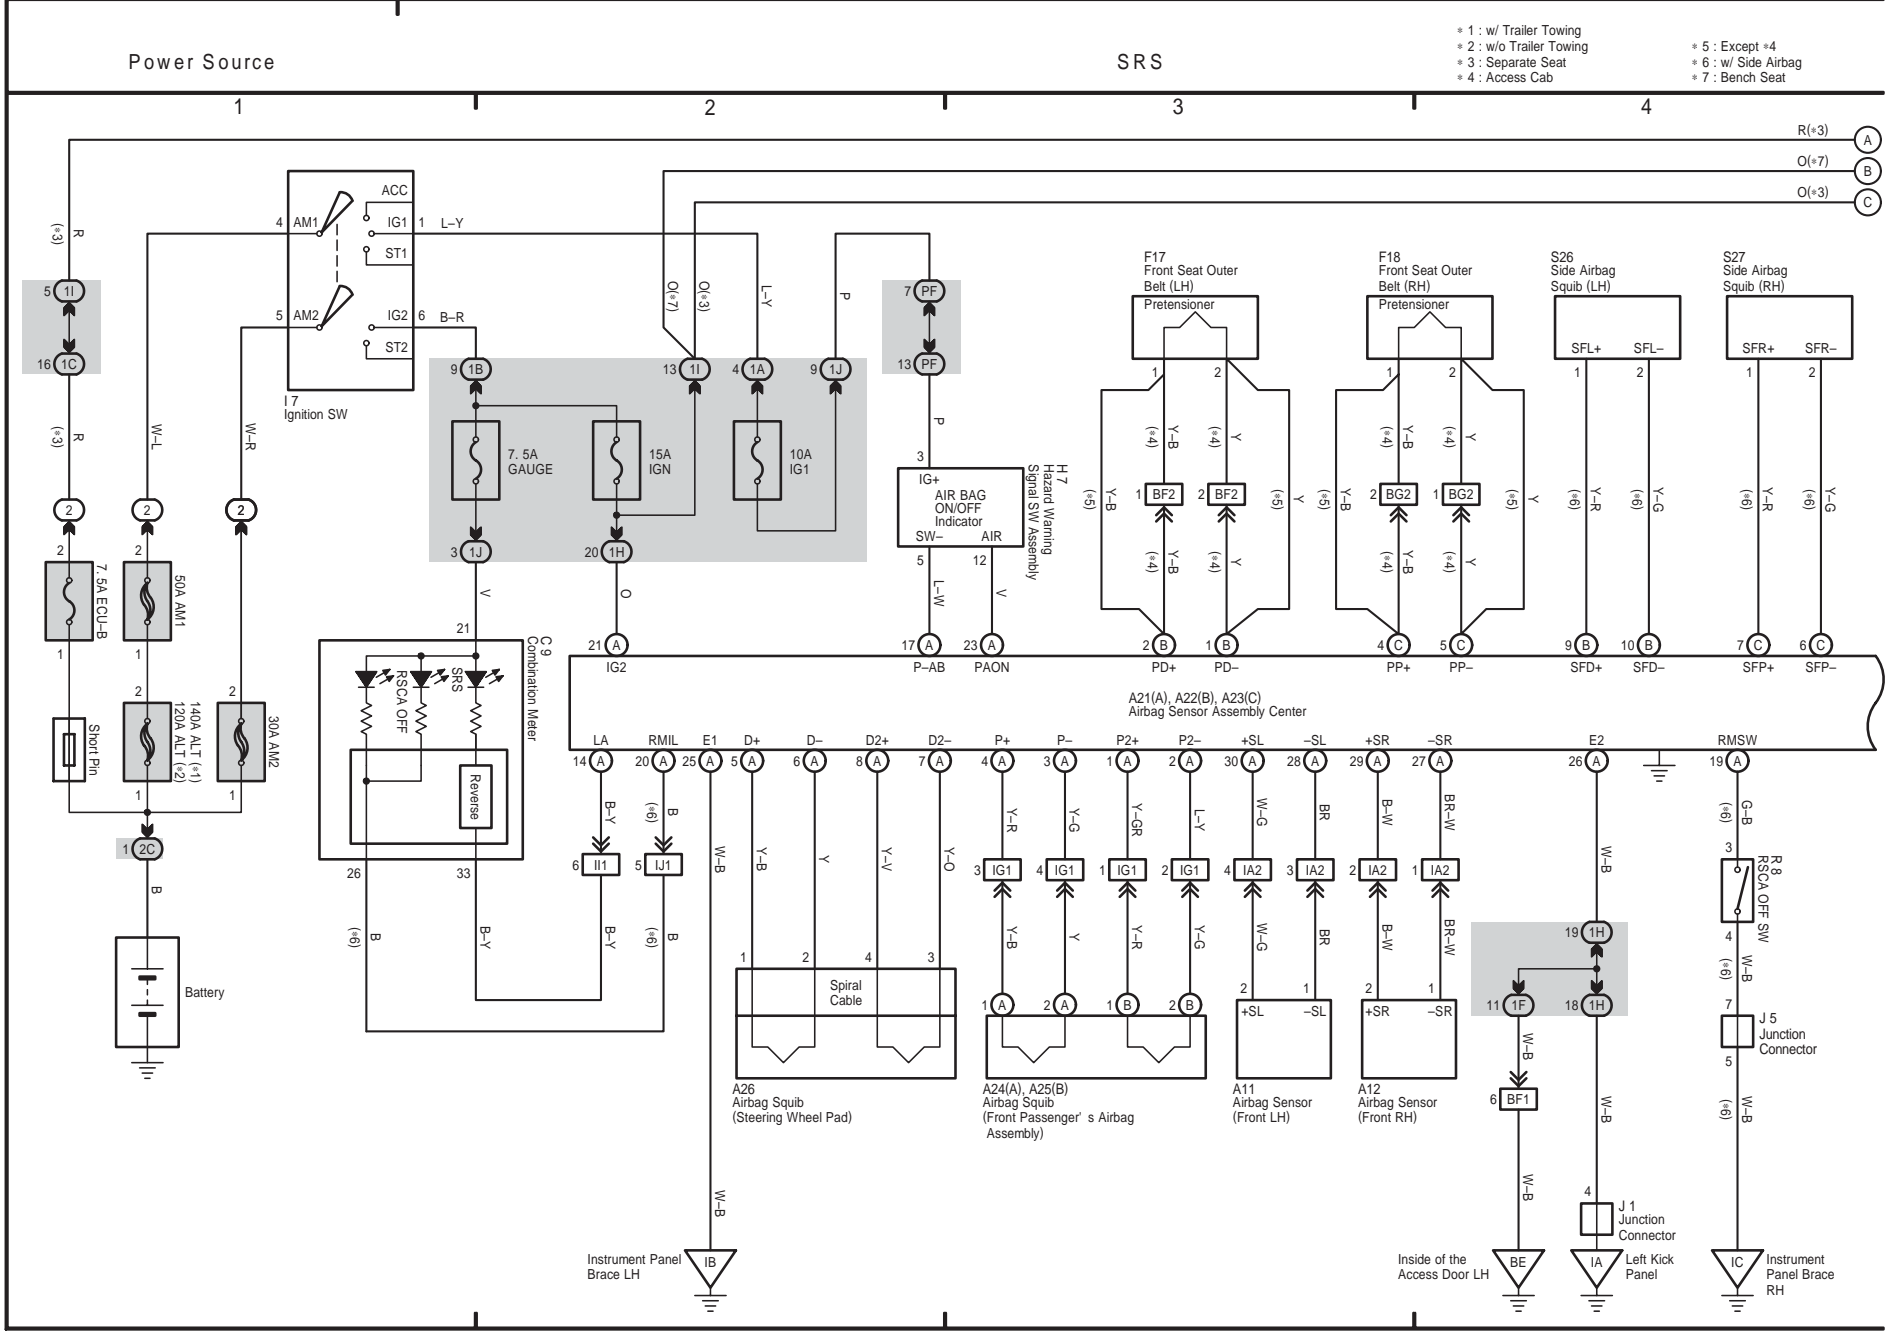

SRS

- * 3 : Separate Seat
- * 6 : w/ Side Airbag
- * 7 : Bench Seat
- * 8 : w/ Airbag Cut Off SW

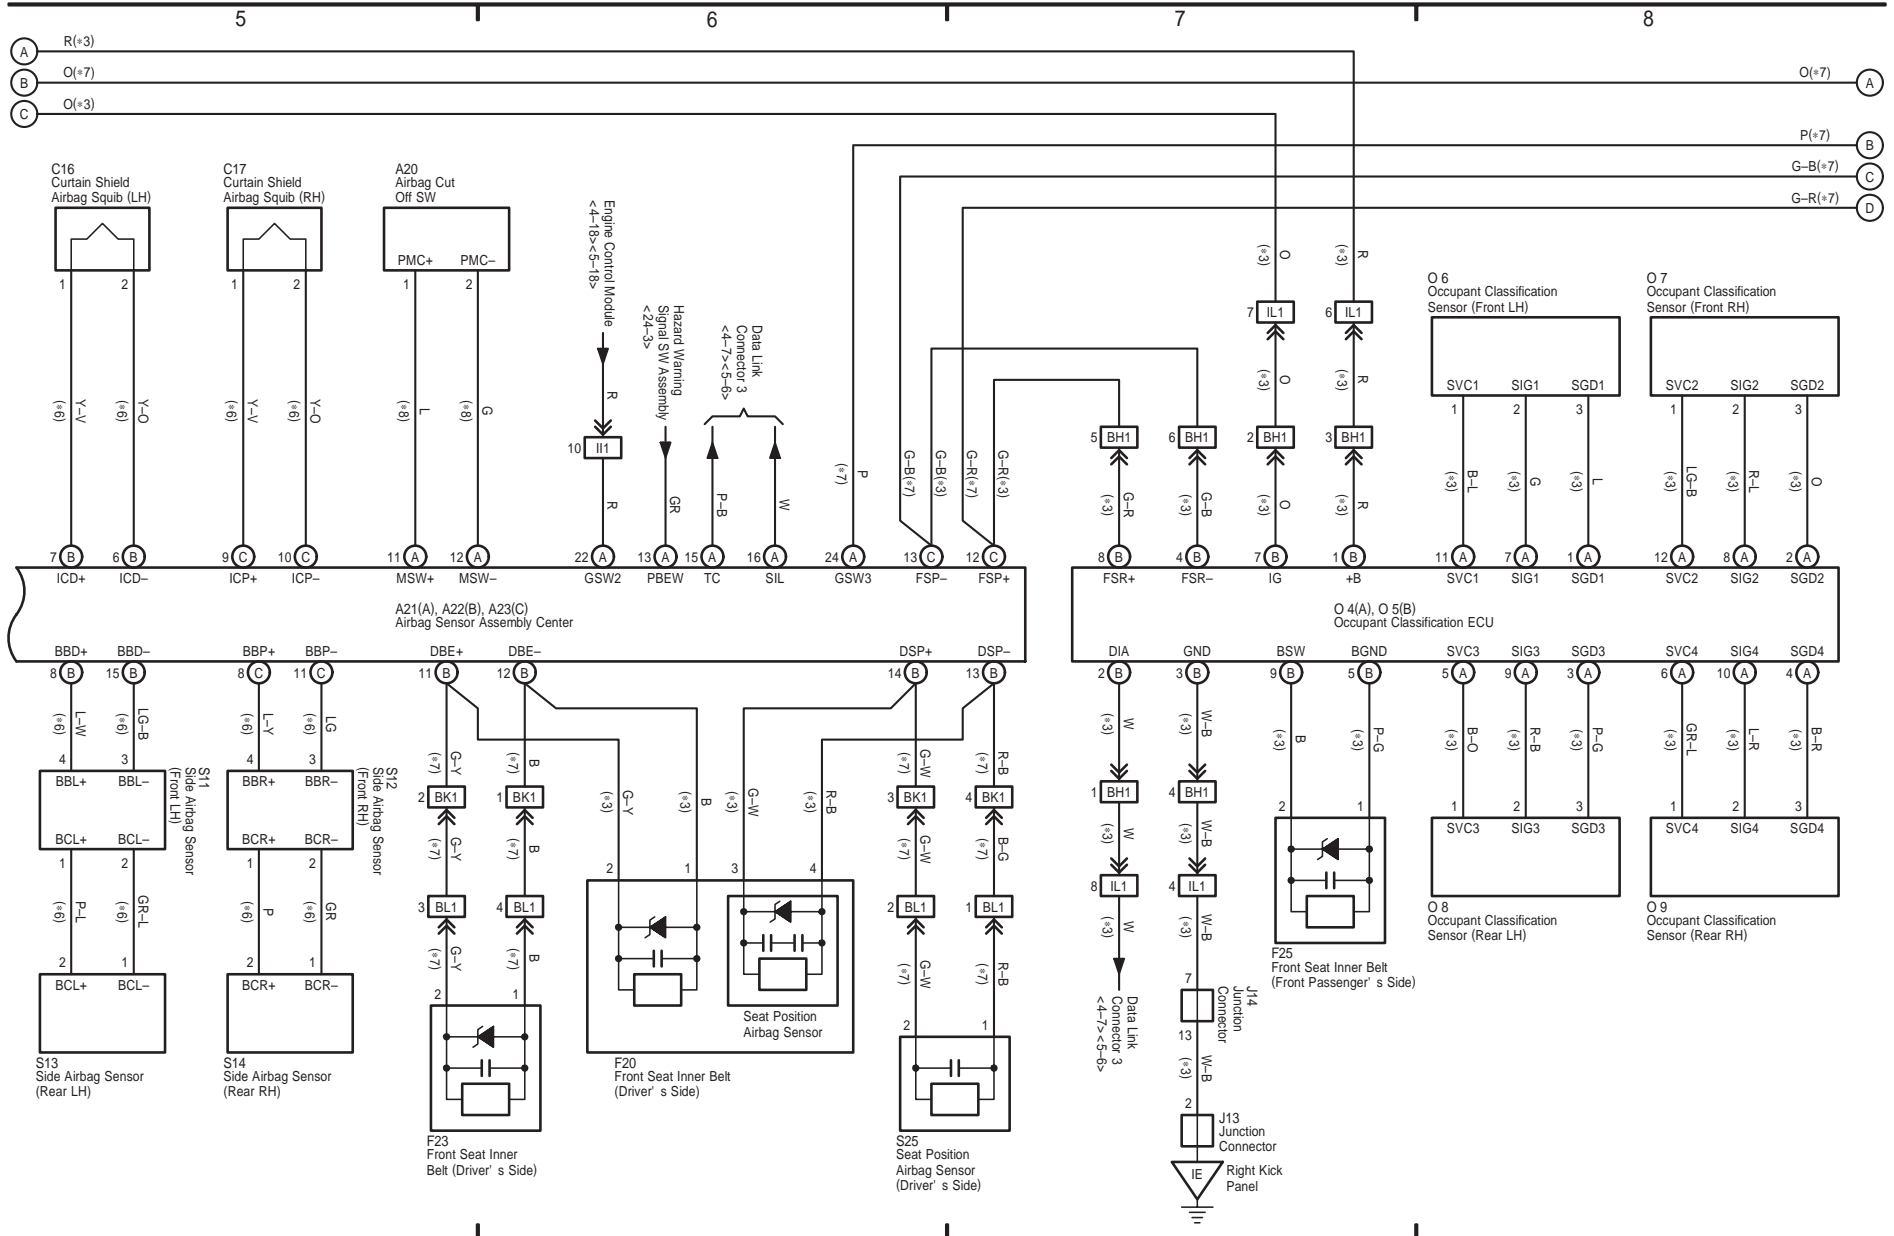


TOYOTA TACOMA (EM03N0U)




16 TOYOTA TACOMA(Cont' d)

SRS

* 7 : Bench Seat

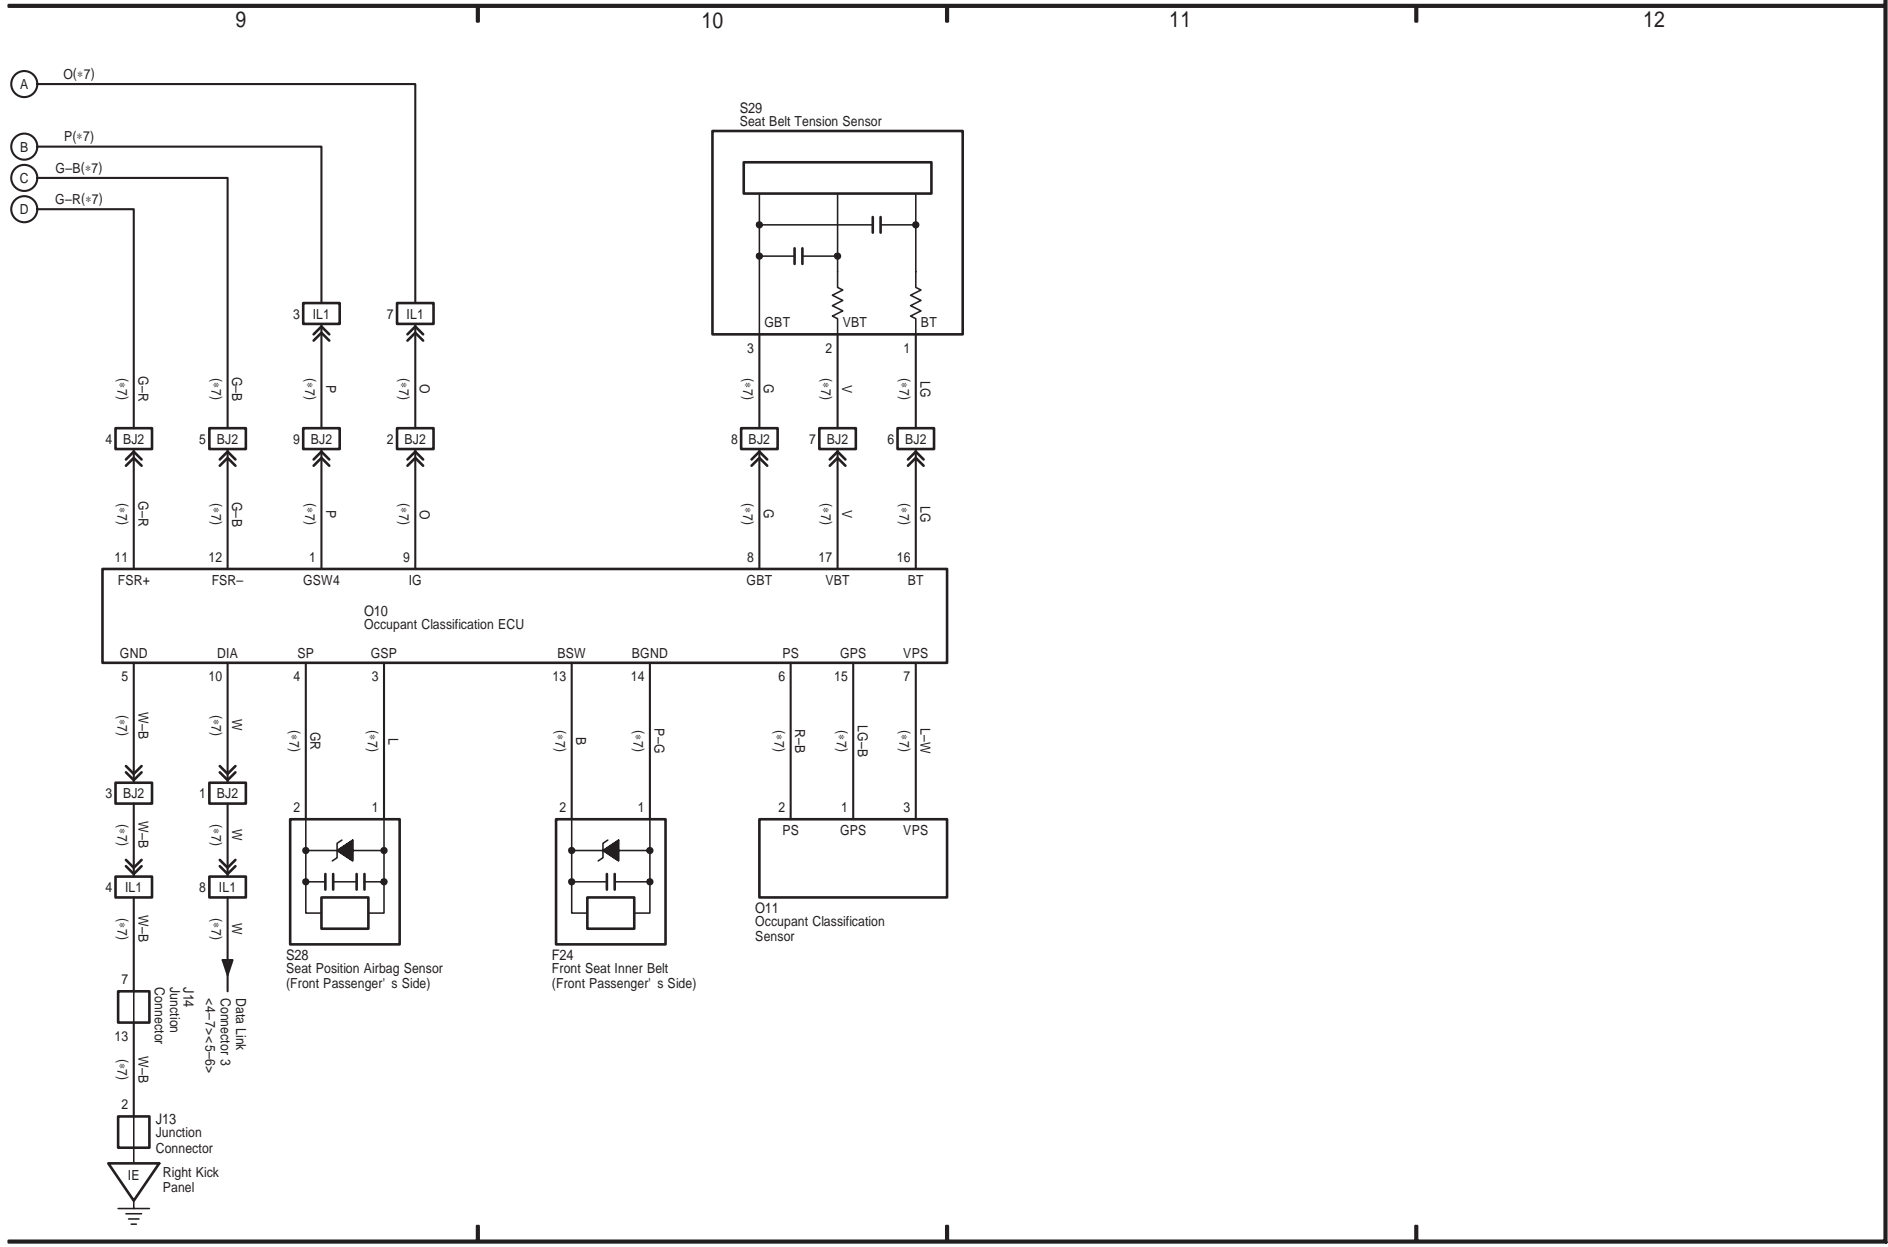



17 TOYOTA TACOMA (Cont' d)

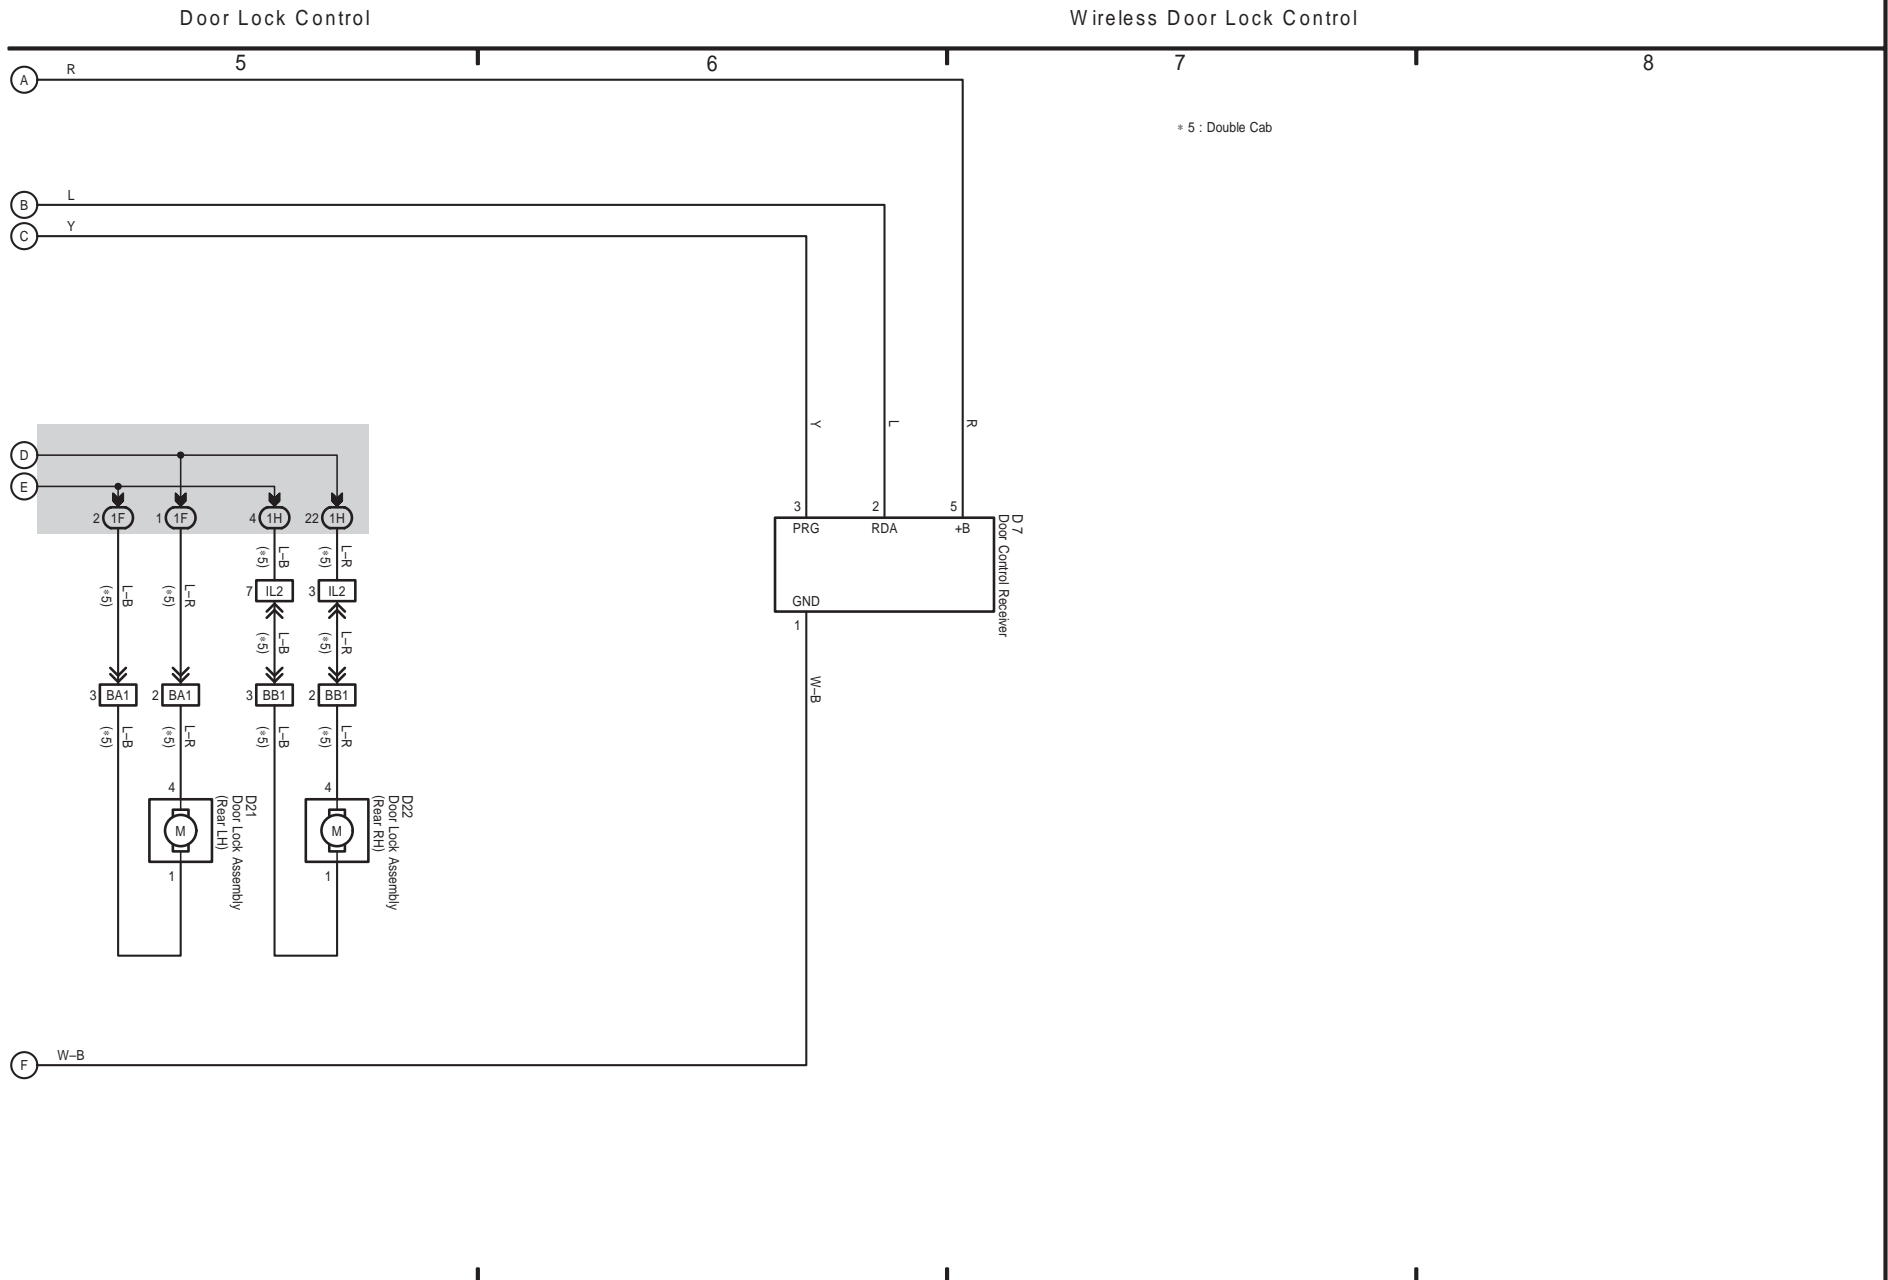

TOYOTA TACOMA (EM03N0U)


18 TOYOTA TACOMA

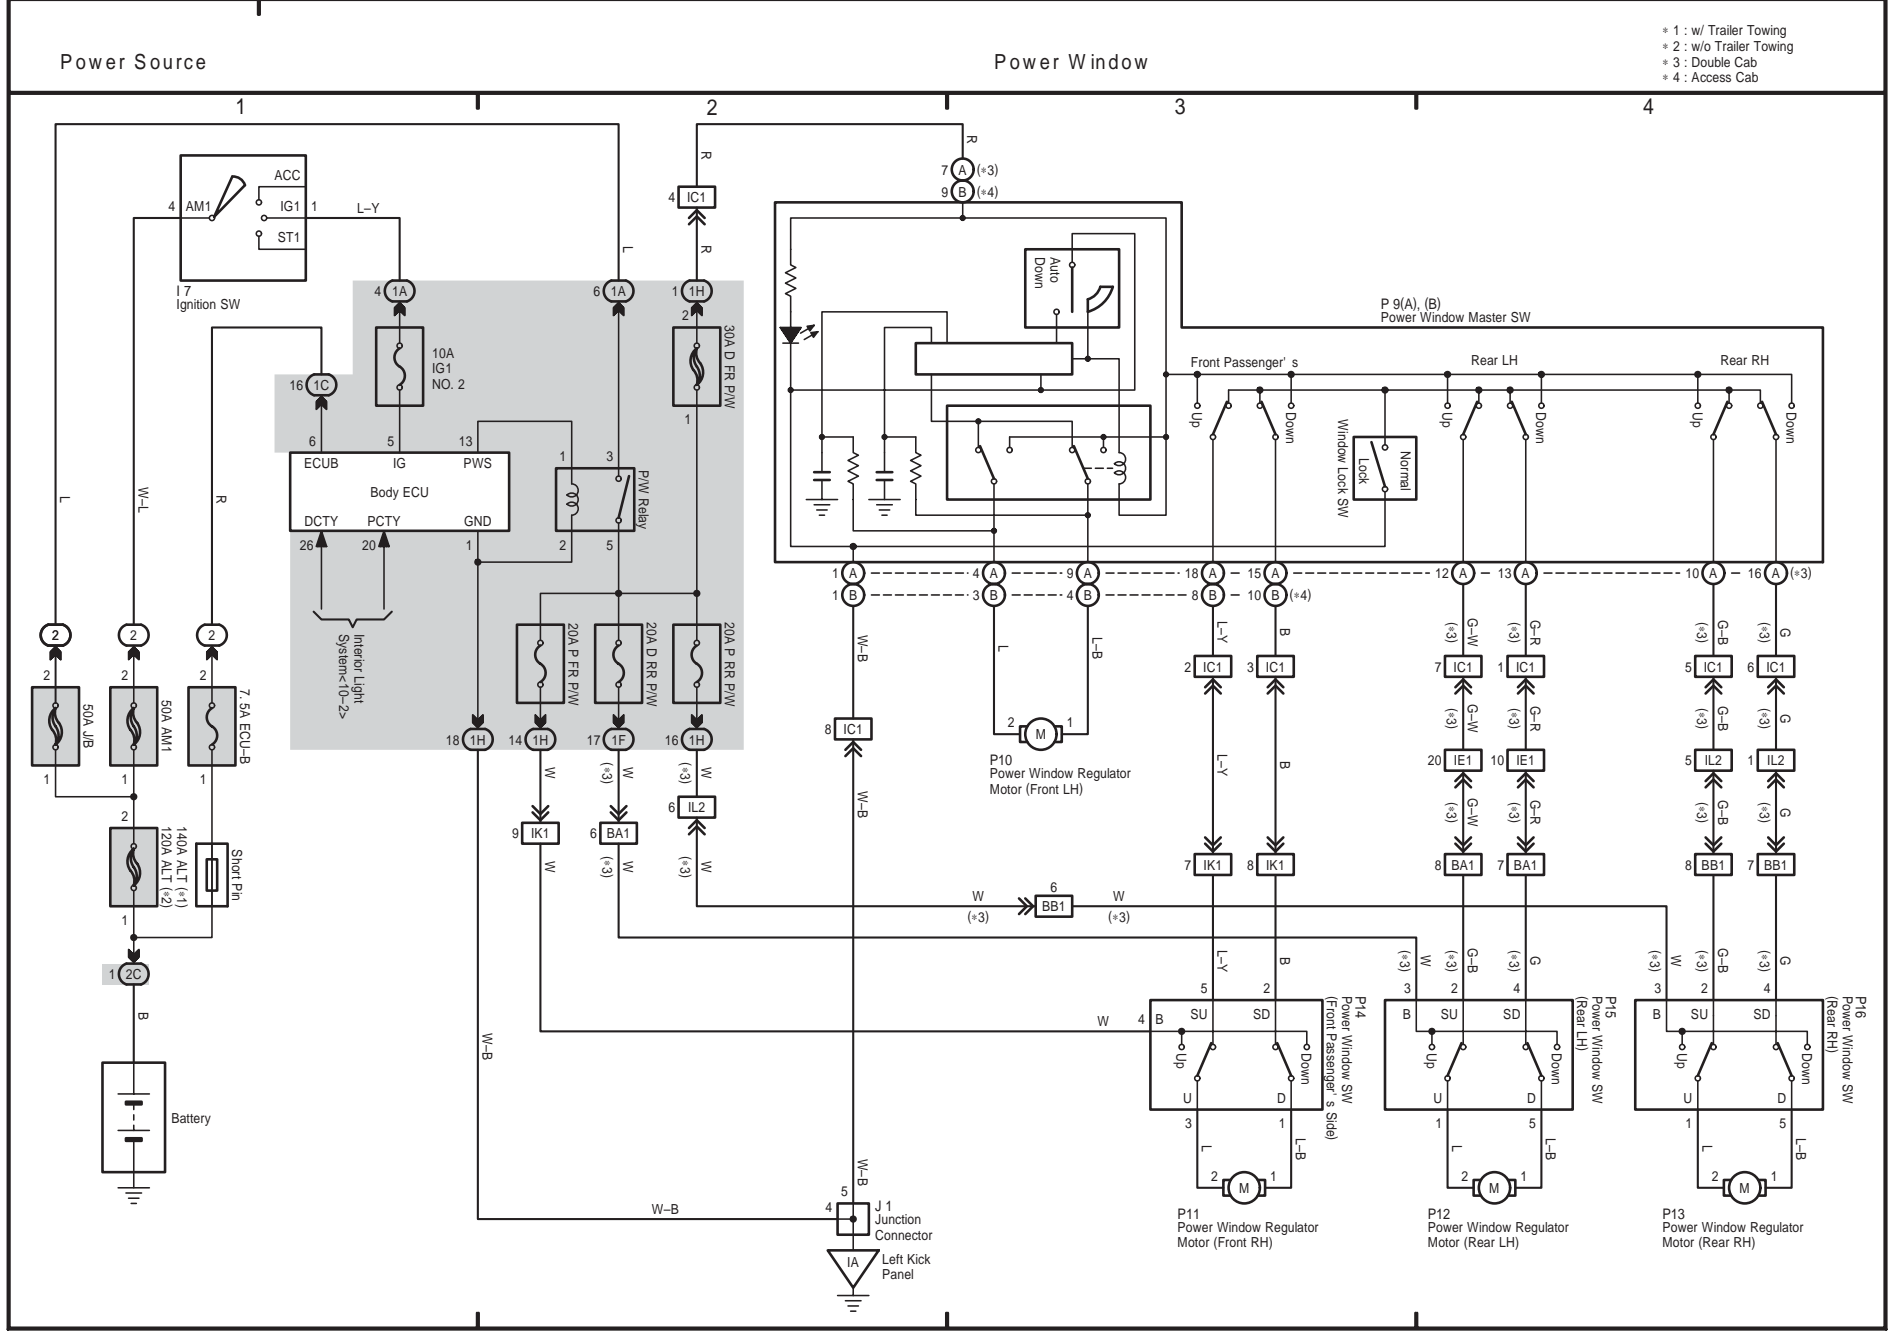

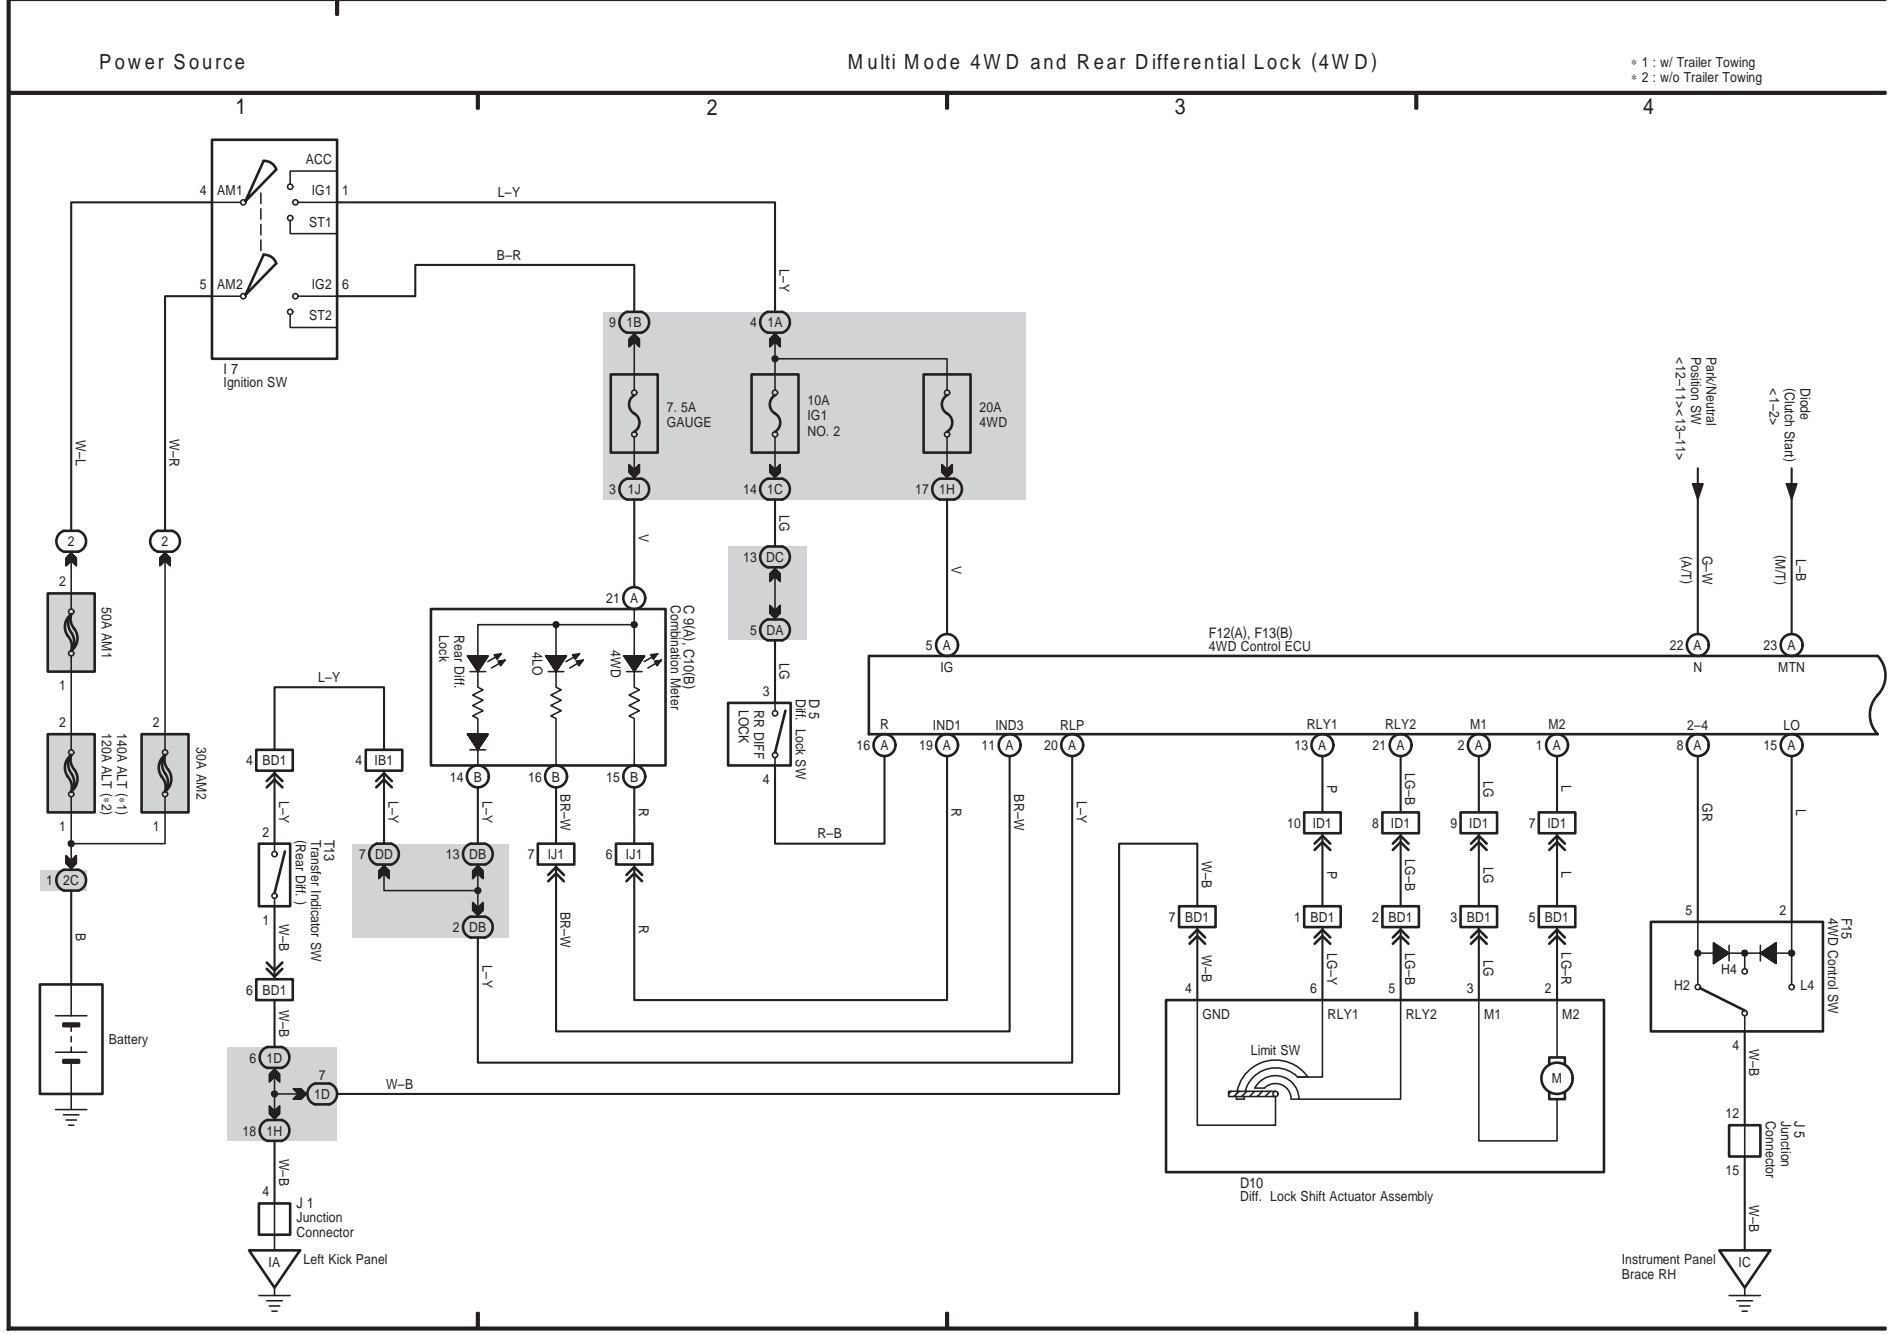


Multi Mode 4WD and Rear Differential Lock (4WD)

+ 3 : w/ ADD
 + 4 : 1GR-FE
 + 5 : 2TR-FE

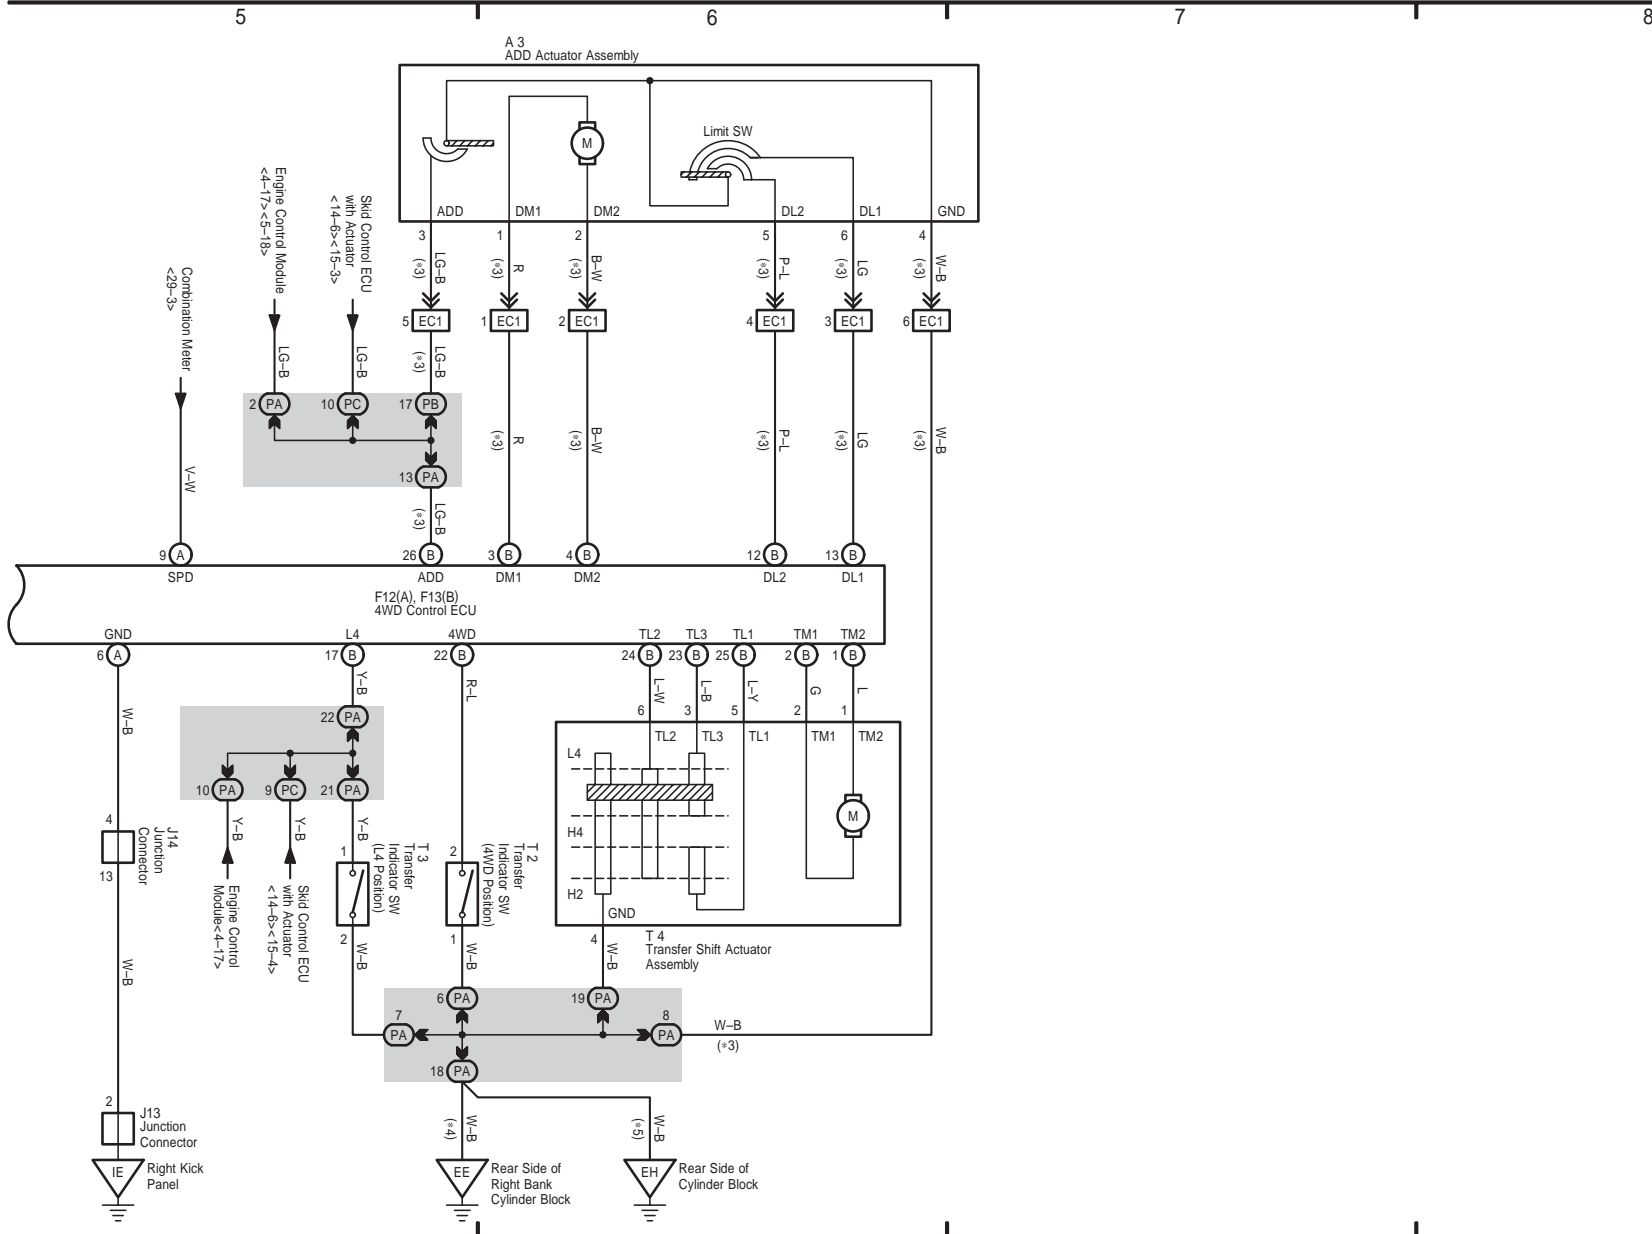

20 TOYOTA TACOMA

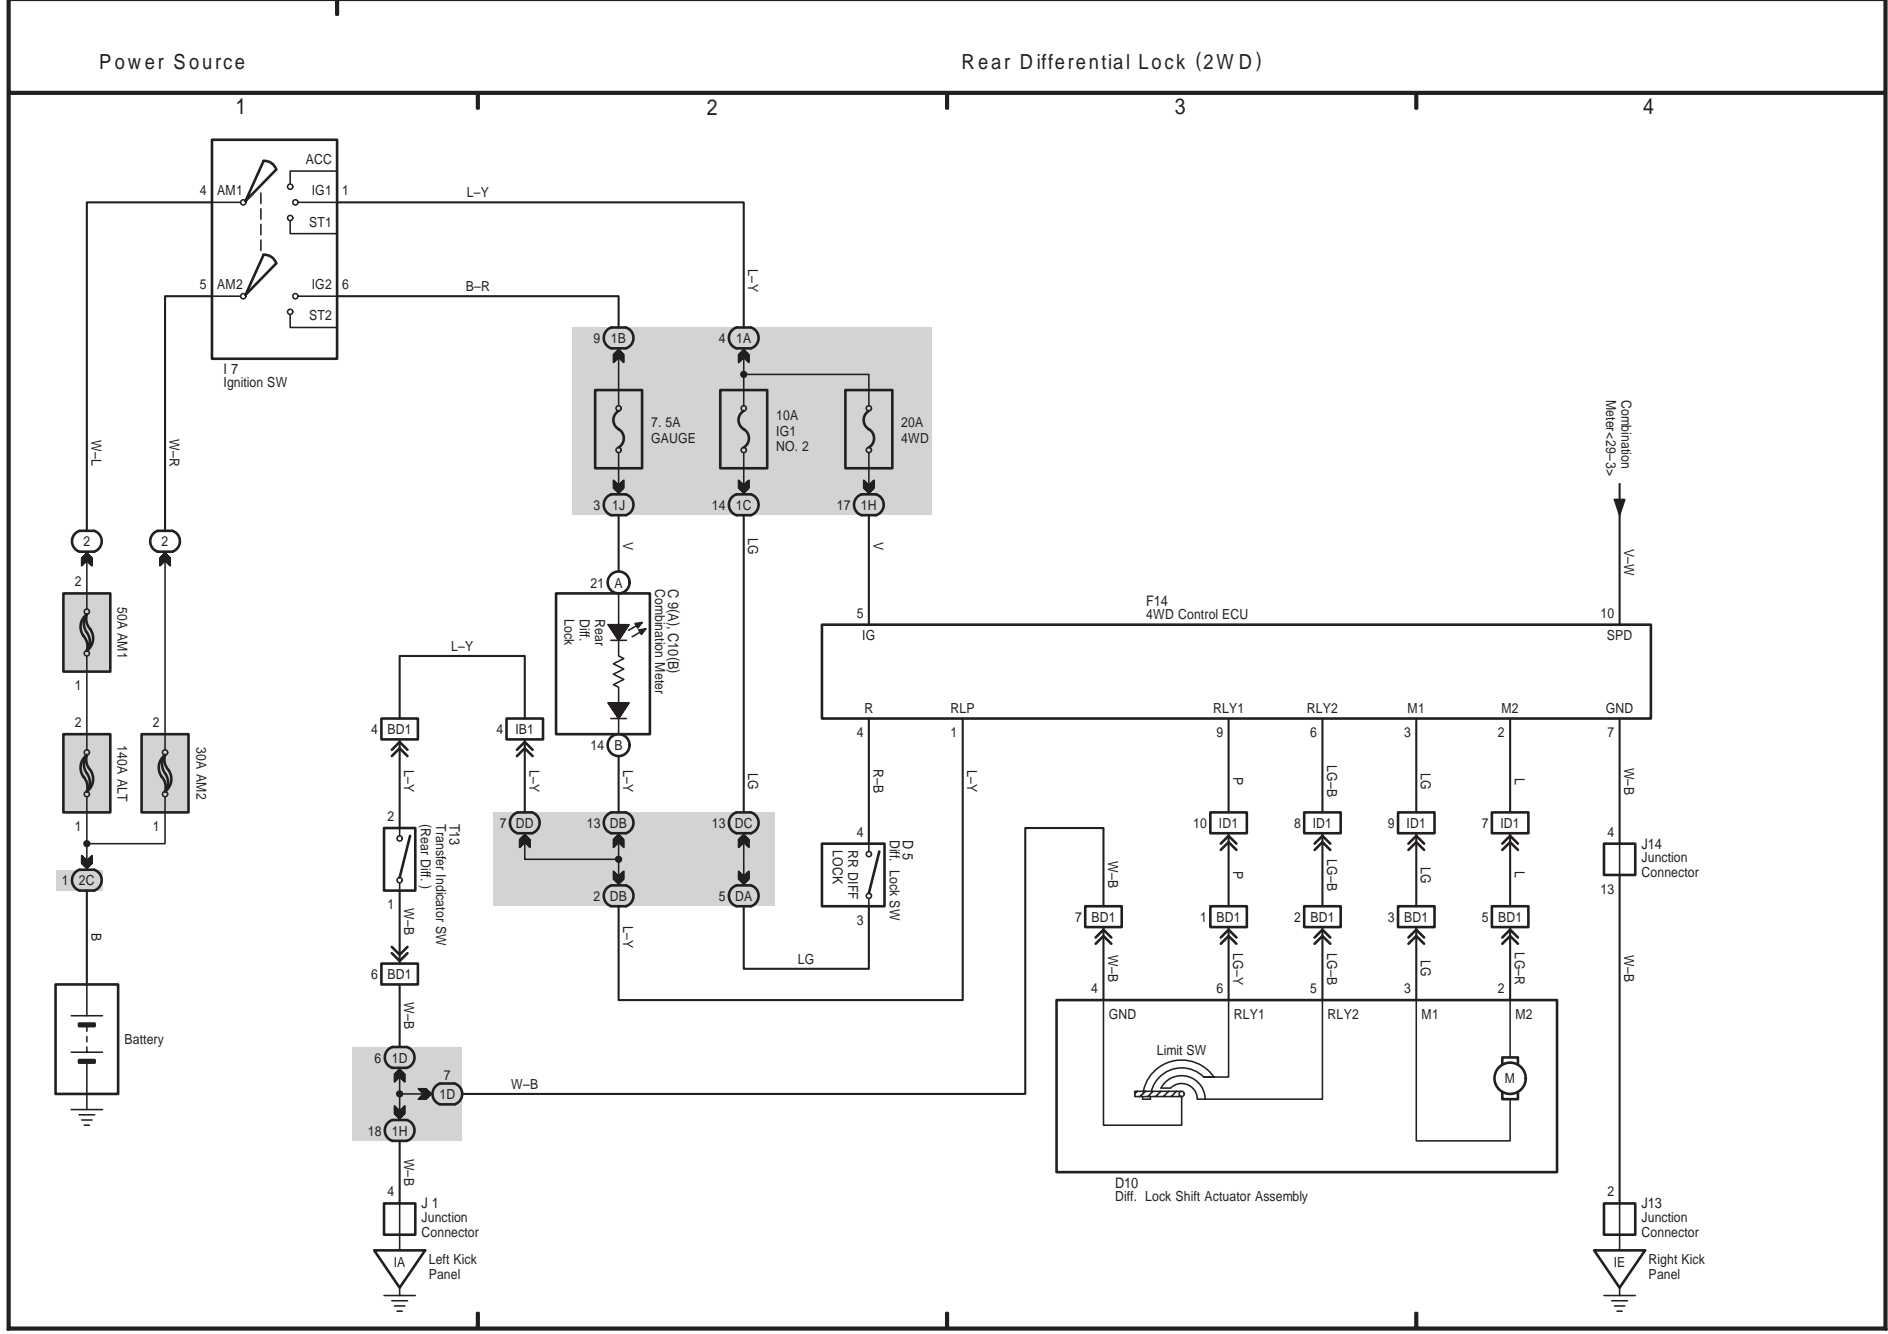


21 TOYOTA TACOMA

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ INT Time SW
- * 4 : w/o INT Time SW

Power Source


Wiper and Washer

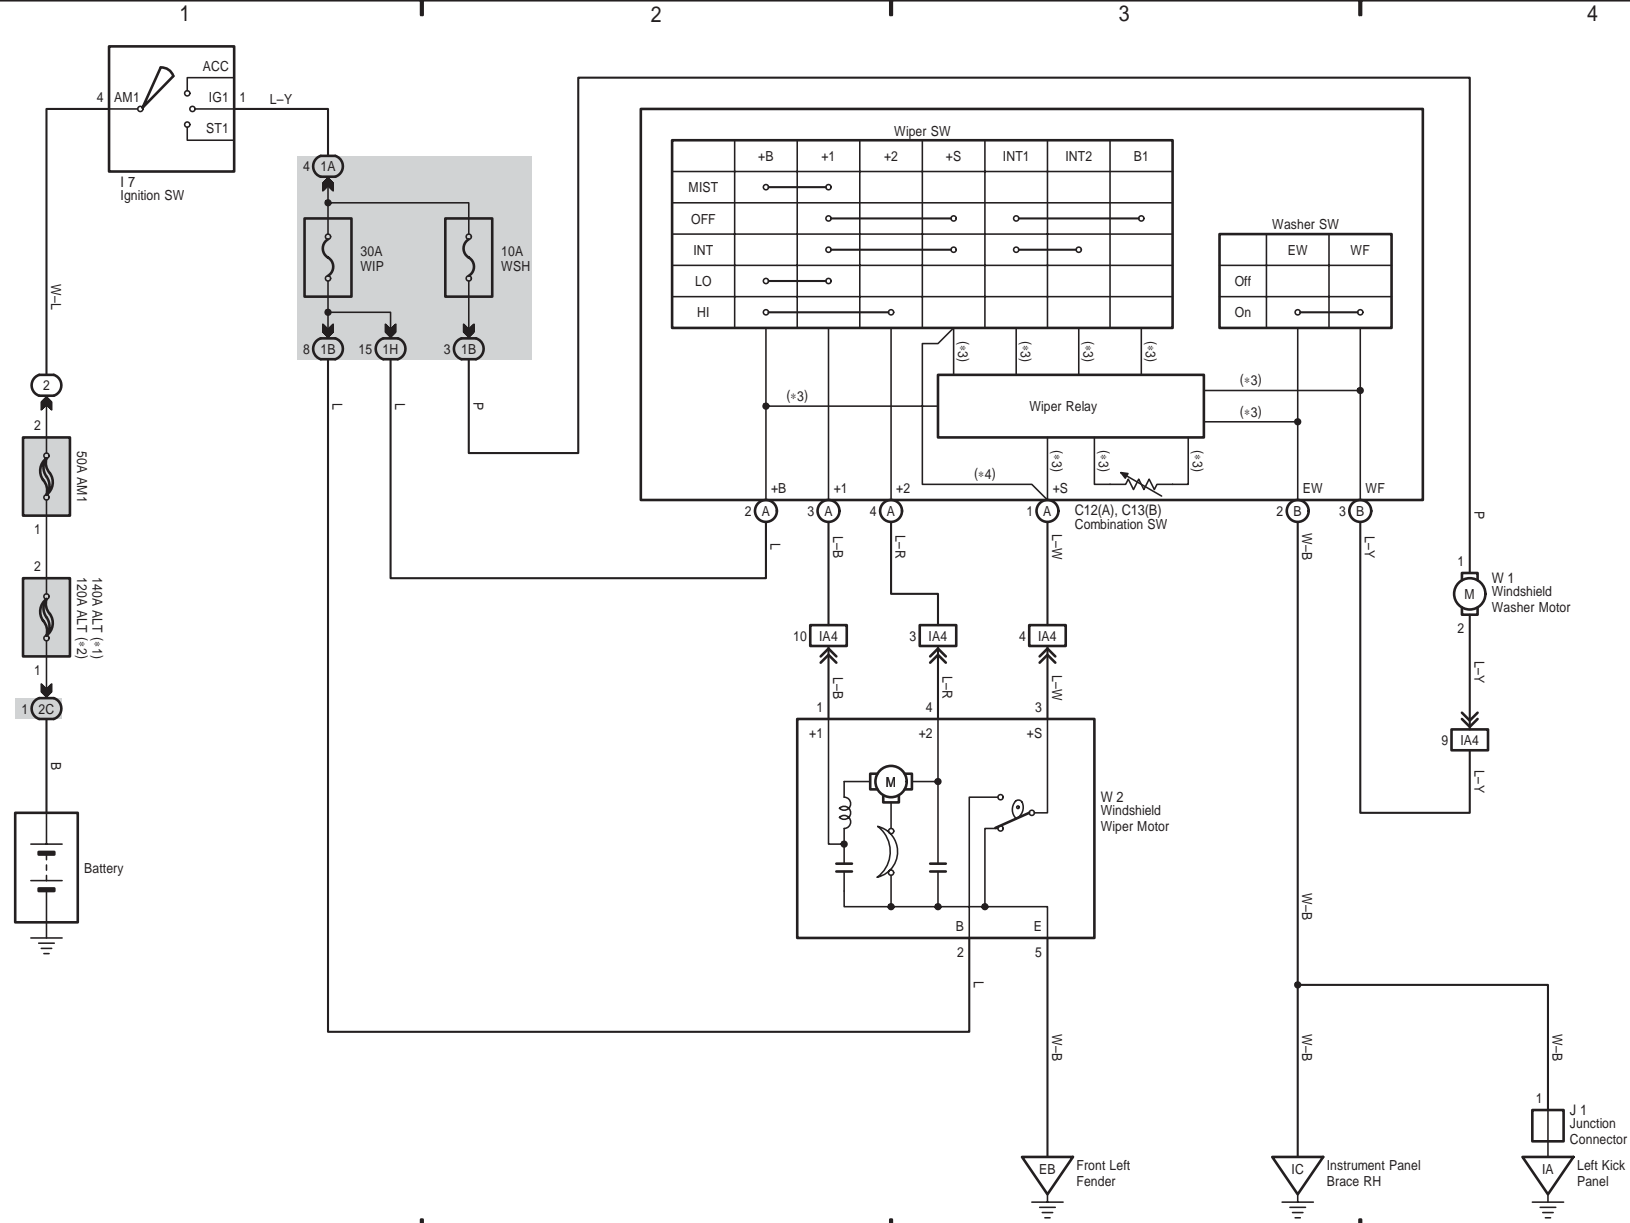

TOYOTA TACOMA (EM03N0U)




22 TOYOTA TACOMA

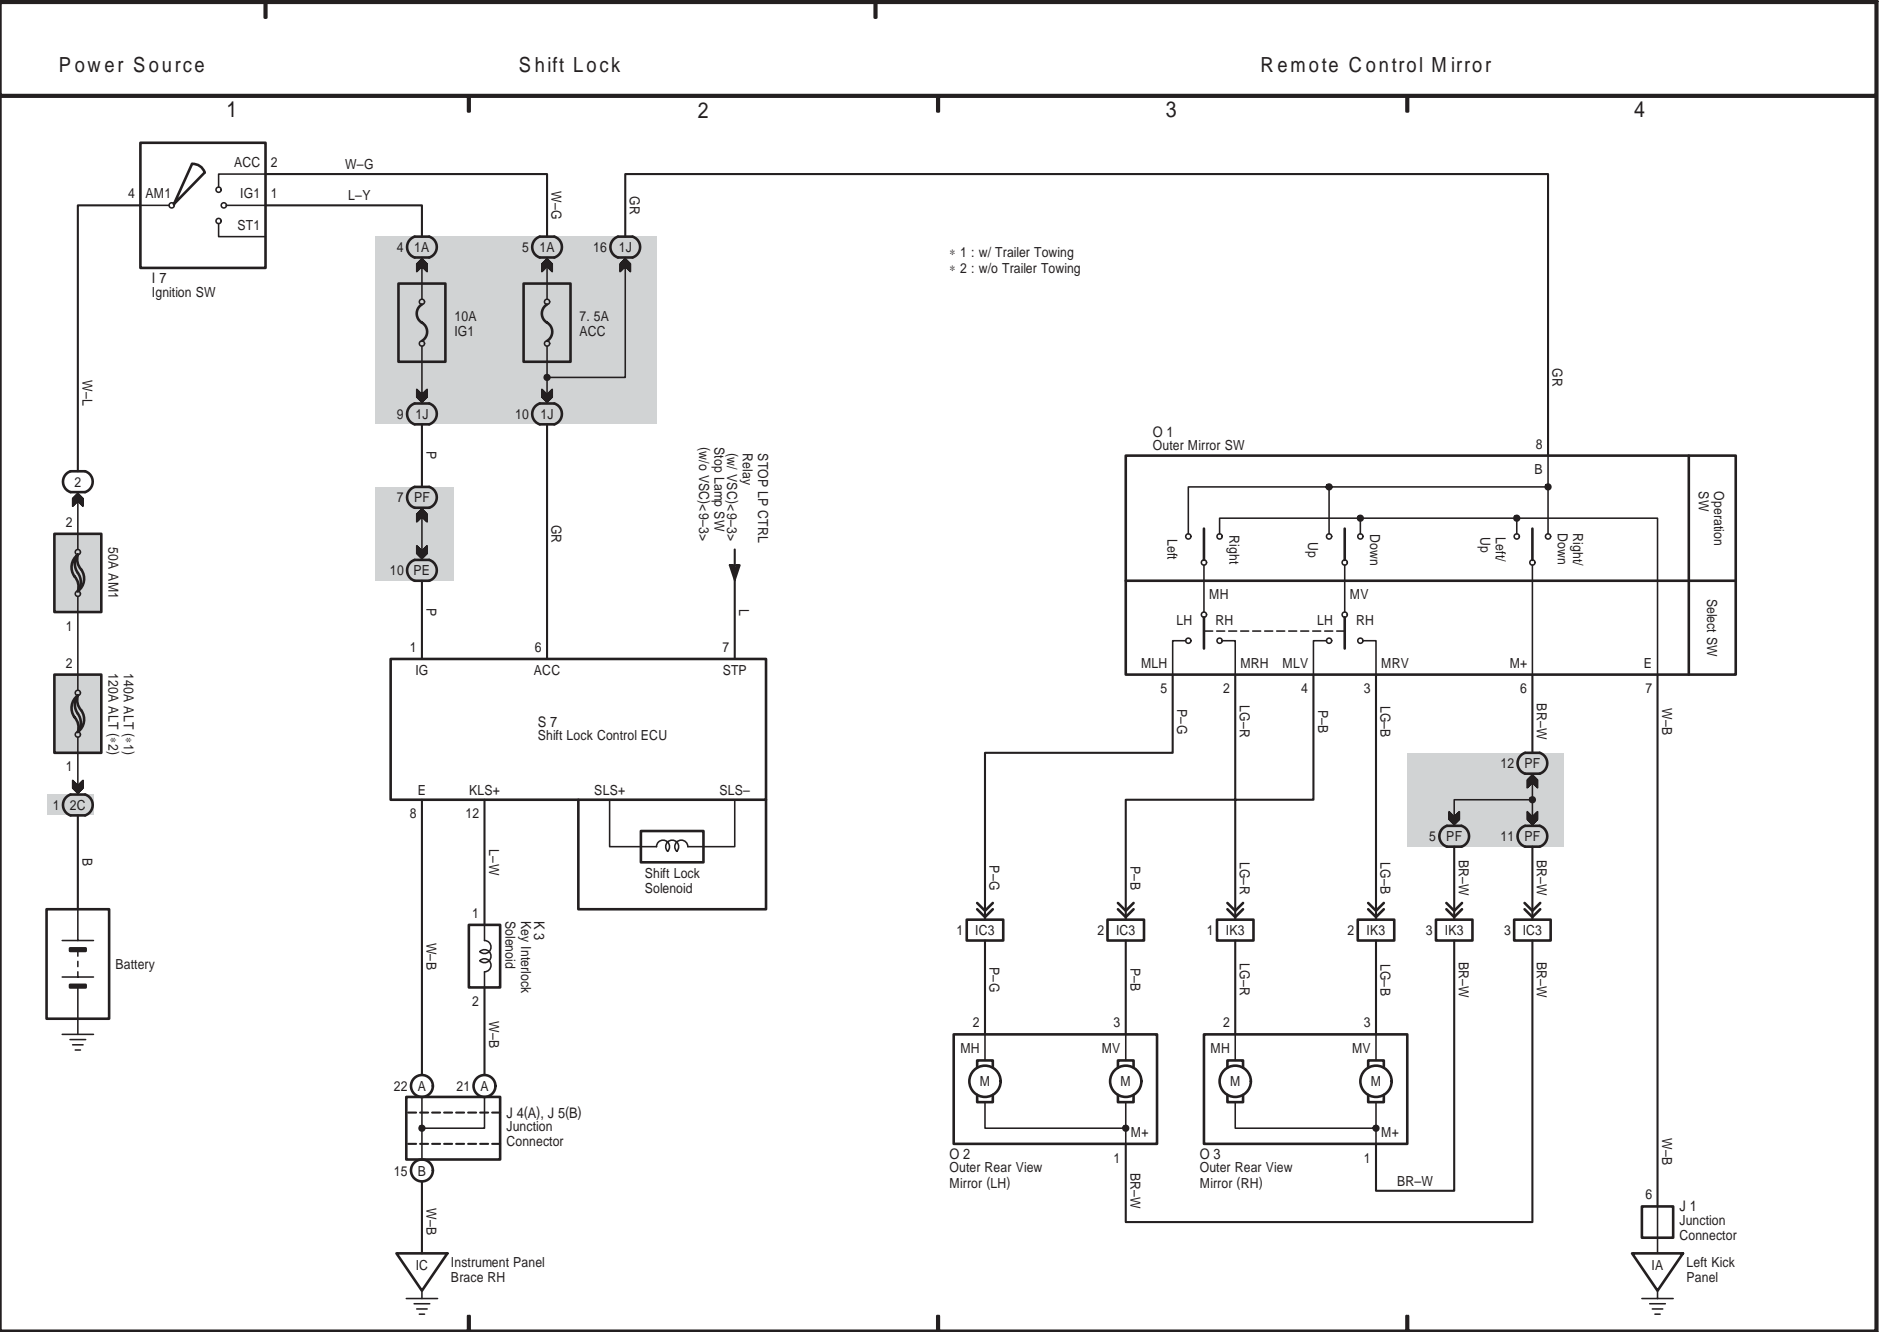

23 TOYOTA TACOMA

TOYOTA TACOMA (EM03N0U)

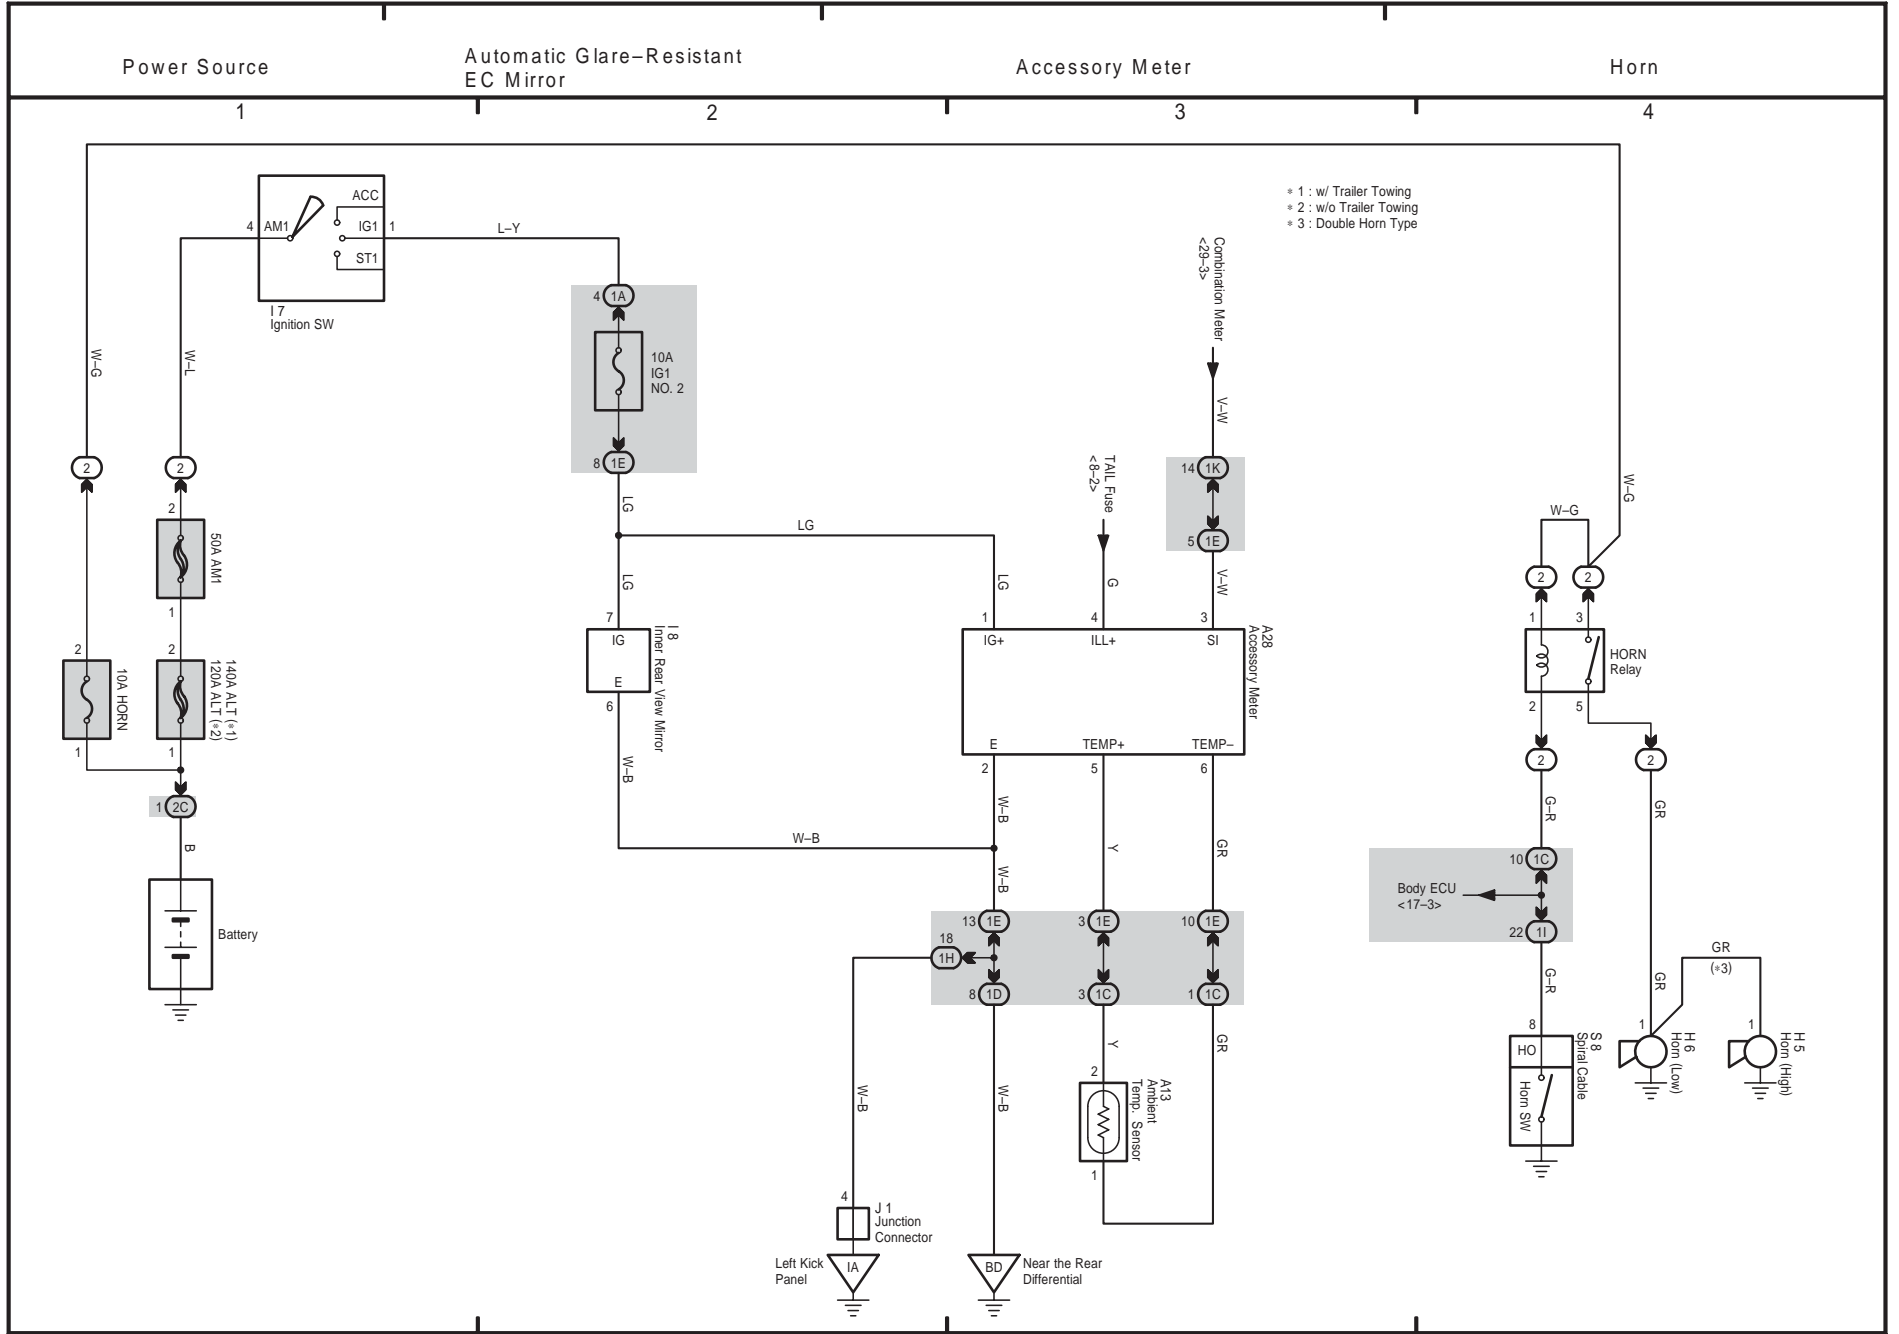


M OVERALL ELECTRICAL WIRING DIAGRAM

24 TOYOTA TACOMA


360


TOYOTA TACOMA (EM03N0U)

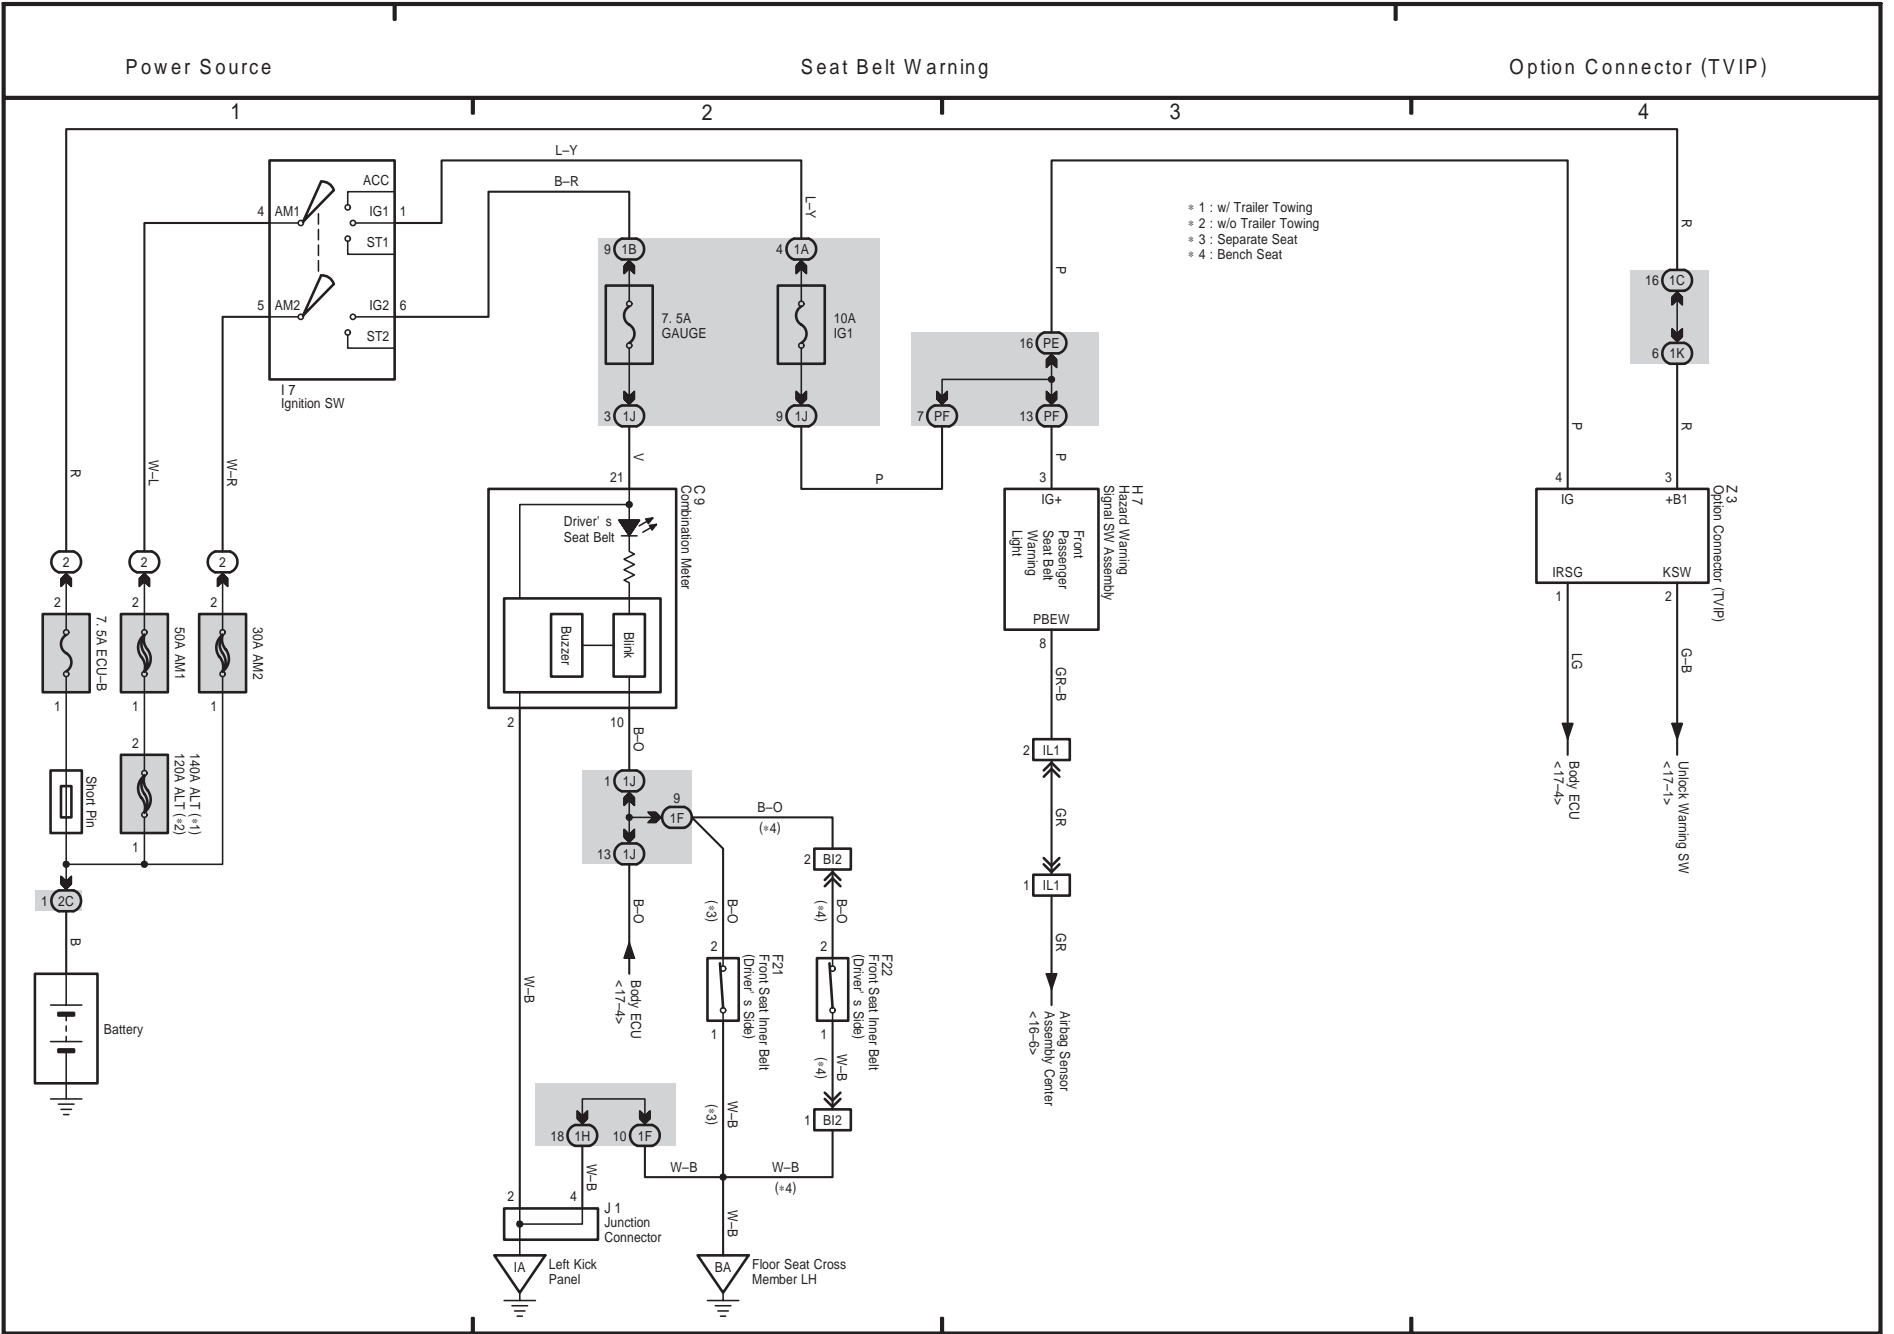

25 TOYOTA TACOMA


TOYOTA TACOMA (EM03N0U)

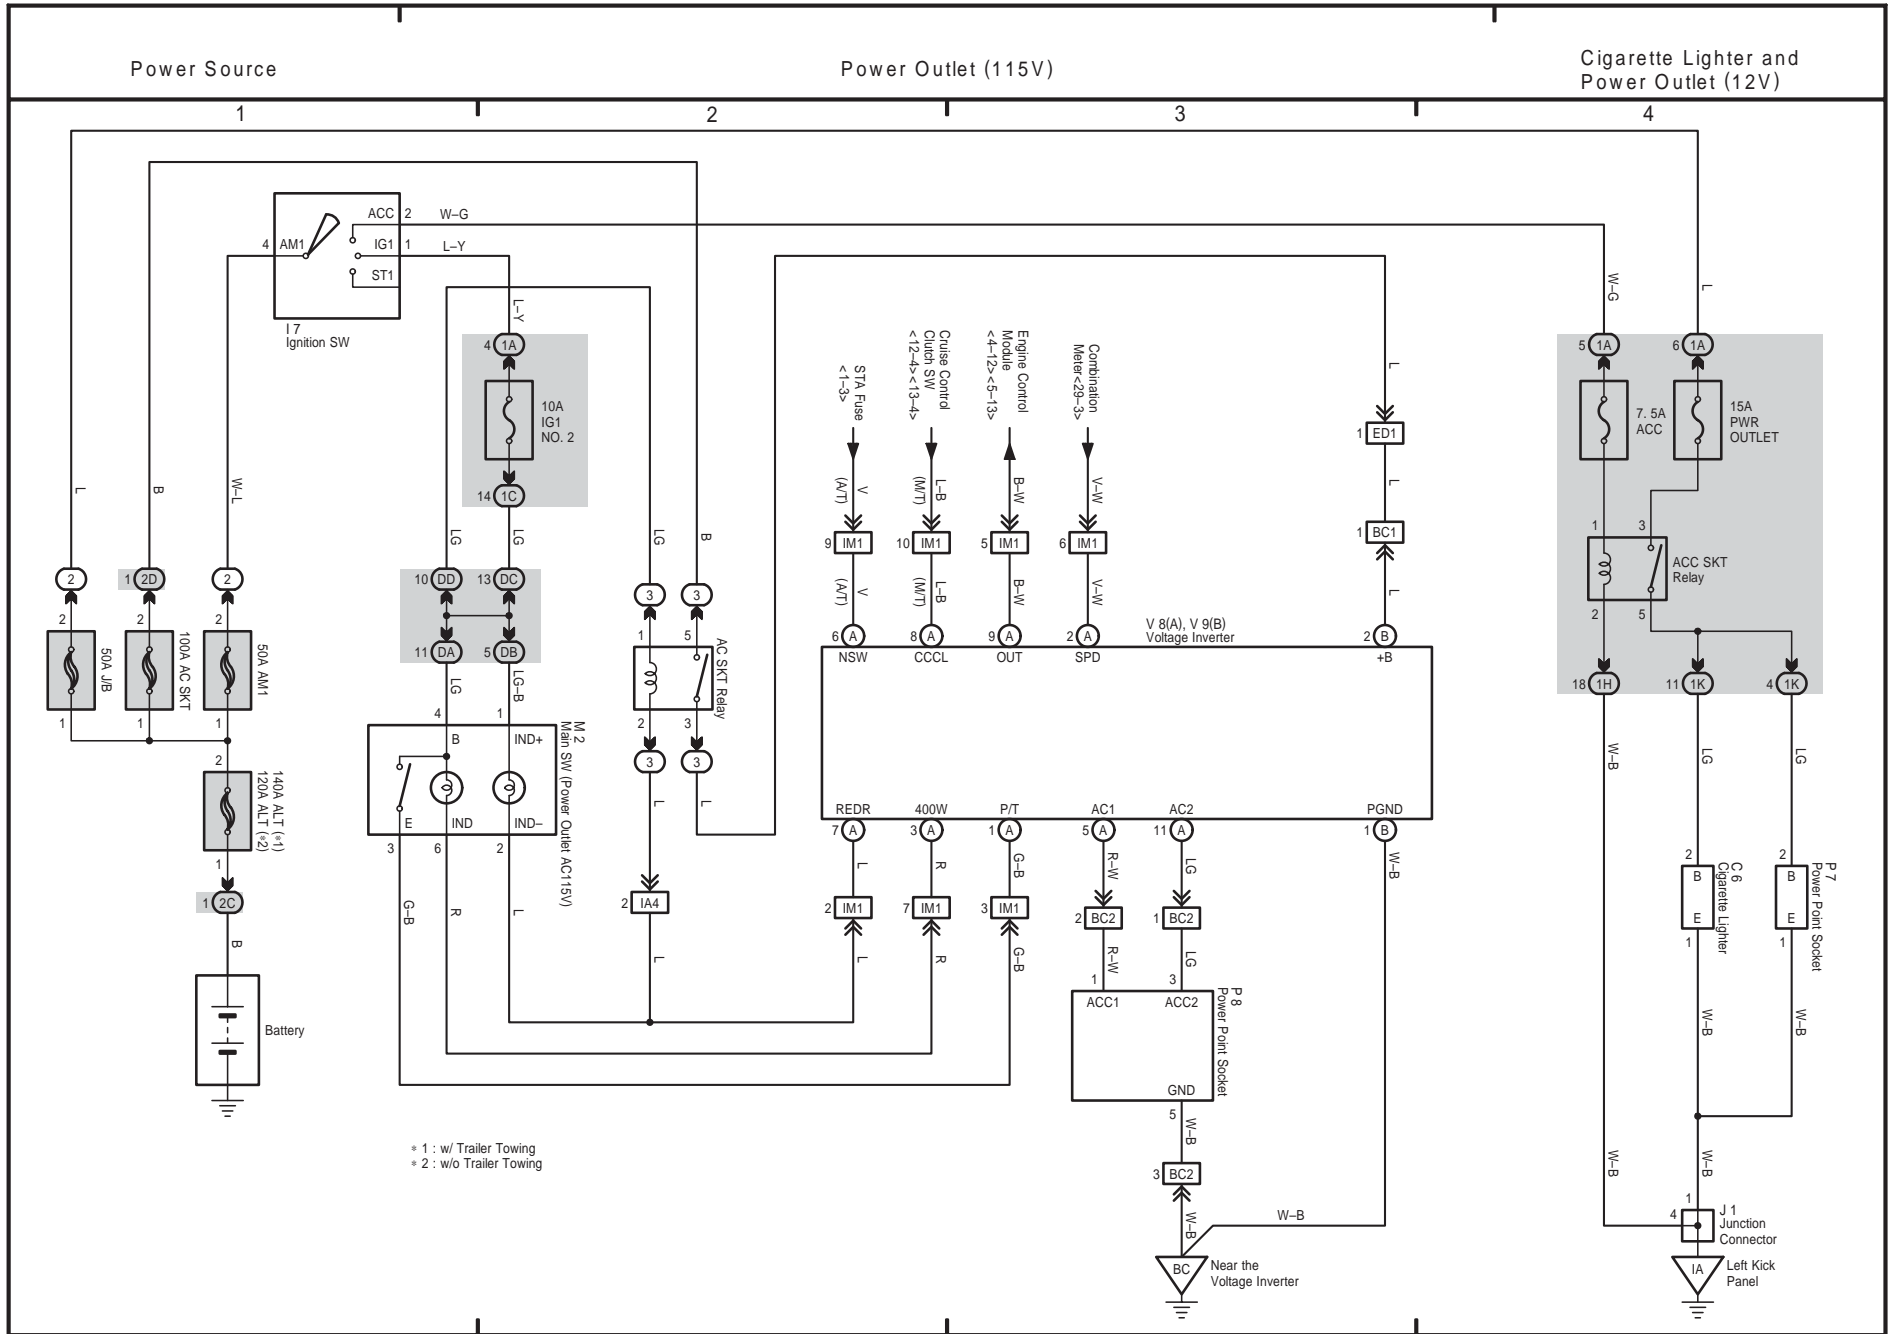

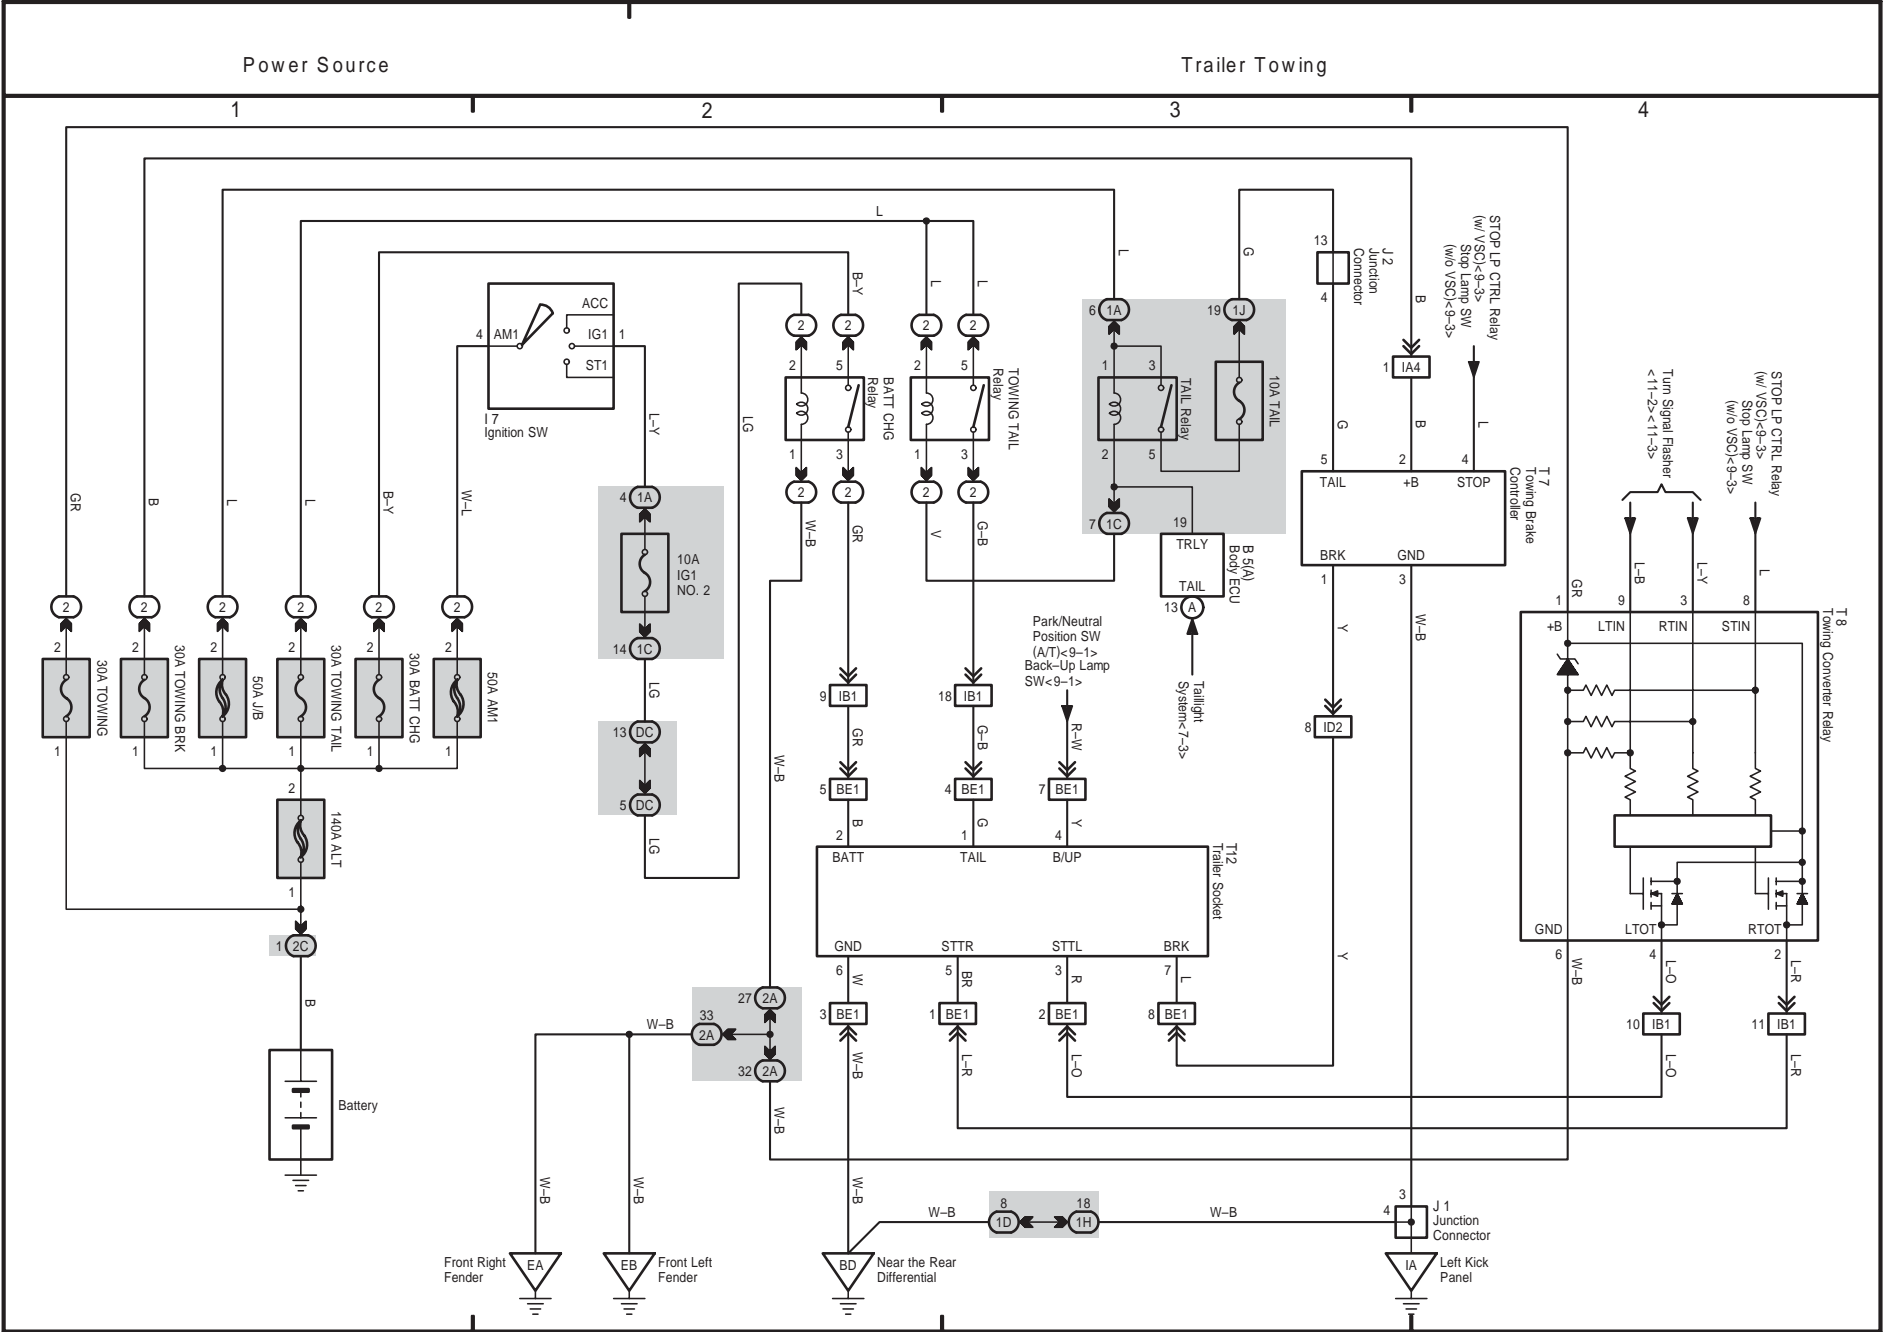


27 TOYOTA TACOMA


TOYOTA TACOMA (EM03N0U)

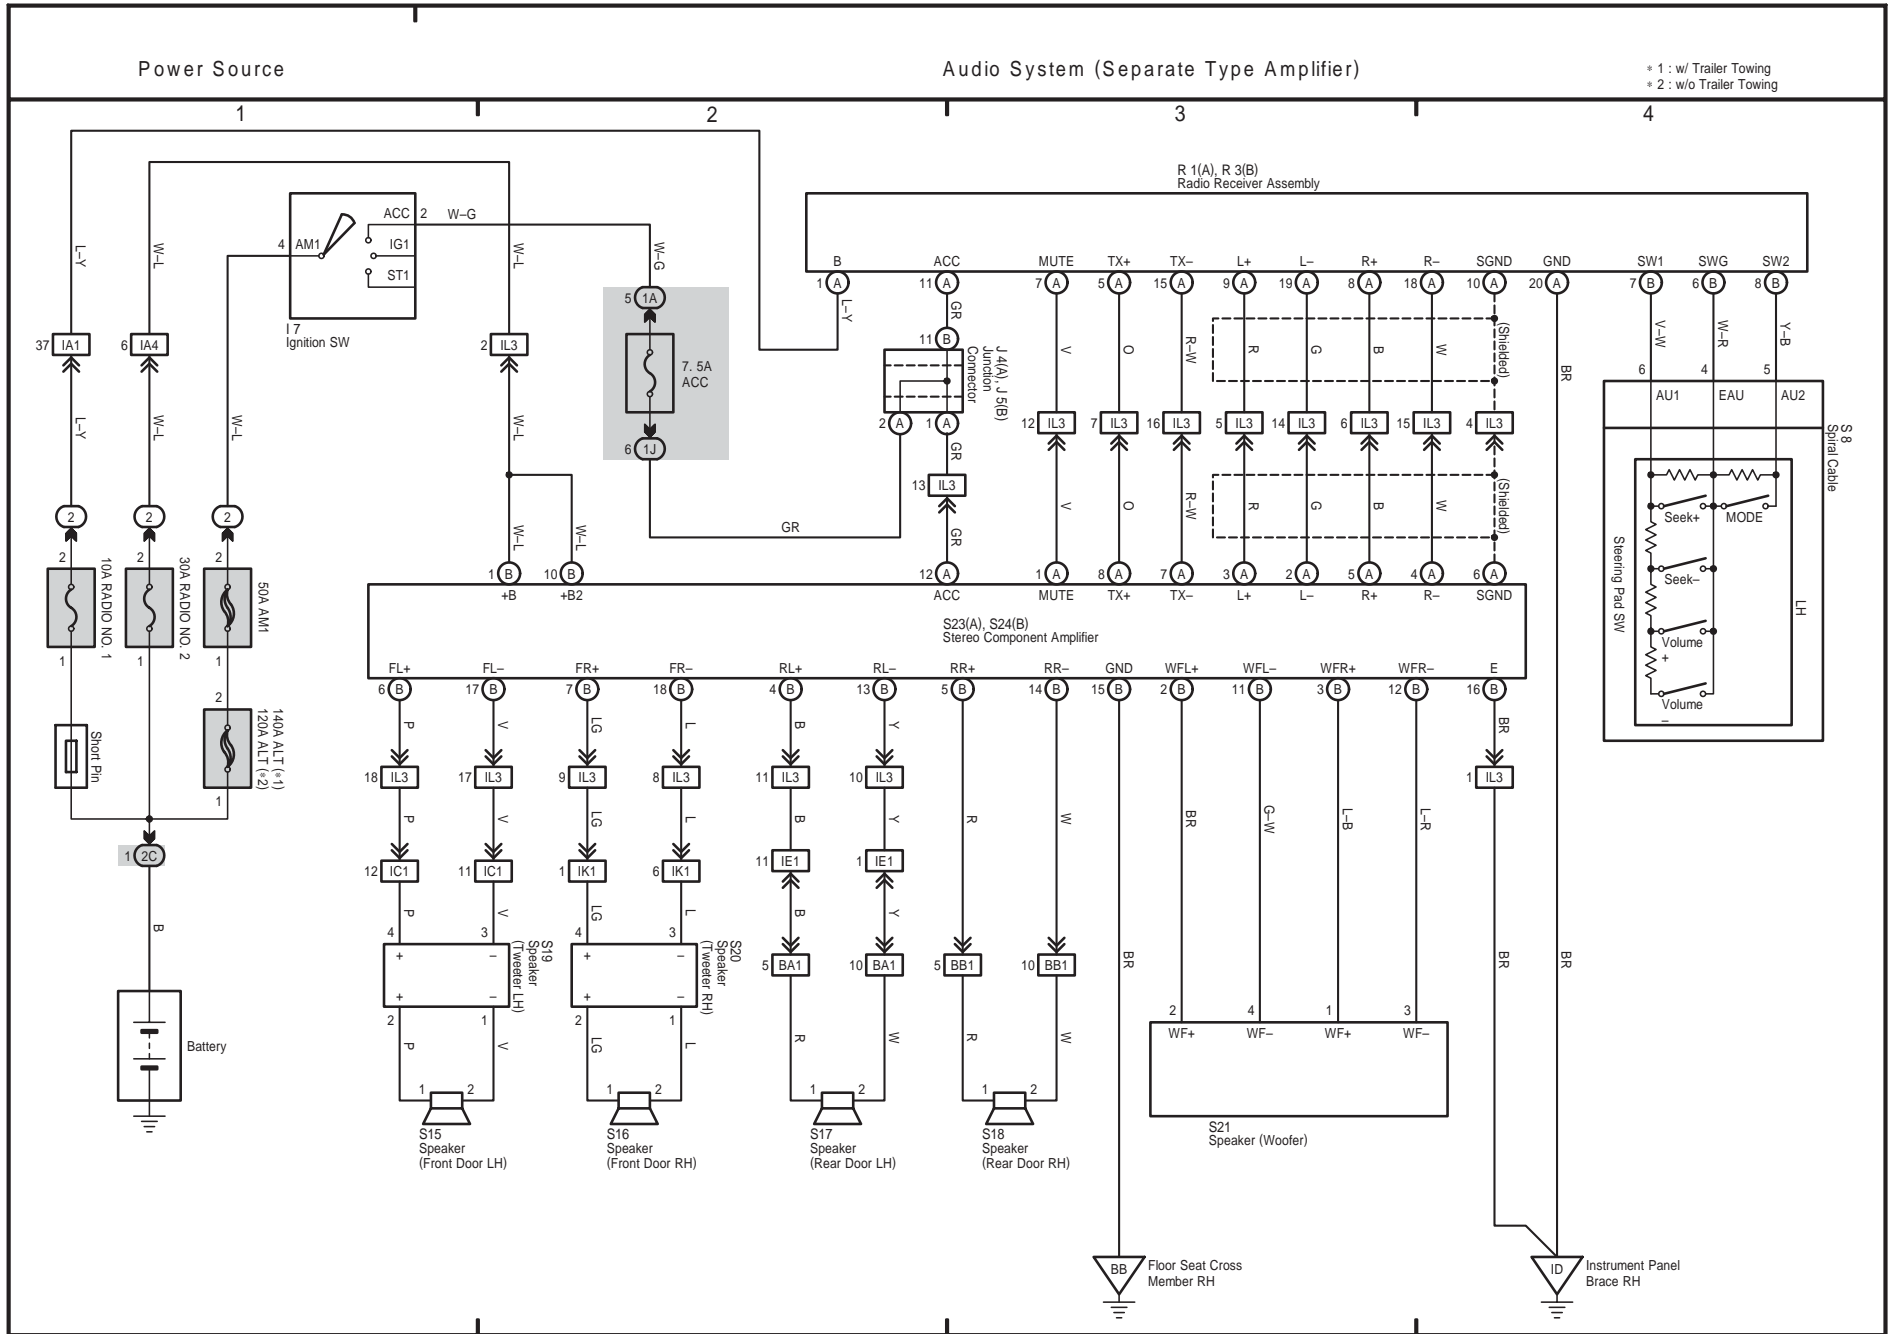

28 TOYOTA TACOMA


OVERALL ELECTRICAL WIRING DIAGRAM

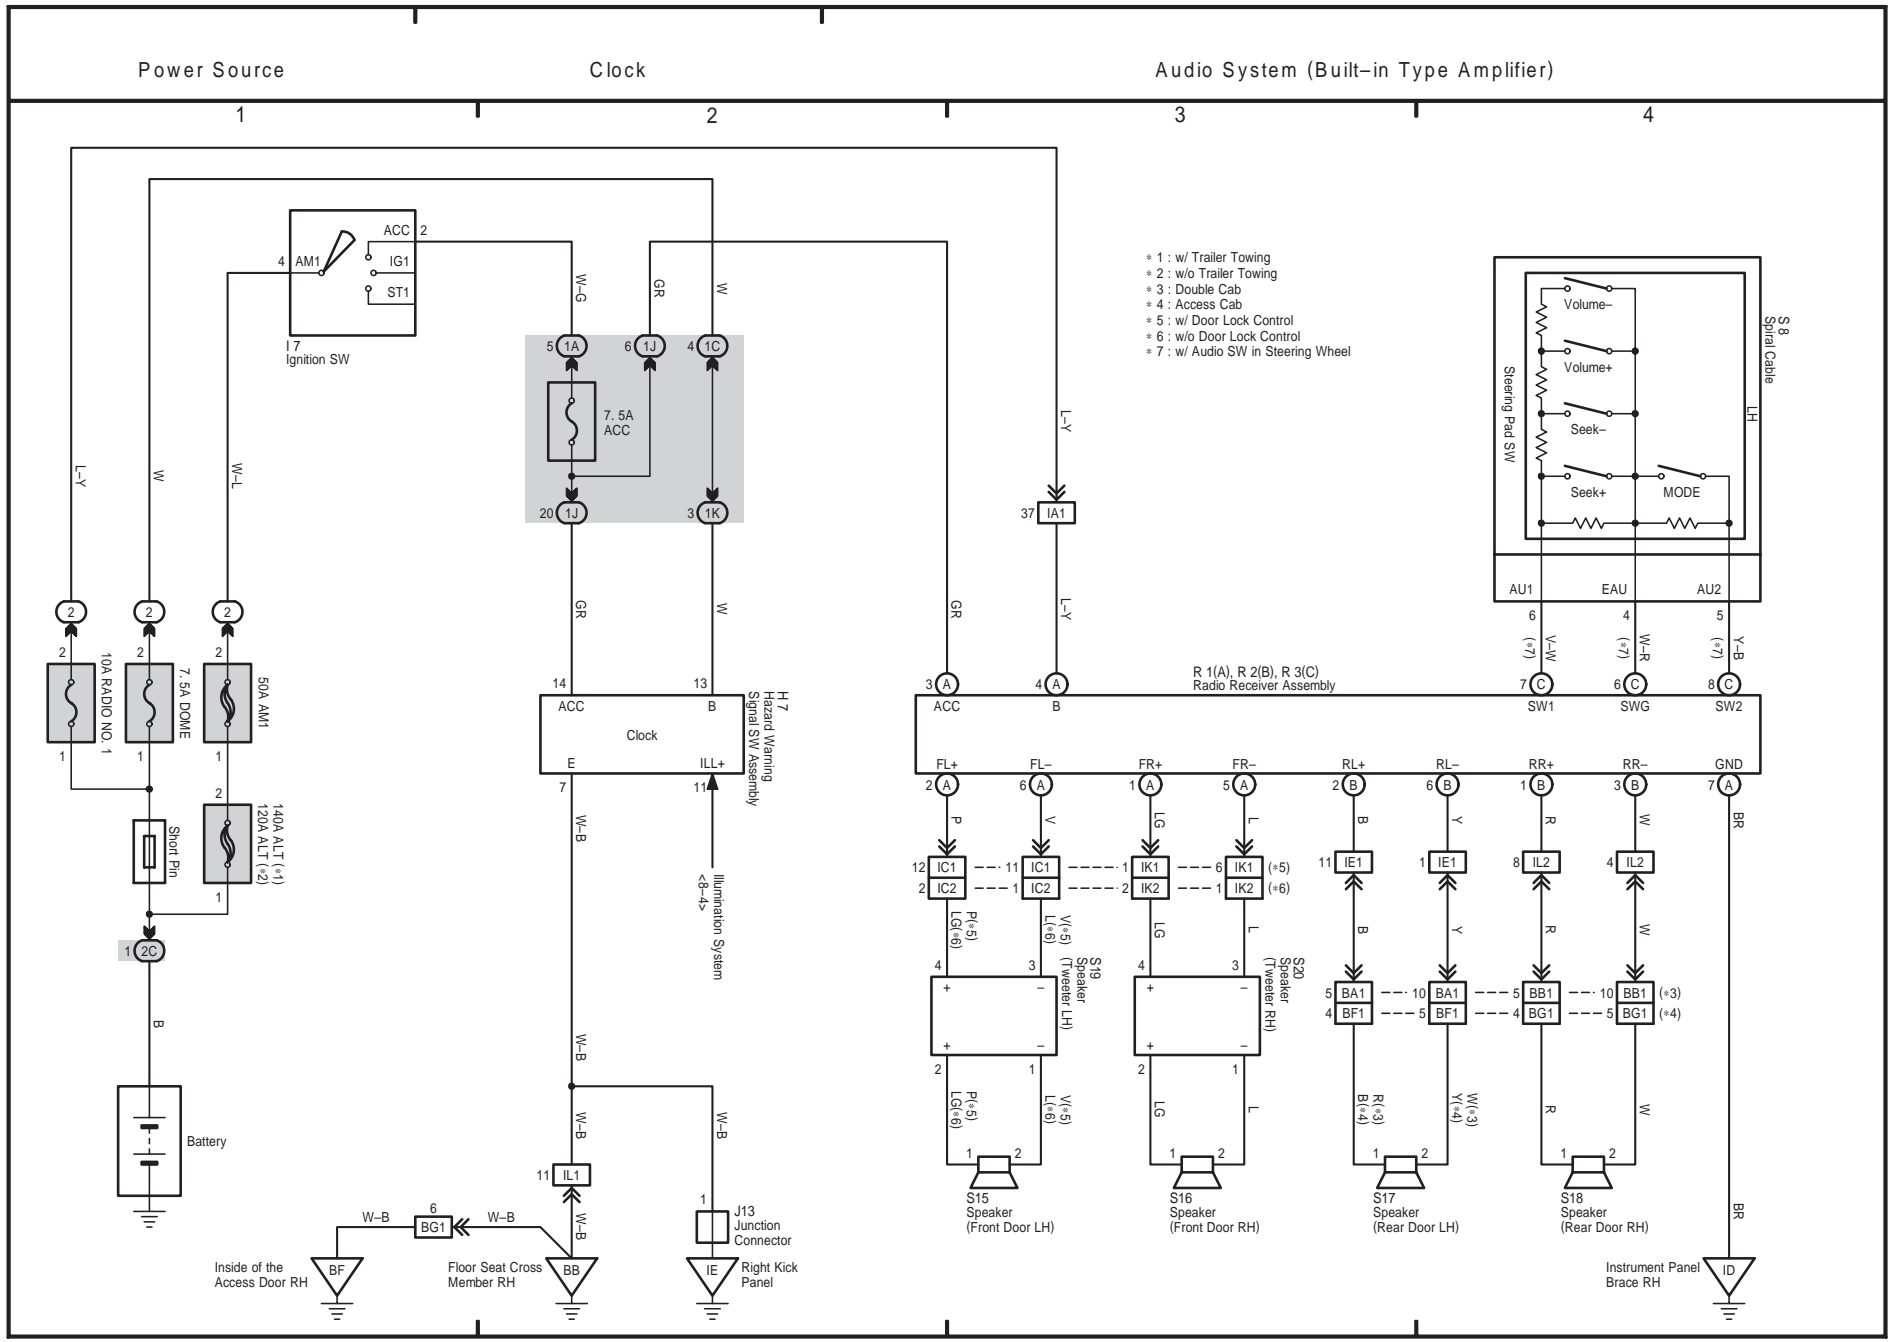

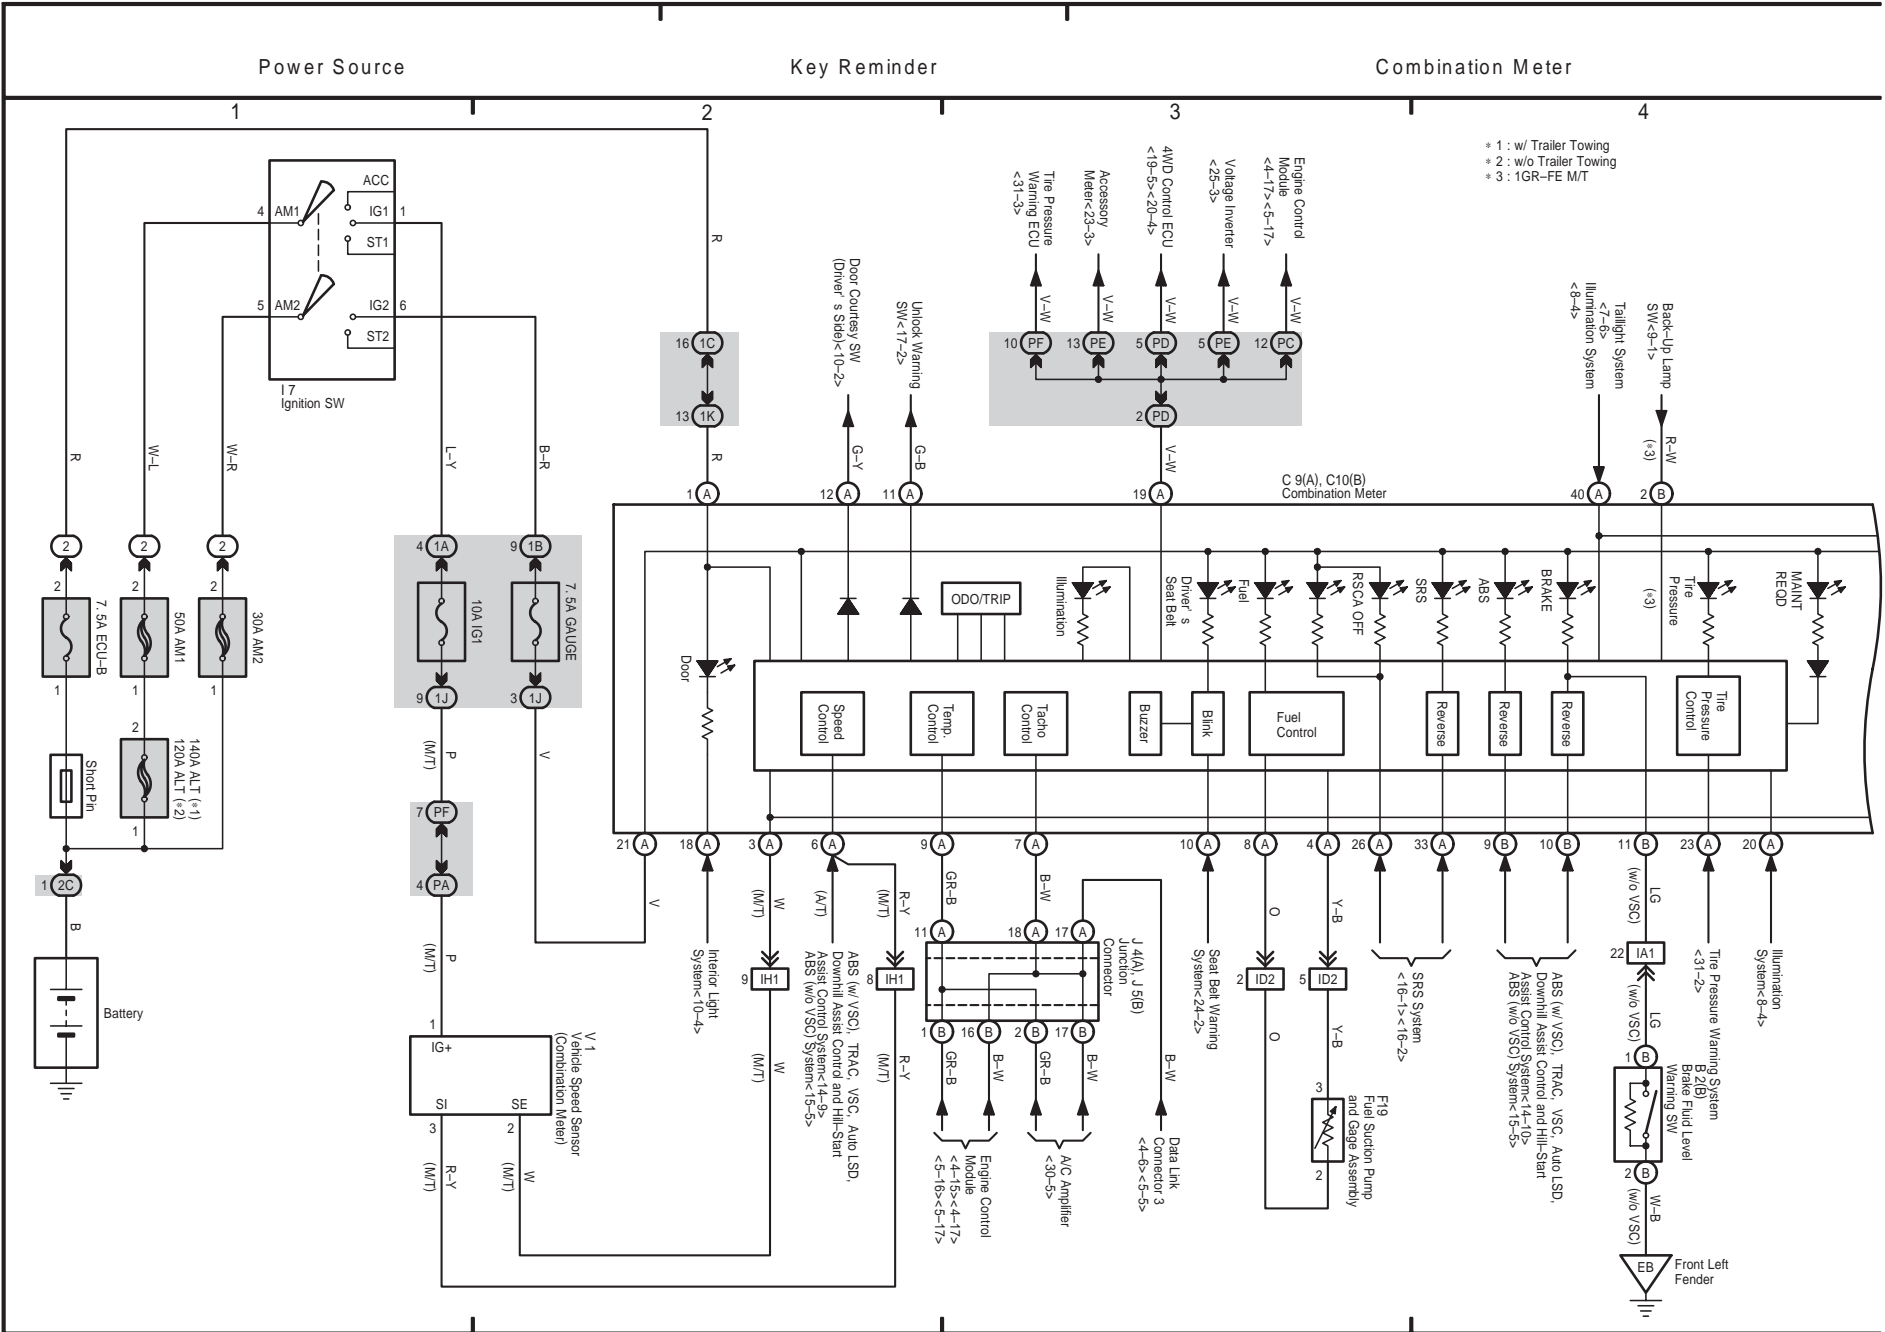


* 4 : 1GR-FE AT
 * 5 : 2TR-FE AT
 * 6 : USA
 * 7 : Canada

Combination Meter

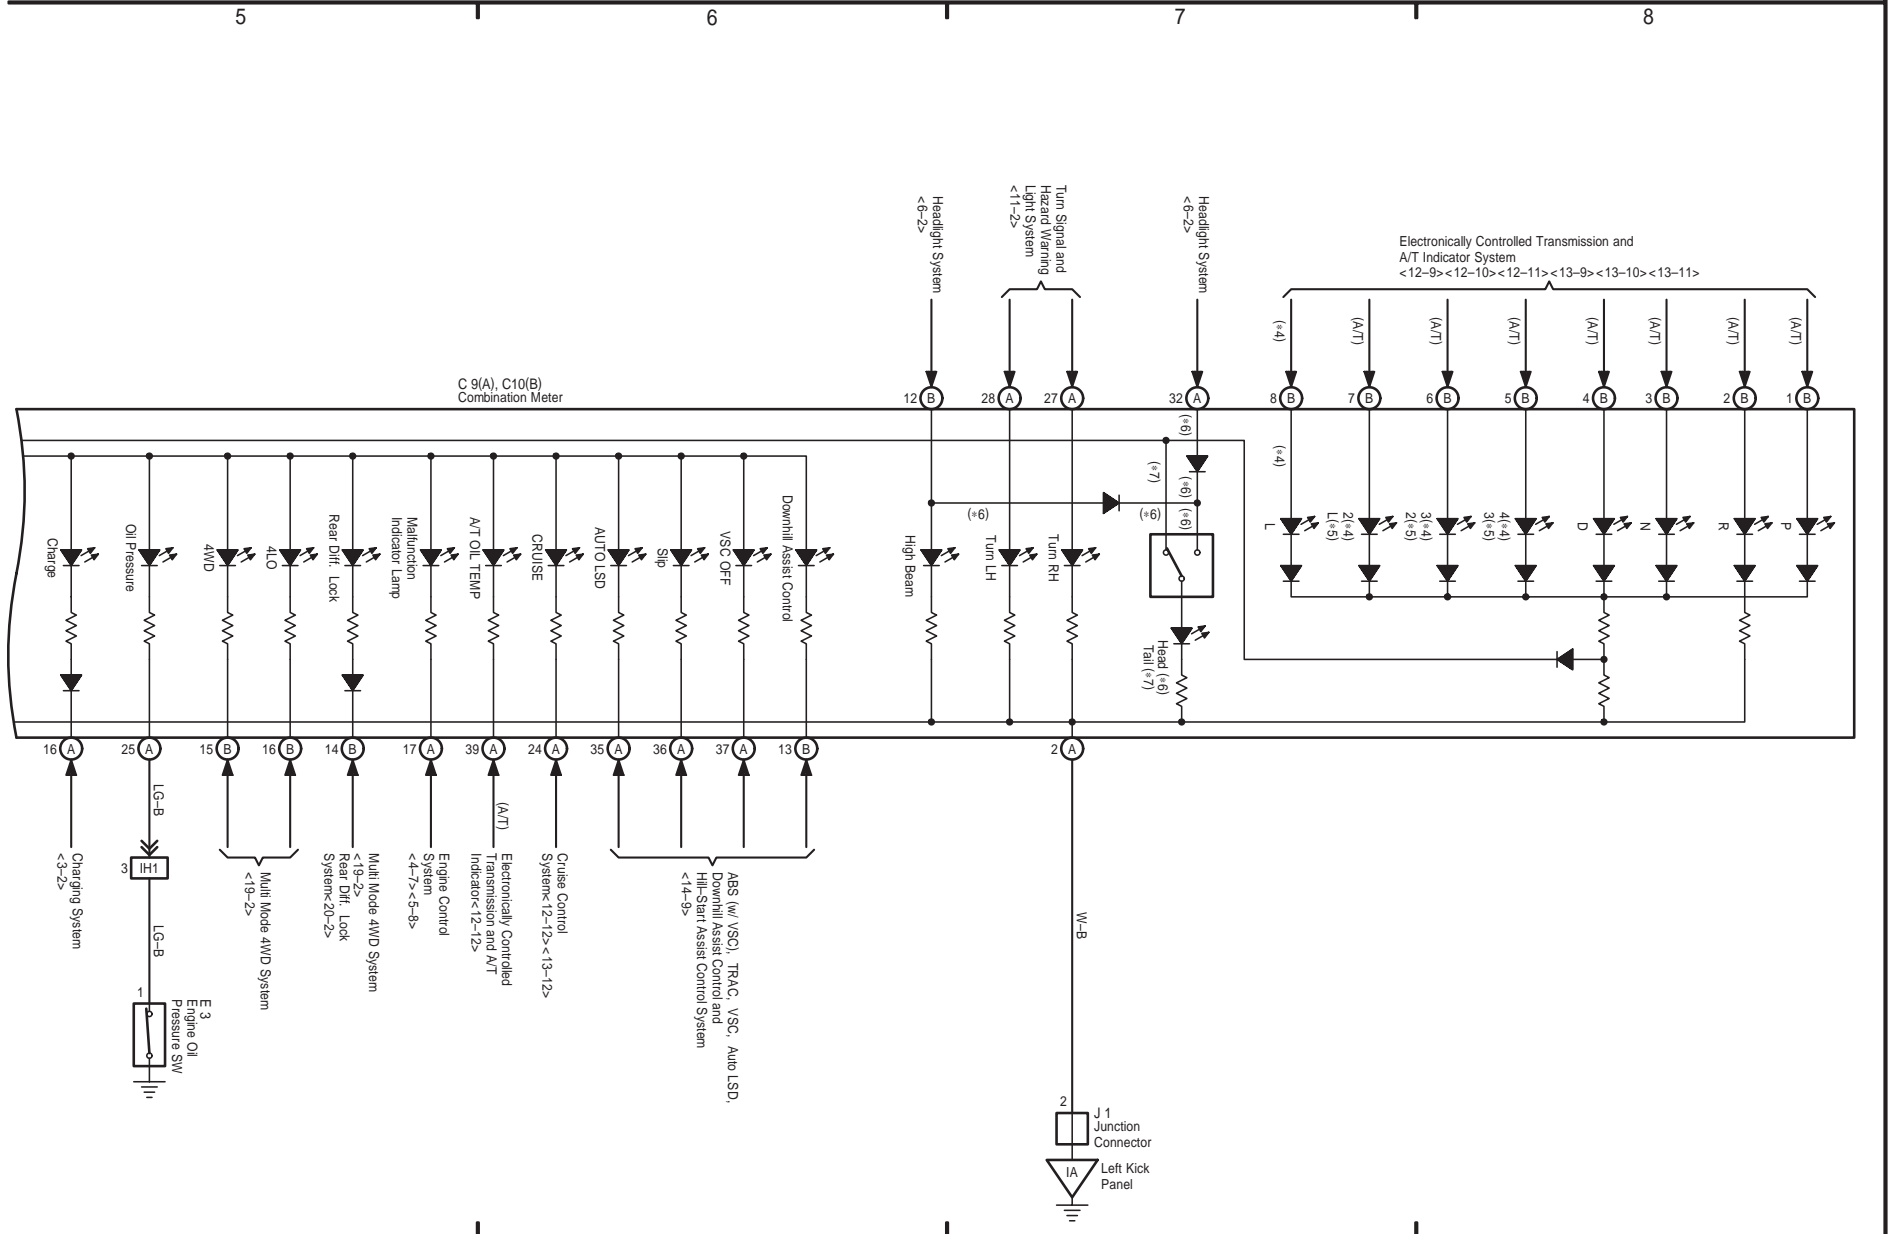


TOYOTA TACOMA (EM03N0U)



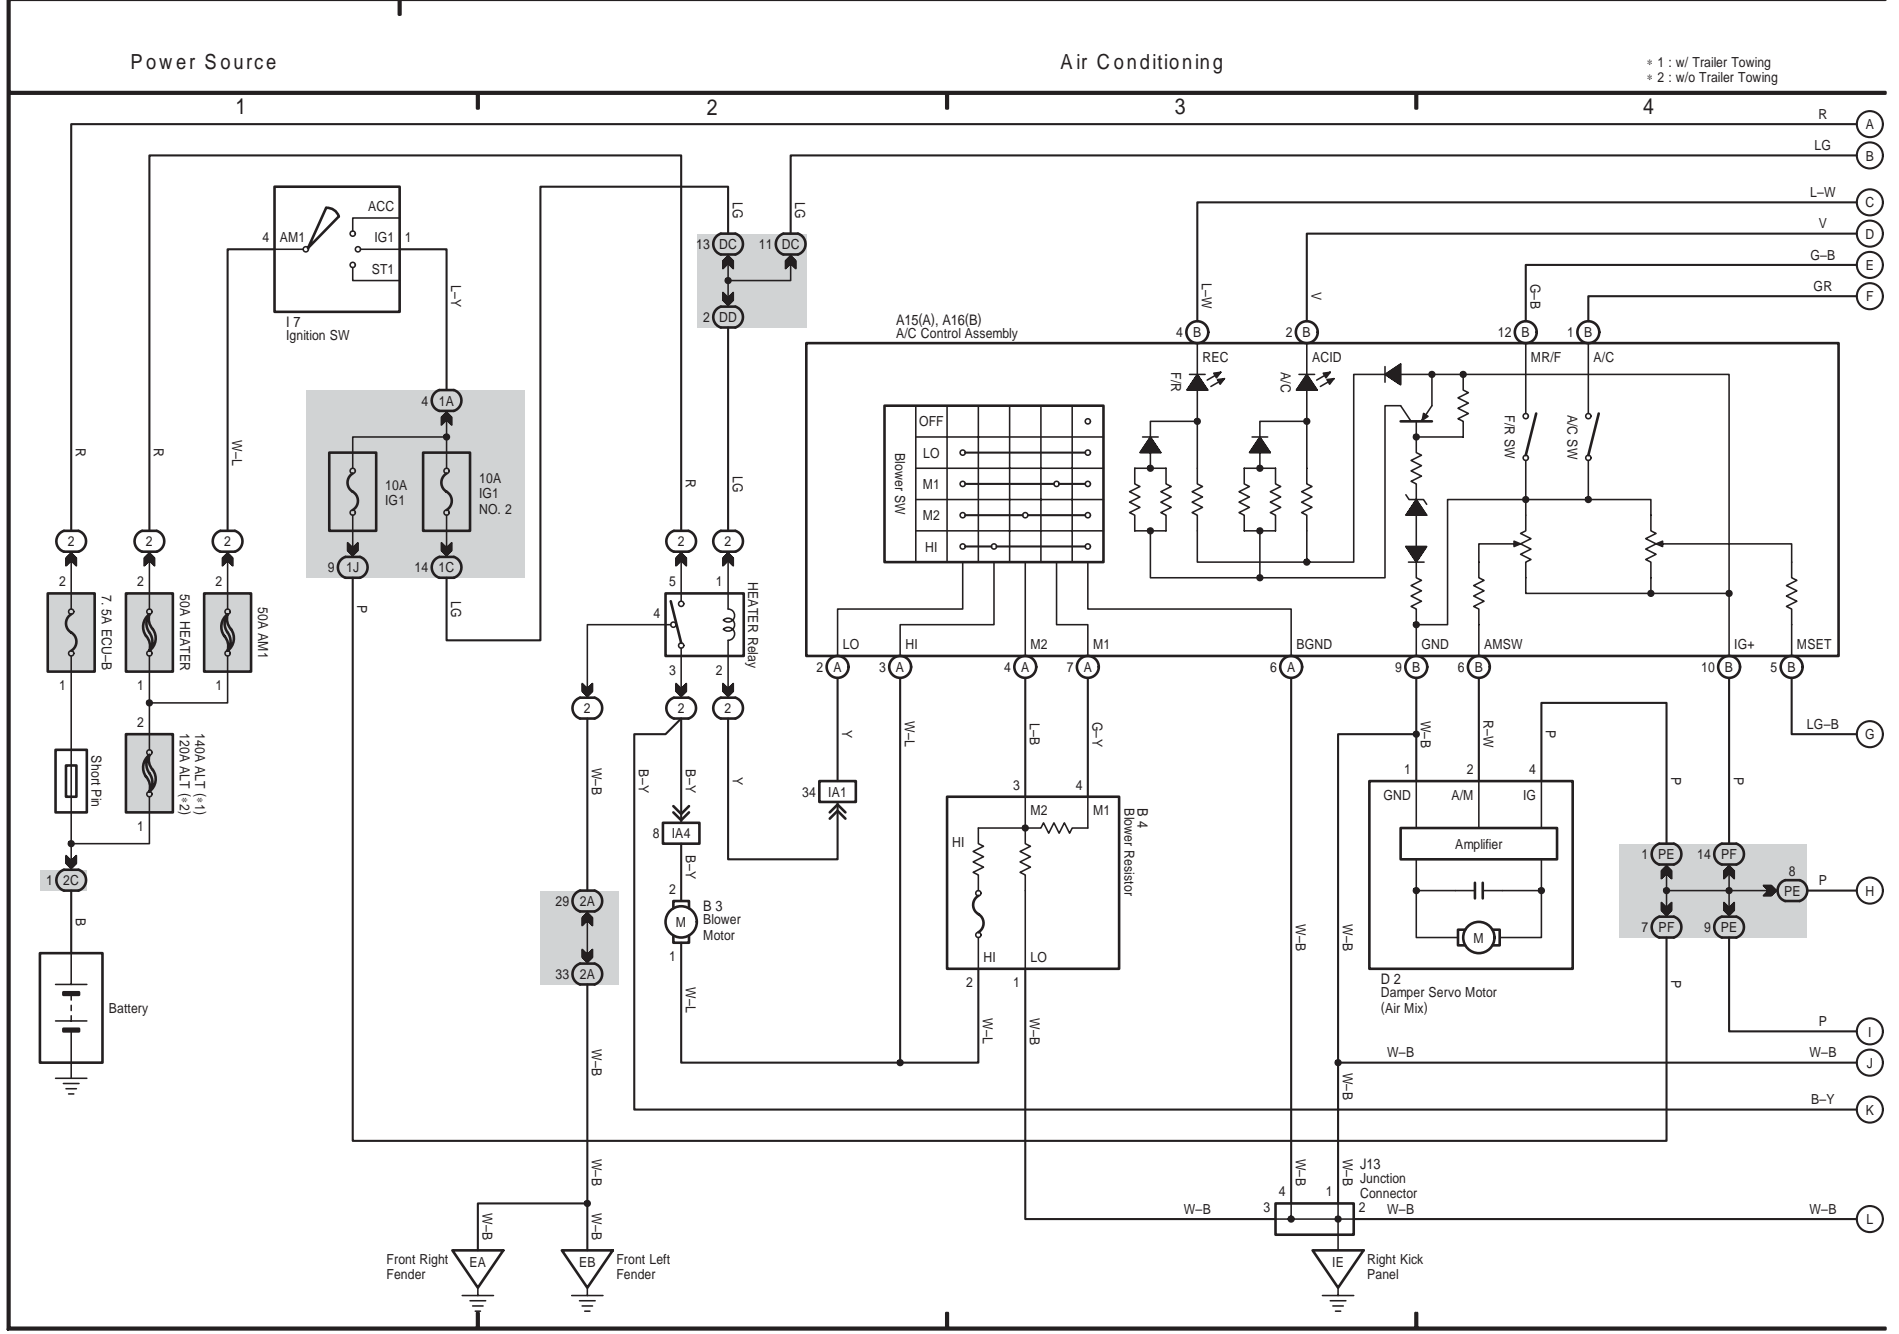

Air Conditioning

* 3 : w/ Accessory Meter

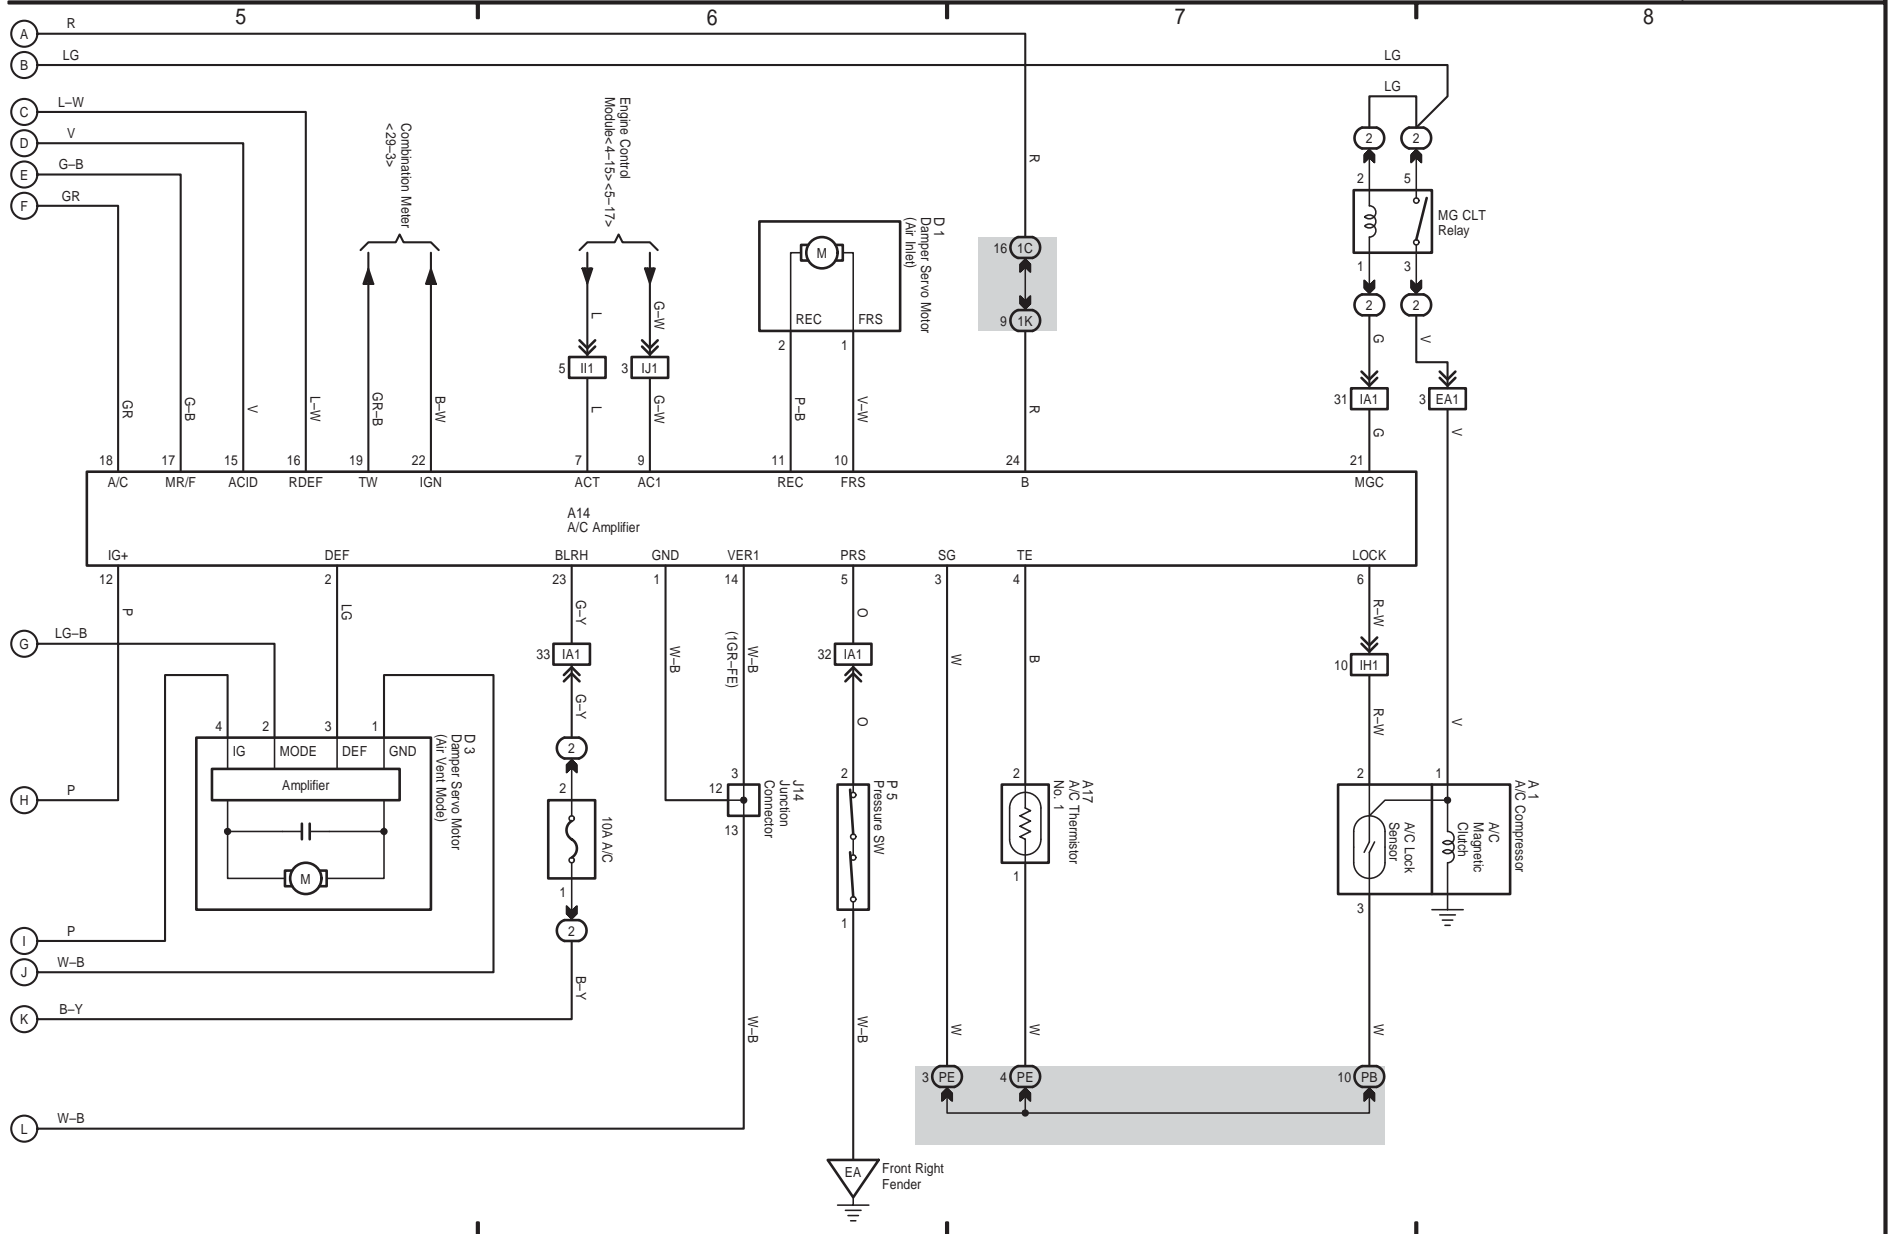

TOYOTA TACOMA (EM03N0U)

31 TOYOTA TACOMA

